

[Manuals.plus](#) /

> [Akunbem](#) /

> Akunbem 2-in-1 Women Electric Shaver ER608 Instruction Manual

Akunbem ER608

Akunbem 2-in-1 Women Electric Shaver Instruction Manual

Model: ER608

INTRODUCTION

Thank you for choosing the Akunbem 2-in-1 Women Electric Shaver. This device is designed for efficient and comfortable hair removal, featuring a dual-head system for versatility and suitability for both wet and dry use. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

IMPORTANT SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the device:

- **Do not use the shaver while charging.**
- Exercise caution when using the shaver in or near water. Ensure the charging port is completely dry before connecting any charging cable.
- Always hold the shaver at a safe distance from your skin to avoid cuts or irritation. Apply gentle pressure.
- Replace the heads carefully to prevent injury. Ensure the device is off before changing heads.
- Clean the shaver after each use and store it properly to prevent bacterial growth and maintain hygiene.
- This product is intended for personal use only.

PRODUCT OVERVIEW

The Akunbem ER608 is a compact and versatile electric shaver featuring a dual-head system. It includes a precision foil shaver head and a trimmer head, designed for various hair removal needs.



This image displays the precision foil head of the Akunbem ER608 electric shaver, designed for smooth hair removal. The head features multiple small blades under a protective foil, ensuring close contact with the skin while minimizing irritation.

Key Features:

- **Dual-Head Design:** Includes a shaver head and a trimmer head for comprehensive grooming.
- **Wet & Dry Use:** Suitable for use in the shower or on dry skin.
- **Replaceable Heads:** Ensures long-lasting performance and hygiene.
- **Cordless Operation:** Provides convenience and portability.

SETUP

1. Initial Charging

Before first use, fully charge the shaver. Connect the charging cable to the shaver's charging port and plug it into a suitable power source. The charging indicator (if present) will show the charging status. A full charge typically takes [X hours - *information not provided, user should refer to product packaging*].

2. Attaching/Detaching Heads

1. To attach a head: Align the desired head (shaver or trimmer) with the shaver body and gently twist or push until it clicks into place.
2. To detach a head: Ensure the shaver is off. Grip the head firmly and twist or pull it off the shaver body.

OPERATING INSTRUCTIONS

General Use

- Press the power button to turn the shaver on.
- For best results, ensure your skin is clean. For wet use, apply shaving cream or gel.
- Hold the shaver at a 90-degree angle to the skin and move it gently against the direction of hair growth.
- Do not press too hard, as this can cause irritation or reduce performance.
- Press the power button again to turn the shaver off after use.

Using the Shaver Head (Foil)

The foil shaver head is ideal for achieving a close, smooth shave on larger areas. Move the shaver in straight lines or small circular motions.

Using the Trimmer Head

The trimmer head is suitable for precise trimming and shaping, especially in sensitive areas. Use short, controlled strokes.

MAINTENANCE

Cleaning the Shaver

- After each use, turn off the shaver and detach the head.
- Rinse the shaver head under running water to remove hair and debris. For thorough cleaning, use the provided cleaning brush (if included) to brush out trapped hairs.
- Allow the head and shaver body to air dry completely before reattaching the head or storing.
- Do not use harsh chemicals or abrasive cleaners on the shaver.

Replacing Shaver Heads

For optimal performance and hygiene, it is recommended to replace the shaver heads every 6-12 months, or sooner if you notice reduced performance or damage. Replacement heads can be purchased separately from Akunbem.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery.	Charge the shaver fully.
Shaver does not turn on.	Device is charging.	Do not operate while charging. Disconnect from power source.
Poor shaving performance.	Shaver head is dirty or worn.	Clean the shaver head thoroughly. If performance does not improve, replace the head.
Skin irritation after shaving.	Incorrect technique or sensitive skin.	Ensure gentle pressure and proper angle. Consider using shaving cream for wet shaving. If irritation persists, discontinue use.

SPECIFICATIONS

Feature	Detail
Model Number	ER608
Brand	Akunbem
Power Source	Rechargeable Battery (Cordless)
Head Type	Foil Trimmer
Battery Description	Rechargeable
Color	Pink
Blade Material	Ceramic
Package Dimensions	4.53 x 2.36 x 1.42 inches
Weight	0.32 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Akunbem customer service directly. Keep your proof of purchase for any warranty claims.