



## 1.5L Air Fryer Oven

# Generic 1.5L Air Fryer Oven Instruction Manual

Model: 1.5L Air Fryer Oven

## 1. INTRODUCTION

---

Thank you for purchasing the Generic 1.5L Air Fryer Oven. This appliance is designed to provide a healthier alternative to traditional frying, allowing you to cook a variety of foods with little to no oil. Please read this manual thoroughly before operation to ensure safe and efficient use of your new air fryer. Keep this manual for future reference.

The non-stick coating can make the food more complete, and the oil dripping is not greasy

Accessories are easily disassembled for easier cleaning



Image 1.1: Front view of the Generic 1.5L Air Fryer Oven, showcasing its compact design and control panel.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

### 3. PRODUCT COMPONENTS

---

The Generic 1.5L Air Fryer Oven consists of the following main components:

- Main Unit (housing with heating element and fan)
- Removable Frying Basket
- Non-stick Pan Coating Liner
- LCD Touch Control Panel
- Power Cord



Image 3.1: A hand demonstrating the removal of the frying basket from the air fryer, showing the internal non-stick components.

## 4. SETUP

---

1. **Unpacking:** Carefully remove all packaging materials from the air fryer.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the frying basket and liner with hot, soapy water. Rinse and dry thoroughly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm / 4 inches) around the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance operates on 220V, 50Hz.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Smart Touchscreen Control

The air fryer features an intelligent LCD touch control panel for easy operation. The large screen displays temperature and time, allowing for precise control. It includes multiple preset functions and an automatic power-off memory function.

# Holographic touch

Select 7 commonly used functions to achieve one-click communication, snacks, fruits and vegetables, meat all have



Image 5.1: Detailed view of the holographic touch control panel, showing temperature (80-200°C) and time (0-60 MIN) settings, along with various cooking presets.

## 5.2. Pre-heating Function

The appliance automatically enters a pre-heating process before the main cooking cycle. This ensures the cavity reaches the optimal cooking temperature for ingredients in advance, contributing to better cooking results. The display will show the real-time temperature during pre-heating.

## 5.3. General Operation

1. Place food in the frying basket. Do not overfill.
2. Slide the frying basket back into the main unit until it clicks into place.
3. Use the touchscreen to select a preset cooking program or manually set the desired temperature (80-200°C) and time (0-60 minutes).
4. Press the start button to begin cooking. The pre-heating cycle will initiate automatically.
5. During cooking, you may pull out the basket to shake or turn food for even cooking. The appliance will pause and resume when the basket is reinserted.
6. Once the cooking time is complete, the air fryer will automatically shut off. Carefully remove the basket and transfer food to a serving dish.

## 5.4. Suitable Foods

This air fryer is suitable for cooking a wide range of foods, including but not limited to: steak, poultry, seafood, bacon, frozen food, french fries, vegetables, bread, and desserts.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Frying Basket and Liner:** The fully detachable frying basket and its non-stick liner are dishwasher safe. Alternatively, they can be washed by hand with hot water and a non-abrasive sponge. Ensure all food residues are removed.
3. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or immerse the main unit in water.
4. **Interior:** If necessary, wipe the interior with a damp cloth. For stubborn residue, a small amount of mild detergent can be used.
5. **Storage:** Ensure all parts are completely dry before storing the appliance in a cool, dry place.



Image 6.1: A hand cleaning the non-stick frying basket under running water, demonstrating the ease of disassembly and cleaning.

## 7. TROUBLESHOOTING

---

If you encounter issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on	Appliance not plugged in; Power outlet not working; Basket not fully inserted.	Ensure power cord is securely plugged in; Check power outlet with another appliance; Push basket firmly until it clicks into place.
Food is not cooked evenly	Basket is overfilled; Food not shaken or turned during cooking.	Reduce food quantity; Shake or turn food halfway through cooking time.
White smoke coming from appliance	Grease residue from previous use; Fatty ingredients being cooked.	Clean the basket and liner thoroughly; For fatty foods, drain excess oil during cooking.
Food is not crispy	Too much moisture in food; Not enough oil (for certain foods).	Pat food dry before air frying; Lightly brush or spray food with oil.

## 8. SPECIFICATIONS

---

<b>Model:</b>	1.5L Air Fryer Oven
<b>Brand:</b>	Generic
<b>Capacity:</b>	1.5 Liters
<b>Power:</b>	1230W
<b>Voltage:</b>	220V
<b>Rated Frequency:</b>	50Hz
<b>Net Weight:</b>	2.67 kg
<b>Control Type:</b>	LCD Touch
<b>Dimensions (L x W x H):</b>	23.2 x 30 x 32 cm (9.1 x 11.8 x 12.6 inches)
<b>Liner Material:</b>	Non-stick pan coating

## 9. WARRANTY AND SUPPORT

---

This product comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

For warranty claims or technical support, please contact your retailer or the manufacturer directly. Please have your purchase receipt and product model information available when contacting support.

