

5L Digital Air Fryer

Generic 5L Digital Air Fryer Instruction Manual

Model: 5L Digital Air Fryer

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- The appliance is equipped with a child lock design. Press to open the basket.
- The appliance features a power-off memory function. When the basket is removed, the unit will automatically power off. It will resume operation upon reinsertion of the basket.

PRODUCT OVERVIEW

The Generic 5L Digital Air Fryer is designed for efficient and healthy cooking. It features a 5-liter capacity, 1500W power, LED touchscreen, and a non-stick detachable basket for easy cleaning. The dual-knob control allows for precise temperature and time adjustments.



Image: Front view of the air fryer, highlighting its dimensions (height 405mm, depth 330mm, width 375mm).



Back vents

Insulation silicone



Non-slip foot pad

Image: Close-up showing the back vents for heat dissipation, insulation silicone for safety, and non-slip foot pads for stability.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, clean the frying basket and pan with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Ensure all parts are completely dry before assembly.

3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm / 4 inches) around the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance operates on 220V.

OPERATING INSTRUCTIONS

Basic Operation

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the air fryer until it clicks into place.
3. **Power On:** The LED touchscreen will illuminate.
4. **Set Temperature and Time:** Use the two control knobs to set the desired cooking temperature (80-200°C) and cooking time (0-60 minutes).
5. **Start Cooking:** The air fryer will begin the cooking process, circulating 1500W high-efficiency hot air.
6. **Check Food (Power-off Memory):** To check food during cooking, carefully pull out the frying basket. The appliance will automatically pause operation. Reinsert the basket to resume cooking with the previously set parameters.
7. **Child Lock:** The basket features a child lock design. Press the release button to detach the basket from the main unit.
8. **Completion:** Once the timer expires, the air fryer will beep and automatically shut off. Carefully remove the basket and transfer the cooked food.



Image: The air fryer in operation, with the basket containing french fries partially pulled out.



Image: An internal view illustrating the 1500W high-efficiency hot air circulation technology cooking fried chicken.



Image: Cooked fried chicken resting on the air fryer rack, demonstrating how excess oil drips away for healthier results.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket and Pan:** The non-stick frying basket and pan are detachable for easy cleaning. Wash them with warm water and a mild dish soap. Use a non-abrasive sponge or cloth to avoid damaging the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Clean Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Ensure no water enters the electrical components.
5. **Storage:** Ensure all parts are dry before storing the appliance. Store in a cool, dry place.



Image: A user demonstrating the ease of cleaning the detachable non-stick basket and rack under running water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the frying basket firmly until it clicks into place.
Food is not cooked evenly.	Basket is overfilled; food pieces are too large; temperature or time settings are incorrect.	Do not overfill the basket. Cut food into smaller, uniform pieces. Shake the basket halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and pan thoroughly after each use. For fatty foods, drain excess oil from the pan during cooking.

Problem	Possible Cause	Solution
Appliance suddenly stops during operation.	Basket was removed (power-off memory activated); overheating protection.	Reinsert the basket to resume cooking. If due to overheating, unplug and let it cool for 30 minutes before restarting.

SPECIFICATIONS

Product Name: Air Fryer

Model: 5L Digital Air Fryer

Rated Voltage: 220V

Rated Power: 1500W

Product Capacity: 5 Liters

Product Color: Green

Product Net Weight: 4.2 kg

Liner Material: Non-stick

Product Dimensions (L x W x H): 375mm x 330mm x 405mm (approximately 14.76" x 12.99" x 15.94")

Temperature Range: 80-200°C

Timer Range: 0-60 minutes

WARRANTY AND SUPPORT

Warranty Information

This product comes with a **3-month warranty** from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

Customer Support

For any questions, concerns, or assistance with your Generic 5L Digital Air Fryer, please contact our customer support. Please have your purchase details and product model information ready when contacting support.

Contact information is typically provided by the retailer or manufacturer at the time of purchase.

