

Airfryer Oven with LCD Digital Screen

Generic 4.5L Air Fryer Instruction Manual

Model: Airfryer Oven with LCD Digital Screen

INTRODUCTION

Thank you for purchasing the Generic 4.5L Air Fryer. This appliance is designed to provide a healthier way to enjoy your favorite fried foods by using rapid air circulation technology. Please read this manual thoroughly before use to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Generic 4.5L Air Fryer features a compact design with a digital control panel for easy operation. It includes a removable non-stick basket for convenient cooking and cleaning.



Figure 1: Front view of the Generic 4.5L Air Fryer, showcasing the digital LCD screen and control buttons. The appliance has a sleek black finish with gold accents on the handle and top rim.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** LCD digital screen with touch controls for temperature, time, and preset functions.
- **Frying Basket:** Removable, non-stick coated basket for holding food.
- **Basket Handle:** Ergonomic handle for safe removal of the frying basket.

- **Air Inlet/Outlet:** For proper air circulation during cooking.



Figure 2: A close-up view of the fine-hole frying basket, designed for efficient air circulation and easy grease filtration. This non-stick component is detachable for cleaning.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials from the air fryer.
2. **Cleaning:** Before first use, clean the frying basket and pan with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Preheating (Optional):** For optimal results, preheat the air fryer for 3-5 minutes at the desired cooking temperature before adding food.

OPERATING INSTRUCTIONS

Basic Operation:

1. **Prepare Food:** Place your ingredients in the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the air fryer until it clicks into place.
3. **Power On:** Press the power button on the digital control panel.
4. **Set Temperature and Time:** Use the temperature and time control buttons to adjust to your desired settings. The LCD screen will display the current settings.
5. **Select Preset (Optional):** The air fryer features several one-touch preset functions for common foods like steak, poultry, seafood, and fries. Select the appropriate preset if desired.
6. **Start Cooking:** Press the start button to begin the cooking process.
7. **Shake Basket (Mid-Cycle):** For some foods, it is recommended to shake the basket halfway through the cooking time to ensure even browning. Carefully pull out the basket, shake, and reinsert. The air fryer will pause and resume automatically.
8. **Cooking Complete:** The air fryer will beep when the cooking time is complete. Carefully remove the basket and transfer food to a serving dish.

Cooking Tips:

- For crispier results, lightly brush or spray food with oil.
- Smaller food items usually require a shorter cooking time than larger items.
- Do not cook excessively greasy ingredients in the air fryer.
- You can also use the air fryer to reheat food.

High-gloss PP material

Robust and high temperature resistant



Fine hole fried blue
Easy to clean filter grease



Figure 3: The Generic 4.5L Air Fryer in operation, demonstrating its capacity to cook a whole chicken, served alongside roasted potatoes and vegetables. This image illustrates the appliance's ability to prepare complete meals.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Basket and Pan:** The detachable frying basket and pan are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak in hot water for about 10 minutes.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. Avoid using abrasive cleaners or scouring pads.
4. **Clean Exterior:** Wipe the exterior with a damp cloth.
5. **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.
6. **Storage:** Ensure all parts are dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the frying basket is fully inserted.
Food is not cooked evenly.	Basket is overfilled; food not shaken during cooking.	Do not overfill the basket. Shake the basket halfway through cooking for even results.
White smoke comes from the appliance.	Grease from previous use; fatty ingredients being cooked.	Clean the basket and pan thoroughly after each use. Avoid cooking excessively fatty foods.
Food is not crispy.	Not enough oil; temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time as needed.

SPECIFICATIONS

Feature	Detail
Product Name	Household Air Fryer
Brand	Generic
Model	Airfryer Oven with LCD Digital Screen
Capacity	4.5 Liters
Rated Voltage	220V~
Rated Power	1200W
Rated Frequency	50Hz
Product Dimensions	1"D x 1"W x 1"H (approx. 2.54cm x 2.54cm x 2.54cm)
Packing Size	310mm x 310mm x 390mm (approx. 12.2" x 12.2" x 15.3")
Batteries Required	No



Figure 4: Side view of the Generic 4.5L Air Fryer, illustrating its approximate dimensions: 270mm width and 340mm height. This provides a visual reference for placement and storage.

WARRANTY INFORMATION

This Generic 4.5L Air Fryer comes with a **3-month warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

Extended protection plans may be available for purchase separately. Please refer to your retailer for details on additional protection options.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Generic 4.5L Air Fryer, please contact your retailer or the manufacturer's customer service. For the fastest service, please have your product model and purchase date available.

We are committed to ensuring your satisfaction with our products.

