

- Manuals.plus /
- › FOPETT /
- › FOPETT Wireless Keyboard and Mouse Combo V2050 User Manual

FOPETT V2050

FOPETT Wireless Keyboard and Mouse Combo V2050 User Manual

Model: V2050 Purple Gradient

1. INTRODUCTION

This manual provides instructions for setting up, operating, maintaining, and troubleshooting your FOPETT Wireless Keyboard and Mouse Combo (Model V2050). This combo features a full-sized 104-round key retro-style keyboard and a matching wireless mouse, designed for comfortable and efficient use with various devices.

PLUG&PLAY

Enjoy 2.4Ghz Wireless Freedom



Image 1.1: FOPETT Wireless Keyboard and Mouse Combo in use, highlighting its 2.4GHz wireless connectivity and 10-meter signal range.

2. SETUP INSTRUCTIONS

Follow these steps to set up your FOPETT Wireless Keyboard and Mouse Combo:

1. **Insert Batteries:** Open the battery compartments on both the keyboard and the mouse. Insert the required AA batteries (not included) into each device, ensuring correct polarity.
2. **Locate USB Receiver:** The 2.4GHz nano USB receiver is typically stored within the mouse's battery compartment for convenience. Carefully remove it.
3. **Plug and Play:** Insert the USB receiver into an available USB-A port on your computer or device. The system will automatically detect and install the necessary drivers.
4. **Automatic Connection:** Wait for a few seconds for the keyboard and mouse to establish a connection with the receiver. Once connected, they are ready for use.

Note:

- The keyboard and mouse share a single USB receiver.
- If your device only has USB-C ports (e.g., modern MacBooks), a USB-A to USB-C adapter (sold separately) will be required.



Image 2.1: Visual guide for initial setup, including battery insertion and USB receiver connection.

3. OPERATING INSTRUCTIONS

3.1 Keyboard Features

The keyboard features 104 round keys and several indicator lights for status updates.

- **Indicator Lights:** Located in the upper right corner, these lights indicate Num Lock, Caps Lock, and a combined low battery/2.4G connection status.
- **Multimedia Hotkeys:** The keyboard includes 12 hotkeys (F1-F12) that can be activated by pressing the **Fn** key simultaneously with the desired F-key. These provide quick access to media control, email, search, and other functions.

INDICATOR IN UPPER RIGHT CORNER

1 Num lock indicator

A Low battery/ 2.4G connection indicator

 Uppercase and lowercase switch indicator

17 INCH / 45 CM

5.5 INCH / 13.9 CM



FN + **ESC** : Music Player

FN + **F1** : Player/ Pause

FN + **F2** : Previous One

FN + **F3** : Next One

FN + **F4** : Volume+

FN + **F5** : Volume-

FN + **F6** : Mute

FN + **F7** : Web

FN + **F8** : Search

FN + **F9** : Favorites

FN + **F10** : Email

FN + **F11** : Lock

FN + **F12** : Windows

Image 3.1: Keyboard layout detailing indicator lights and Fn key shortcuts for multimedia and system functions.



Wide Compatibility

Work for Windows 2000/ME/XP/7/8/10/11,Vista, Linux, Chrome OS, Mac OS, Etc.

Image 3.2: Comprehensive guide to the keyboard's multimedia hotkeys.

3.2 Mouse Features

The wireless mouse offers adjustable sensitivity and quiet operation.

- **DPI Settings:** The mouse supports adjustable DPI (Dots Per Inch) settings of 800, 1000, and 1600, allowing you to customize cursor speed and precision.
- **Quiet Click:** Designed with low-profile whisper-quiet technology, the mouse provides a silent clicking experience, minimizing distractions.



Ergonomic Design Excellent Click Feedback

Image 3.3: Mouse features, including DPI settings and ergonomic design.



Image 3.4: Demonstration of the quiet typing and clicking experience.

3.3 Ergonomic Design

The keyboard is designed for comfort during extended use.

- **Foldable Stands:** The keyboard includes foldable stands at the back, allowing you to adjust the typing angle for improved ergonomics and reduced wrist pressure.

Ergonomic Design

Release wrist pressure and work effectively



Image 3.5: Keyboard with adjustable foldable stands for ergonomic typing.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your keyboard and mouse combo.

- **Cleaning:** Use a soft, dry cloth to wipe down the surfaces of the keyboard and mouse. For deeper cleaning, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the devices.
- **Battery Replacement:** When the low battery indicator illuminates, replace the AA batteries in both the keyboard and mouse promptly. Ensure correct polarity when inserting new batteries.
- **Power Saving:** The keyboard and mouse feature an auto-sleep mode. The keyboard enters sleep mode after 5 minutes of inactivity, and the mouse after 10 minutes. To wake them up, simply press any key on the keyboard or move/click the mouse. This feature helps conserve battery life.



Image 4.1: Auto-sleep and energy-saving features of the keyboard and mouse.

5. TROUBLESHOOTING

If you encounter issues with your FOPETT Wireless Keyboard and Mouse Combo, refer to the following common solutions:

- **No Connection / Unresponsive Devices:**

- Ensure the USB receiver is securely plugged into a working USB-A port.
- Check if the batteries in both the keyboard and mouse are correctly inserted and have sufficient charge. Replace them if necessary.
- Try plugging the USB receiver into a different USB port on your computer.
- Move the keyboard and mouse closer to the USB receiver to rule out range issues (maximum 10 meters).

- **Hotkeys Not Working on Mac:**

- Some hotkeys may not be fully compatible with Mac operating systems. This is a known limitation.

- **Device Not Recognized on USB-C Only Computers:**
 - If your computer (e.g., modern MacBook) only has USB-C ports, you will need a USB-A to USB-C adapter (sold separately) to connect the USB receiver.
- **Mouse Cursor Jumps or is Erratic:**
 - Ensure the mouse is used on a suitable surface. Avoid highly reflective or transparent surfaces.
 - Check for low battery and replace if needed.
- **No On/Off Switch:**
 - The keyboard and mouse do not have separate power switches. They are designed to enter an automatic sleep mode after a period of inactivity to save power.

If these steps do not resolve your issue, please contact FOPETT customer support for further assistance.

6. SPECIFICATIONS

Feature	Description
Brand	FOPETT
Model	V2050
Color	Purple Gradient
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Special Features	Plug and Play, Portable, Energy Saving, Quiet Operation
Compatible Devices	Laptop, PC, Chromebook, Smart TV
Operating System Compatibility	Windows, Mac OS, Android, Linux, Chrome OS
Batteries Required	Yes (AA batteries, not included)
Number of Keys (Keyboard)	104
Keyboard Layout	QWERTY
Item Weight	0.76 Kilograms
Mouse DPI Settings	800/1000/1600

7. WARRANTY AND SUPPORT

FOPETT is committed to providing high-quality products and customer satisfaction.

- **Warranty:** This product comes with a three-year worry-free warranty.
- **Money-Back Guarantee:** We offer a 60-day money-back guarantee or replacement option.
- **Customer Support:** If you have any inquiries or concerns regarding your FOPETT Wireless Keyboard and Mouse Combo, please do not hesitate to contact the seller. The FOPETT team provides 24-hour online service to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8MSYJBQ>

More documents and user manuals: <https://manuals.plus/>