

## 5L Digital Air Fryer

# Generic 5L Digital Air Fryer Instruction Manual

## INTRODUCTION

Thank you for choosing the Generic 5L Digital Air Fryer. This appliance is designed to provide a fast and convenient alternative to conventional cooking methods, allowing you to prepare a variety of meals with significantly less oil. Utilizing rapid air circulation technology, it ensures thorough cooking and a crispy texture for healthier, low-fat results. Please read this manual carefully before use to ensure safe and optimal operation.

## IMPORTANT SAFEGUARDS

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged. Contact customer support for assistance.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block the air inlet or outlet vents during operation.
- Exercise extreme caution when removing the hot air fryer basket or handling hot food.
- This appliance is for household use only. Do not use outdoors or for commercial purposes.

## PRODUCT OVERVIEW

The Generic 5L Digital Air Fryer features a user-friendly digital display and a spacious 5-liter capacity, ideal for family meals. Its design incorporates advanced air circulation for even cooking.

0-120 minutes time setting,  
40 ° -200 ° wide temperature zone,  
easy to deal with different ingredients, cooking well



Figure 1: Generic 5L Digital Air Fryer in operation, showcasing its versatility with a wide temperature range (40°C - 200°C) and timer (0-120 minutes).

## Components

- Main Unit with Digital Display
- Removable Air Fryer Basket
- Basket Handle
- Air Inlet and Outlet Vents



Figure 2: Product dimensions for the air fryer unit (approximately 28cm W x 33.5cm H) and its basket components.

## Digital Display and Controls

The intuitive digital LED display allows for easy selection of cooking modes, temperature, and time. It features:

- **Temperature Control:** Adjustable dial/buttons for setting temperatures between 80°C and 200°C.
- **Timer:** Adjustable timer for cooking durations up to 120 minutes.
- **Preset Cooking Modes:** Dedicated icons for common foods like Chicken, Chips, Fish, Steak, Shrimp, Pork, and Cake.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional stickers from the air fryer.
2. **Initial Cleaning:** Wash the air fryer basket and any removable accessories with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for adequate air circulation.
4. **First Use (Burn-in):** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) before cooking food for the first time. This helps to burn off any manufacturing residues and odors. A slight odor may be present during this process; ensure the area is well-ventilated.

## OPERATING INSTRUCTIONS

### General Operation

1. Plug the air fryer into a grounded electrical outlet. The digital display will illuminate.
2. Pull out the air fryer basket from the main unit.
3. Place your ingredients into the basket. Do not overfill the basket to ensure even cooking.
4. Slide the basket back into the air fryer until it clicks securely into place.
5. **Setting Temperature and Time:**
  - Use the temperature control buttons (usually up/down arrows) to set the desired cooking temperature (80°C - 200°C).
  - Use the timer control buttons to set the desired cooking time (0-120 minutes).
6. Press the Start/Pause button to begin cooking. The air fryer will start heating and the timer will count

down.

- During cooking, you can pull out the basket to shake or turn the food. The air fryer will pause automatically and resume once the basket is reinserted.
- Once the timer reaches zero, the air fryer will beep, indicating that cooking is complete.
- Carefully pull out the basket and transfer the cooked food to a plate. Use heat-resistant tongs or utensils.
- Unplug the appliance after use and allow it to cool before cleaning.



Figure 3: Illustration of the rapid air circulation technology, which cooks food evenly with minimal oil.

## Using Preset Cooking Modes

The air fryer offers several preset modes for convenience:

- After placing food in the basket and inserting it, press the 'Mode' button or select the desired icon on the digital display (e.g., Chicken, Chips, Fish, Steak, Shrimp, Pork, Cake).
- The air fryer will automatically set the optimal temperature and time for that food type.
- You can manually adjust the temperature and time even after selecting a preset, if desired.
- Press the Start/Pause button to begin cooking.

## Cooking Guide

The following table provides general guidelines for cooking common foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispiness. Always ensure food is cooked thoroughly to safe internal temperatures.

Food Item	Temperature	Time	Notes
French Fries (frozen)	200°C (390°F)	15-20 min	Shake basket halfway

Food Item	Temperature	Time	Notes
Chicken Wings	180°C (360°F)	20-25 min	Flip halfway
Steak (medium)	190°C (375°F)	10-15 min	Flip halfway
Fish Fillet	170°C (340°F)	12-18 min	
Vegetables (mixed)	180°C (360°F)	10-15 min	Toss with a little oil

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

- Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
- Basket and Pan:** The air fryer basket and pan are designed for easy cleaning. Wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak the basket in hot, soapy water for about 10 minutes. The internal surfaces feature a nano-ceramic coating for durability and easy release.

## Fully filtered grease for easy cleaning



Figure 4: The air fryer basket is designed for easy cleaning, allowing for thorough removal of grease and food particles.

## 1. Nano-ceramic coating

## 2. Food Grade Cold Rolled Sheet



Figure 5: The basket features a durable nano-ceramic coating over a food-grade cold rolled sheet for non-stick performance and longevity.

3. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they can damage the surface.
4. **Heating Element:** If necessary, gently clean the heating element inside the air fryer with a soft brush to remove any food debris. Ensure the appliance is completely cool and unplugged.
5. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

## TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on	Not plugged in; Power outlet issue; Basket not fully inserted	Check power cord connection; Try a different outlet; Ensure basket is pushed in completely until it clicks.

Problem	Possible Cause	Solution
Food is not cooked evenly	Basket overloaded; Food not shaken/flipped; Incorrect temperature/time	Do not overfill the basket; Shake or flip food halfway through cooking; Adjust temperature and time as needed.
White smoke coming from appliance	Grease residue from previous use; Fatty food cooking	Clean the basket and pan thoroughly; For fatty foods, add a small amount of water to the bottom of the pan to prevent smoke.
Food is not crispy	Not enough oil (if applicable); Basket overloaded; Temperature too low	Lightly coat food with oil; Do not overload basket; Increase temperature slightly.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Model	5L Digital Air Fryer
Brand	Generic
Power	1400W
Capacity	5 Liters
Temperature Range	80°C - 200°C (176°F - 392°F)
Timer Range	0 - 120 minutes
Product Dimensions (approx.)	1"D x 1"W x 1"H (Note: Other dimensions provided as 0.39 x 0.39 x 0.39 inches, please refer to physical product for exact measurements)
ASIN	B0F8N5HBVV
Batteries Required	No

## WARRANTY AND SUPPORT

This Generic 5L Digital Air Fryer comes with a 3-month warranty from the date of purchase. This warranty covers manufacturing defects under normal household use.

For any questions regarding your air fryer, or if you require assistance with troubleshooting or warranty claims, please do not hesitate to contact our customer service team. We are committed to providing support within 24 hours of your inquiry.

