

[manuals.plus](#) /› [AOC](#) /› [AOC 2025 AMD Laptop User Manual](#)

AOC RX16

AOC 2025 AMD Laptop User Manual

Model: RX16 | Brand: AOC

INTRODUCTION

This manual provides comprehensive instructions for the AOC 2025 AMD Laptop (Model: RX16). It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. The AOC RX16 is a high-performance laptop designed for both productivity and entertainment, featuring an AMD Ryzen 7 7735HS processor, 16GB DDR5 RAM, a 512GB NVMe SSD, and a 16-inch FHD display.



Figure 1: Front view of the AOC 2025 AMD Laptop, showcasing its sleek design and vibrant display.

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that the following items are included:

- 1 x AOC 2025 AMD Laptop (16GB RAM + 512GB SSD)
- 1 x Power Adapter
- 1 x User Manual (this document)

Inspect the laptop for any physical damage. If any components are missing or damaged, contact customer support immediately.

1.2 Connecting to Power

Before first use, ensure the laptop is fully charged. Connect the power adapter to the laptop's DC-in port and then to a power outlet. The charging indicator light will illuminate.

1.3 Initial Power On and Operating System Setup

Press the power button located on the keyboard. The laptop will boot up and guide you through the Windows 11 setup process. Follow the on-screen prompts to configure language, region, network, and user accounts.

1.4 Connecting Peripherals and External Devices

The AOC RX16 laptop offers a variety of ports for connecting external devices:

- **USB 2.0 Port:** For connecting older USB devices.
- **USB 3.2 Ports:** For high-speed data transfer with compatible USB devices.
- **HDMI Port:** Connect to external monitors or projectors for extended display.
- **Type-C Port (Full Function):** Supports data transfer, video output, and power delivery.
- **3.5mm Headphone Jack:** For audio output to headphones or external speakers.
- **TF Card Socket:** For reading and writing to TF (microSD) cards.



Figure 2: Comprehensive interface compatibility of the AOC RX16 laptop, detailing available ports.

1.5 Network Connection (Wi-Fi 6)

To connect to a wireless network:

1. Click the Wi-Fi icon in the system tray.
2. Select your desired Wi-Fi network from the list.
3. Enter the network password if prompted.
4. Click "Connect".

The laptop supports Wi-Fi 6 for faster and more stable wireless connectivity.

2. OPERATING YOUR LAPTOP

2.1 Keyboard and Touchpad

The AOC RX16 features a backlit keyboard for comfortable typing in various lighting conditions and a responsive touchpad with anti-mistouch design for precise cursor control.

Individual Digital Backlit Keyboard

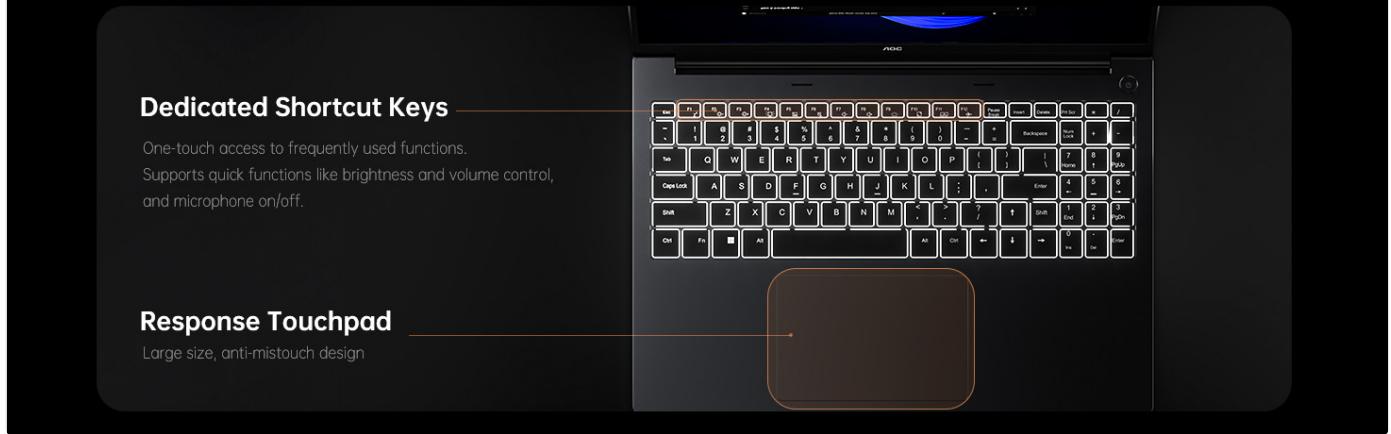


Figure 3: Detailed view of the individual digital backlit keyboard and responsive touchpad.

Function Keys: Utilize the dedicated shortcut keys (Fn + F-keys) for quick access to functions like brightness control, volume adjustment, and microphone on/off.

2.2 Display Features

Experience captivating visuals on the 16.0-inch Full HD (1920x1200p) IPS display. The IPS technology provides wide viewing angles and accurate color reproduction, while eye protection features help reduce strain during prolonged use.

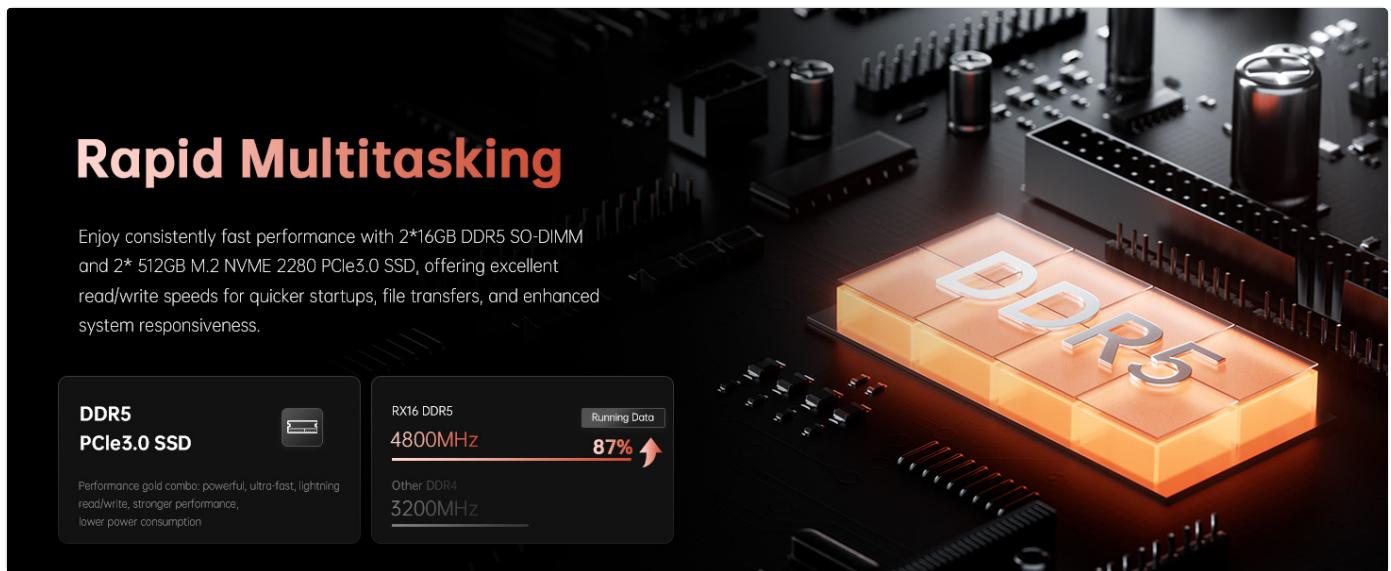


Figure 4: The 16.0-inch FHD display delivers captivating visuals with vivid clarity.

2.3 Performance and Multitasking

The AOC RX16 is powered by an AMD Ryzen 7 7735HS processor, offering high-level performance for demanding tasks. Coupled with 16GB of DDR5 RAM and a 512GB NVMe SSD, the laptop ensures rapid multitasking, quick boot times, and fast file transfers.

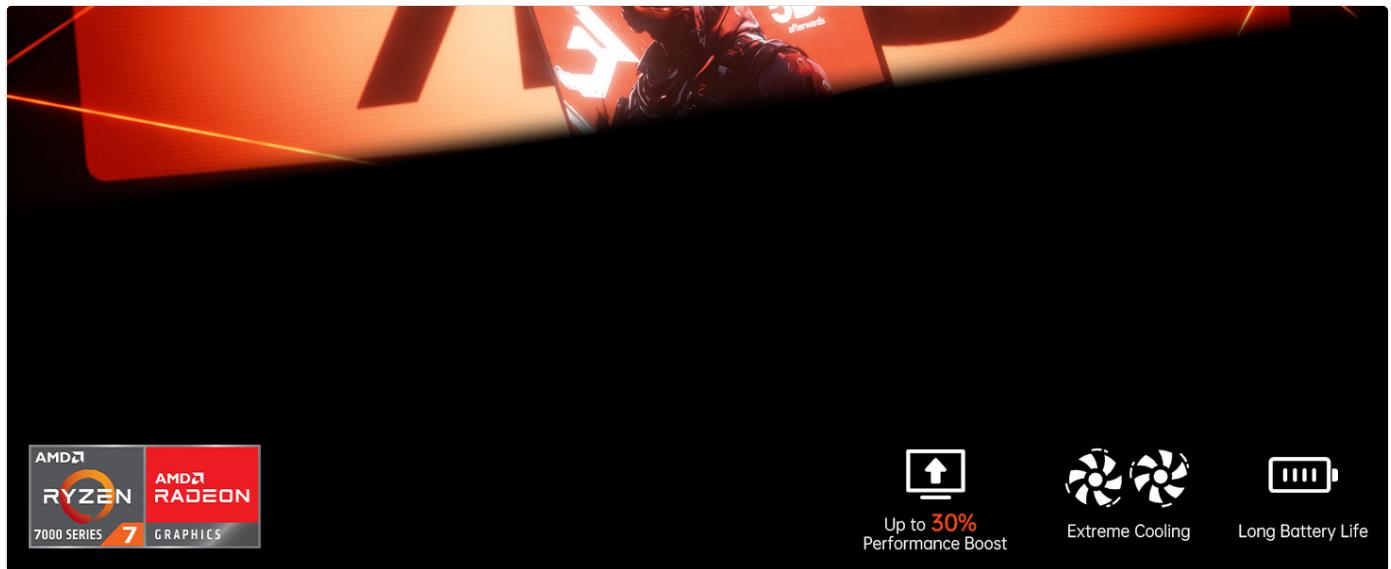


Figure 5: High-level performance delivered by the AMD Ryzen 7 7735HS processor.

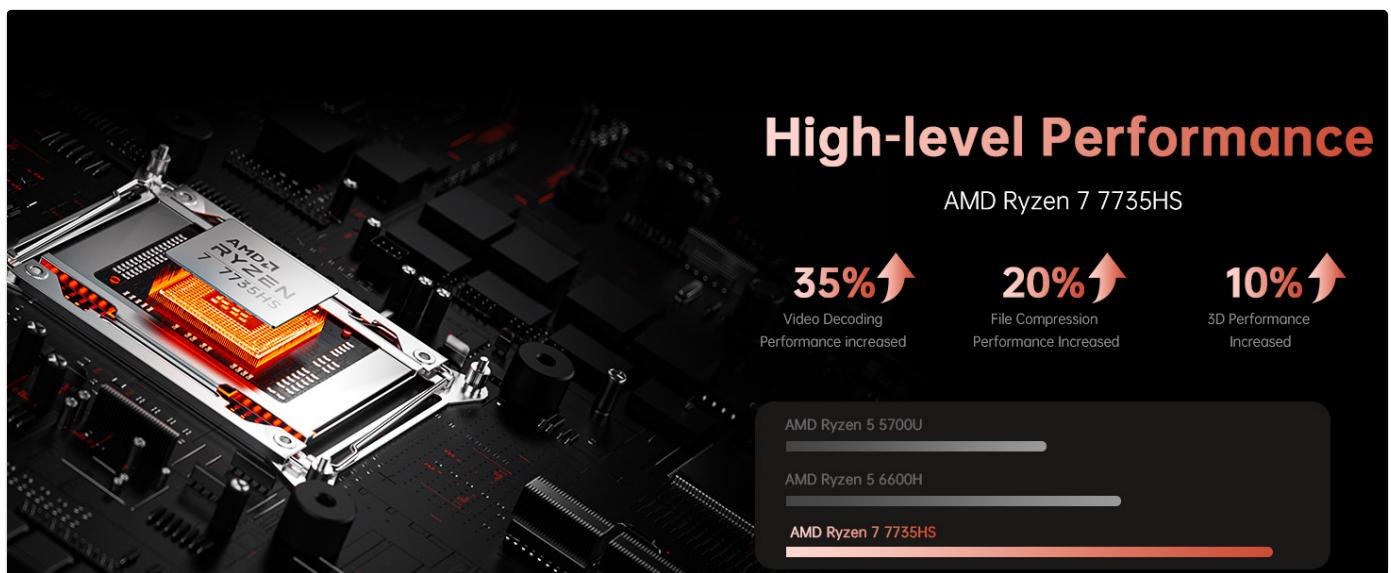


Figure 6: Rapid multitasking capabilities with DDR5 RAM and PCIe 3.0 SSD.

2.4 Cooling System

The laptop incorporates a super cooling system with dual fans and dual heat dissipation copper tubes. This advanced design ensures efficient heat dissipation, maintaining optimal performance even during intensive use and extended work sessions.



Figure 7: Super cooling system with dual fans and copper pipes for efficient heat dissipation.

2.5 Battery Management

The AOC RX16 is equipped with a 4400mAh (51Wh) battery, providing ultra-long battery life for extended use. To maximize battery life:

- Adjust screen brightness.
- Close unused applications.
- Enable power-saving modes in Windows settings.
- Disconnect unnecessary peripherals.



Eliminate Battery Concerns

Uninterrupted power, no worries

4400MAH

Figure 8: The 4400mAh battery ensures uninterrupted power and extended usage.

2.6 Triple-Screen Display Support

Expand your workspace by connecting up to two external monitors using the HDMI and Type-C (Full Function) ports. This allows for a comprehensive triple-screen setup, enhancing productivity and immersive experiences.

Supports Triple-Screen Display

Connect Effortlessly& Work Universally

With a Type-C interface and HDMI support, easily expand your screen for a comprehensive view.



Figure 9: The laptop supports triple-screen display for an expanded visual experience.

2.7 Audio Features

Enjoy exceptional surround-sound quality with the integrated stereo speakers and digital microphone, providing an immersive audio experience for multimedia and communication.

Exceptional Surround-Sound Quality

Immersive experience, More enjoyable



Figure 10: Exceptional surround-sound quality for an immersive experience.

2.8 180° Flat Laying Design

The laptop features a full flat design, allowing the screen to lay completely flat (180 degrees). This design provides versatile viewing angles, making it ideal for collaborative work and sharing content with others.

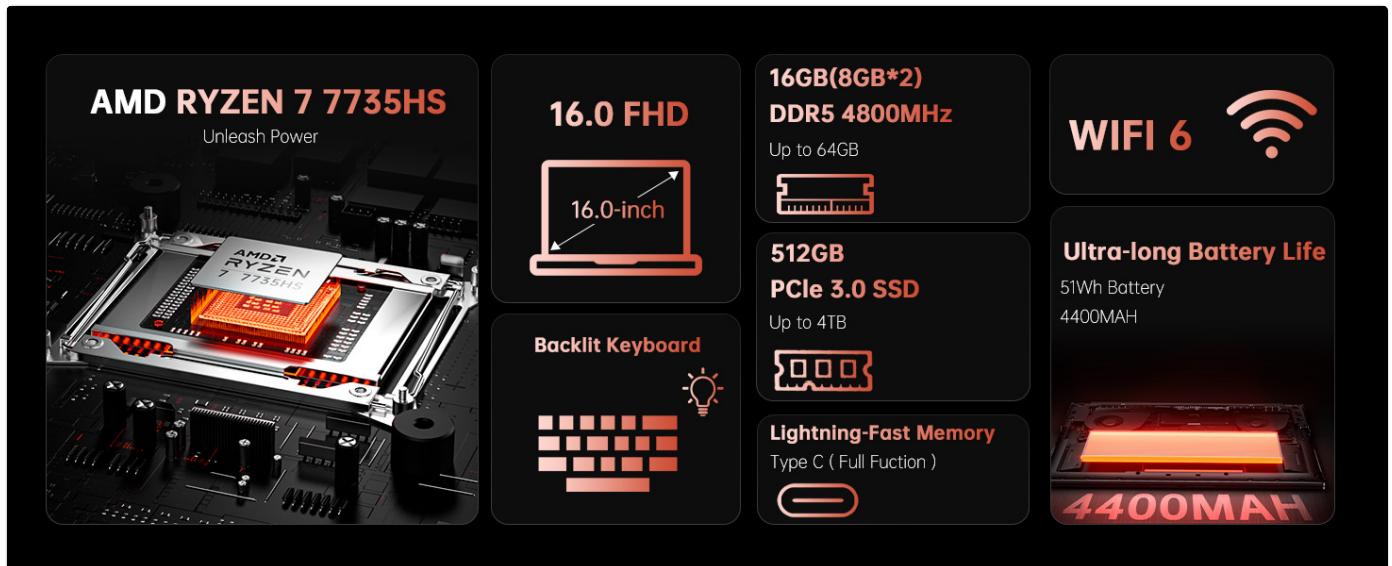


Figure 11: The 180° flat laying design offers versatile viewing angles for collaboration.

3. MAINTENANCE

3.1 Cleaning Your Laptop

Regular cleaning helps maintain the laptop's appearance and functionality:

- Use a soft, lint-free cloth dampened with water or a specialized screen cleaner for the display.
- For the keyboard and chassis, use a soft cloth. Avoid harsh chemicals.
- Use compressed air to clear dust from vents and ports.

3.2 Software Updates

Keep your Windows 11 operating system and drivers updated to ensure optimal performance, security, and compatibility. Windows Update typically handles this automatically, but you can manually check for updates in Settings.

3.3 Storage and Memory Upgrades

The laptop's 512GB M.2 NVMe SSD can be upgraded to 4TB, and the dual-channel DDR5 memory (16GB installed) supports upgrades up to 64GB (2x32GB). Consult a qualified technician for hardware upgrades to avoid voiding your warranty or damaging components.

4. TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, refer to the support section.

Problem	Possible Cause	Solution
Laptop does not power on.	Low battery or power adapter issue.	Ensure power adapter is securely connected and plugged into a working outlet. Allow battery to charge for a few minutes before attempting to power on again.
No display on screen.	Screen brightness too low, external monitor issue, or system crash.	Increase brightness using function keys. Disconnect external monitors. Perform a hard reset by holding the power button for 10-15 seconds.
Wi-Fi connection issues.	Incorrect password, router issue, or Wi-Fi adapter disabled.	Verify Wi-Fi password. Restart your router. Check Wi-Fi settings in Windows to ensure the adapter is enabled.
Slow performance.	Too many applications running, low storage space, or outdated drivers.	Close unnecessary programs. Free up disk space. Update Windows and device drivers.

5. SPECIFICATIONS

Detailed technical specifications for the AOC 2025 AMD Laptop (Model: RX16).



Figure 12: Key specifications of the AOC RX16 laptop.

Feature	Specification
Model Name	RX16

Feature	Specification
Operating System	Windows 11
Processor	AMD Ryzen 7 7735HS (8C/16T, up to 4.75GHz)
Graphics Coprocessor	AMD Radeon™ 680M
RAM	16GB DDR5 (Expandable to 64GB)
Storage	512GB NVMe SSD (Expandable to 4TB)
Screen Size	16 Inches
Max Screen Resolution	1920x1080 Pixels
Wireless Connectivity	WiFi 6, Bluetooth 5.0
Ports	1x USB 2.0, 2x USB 3.0, 1x HDMI, 1x Type-C (Full Function), 1x 3.5mm Headphone Jack, 1x TF Card Socket
Battery	4400mAh (51Wh)
Item Weight	6.05 pounds
Product Dimensions	14.06 x 9.75 x 0.78 inches

6. WARRANTY AND SUPPORT

AOC provides comprehensive support for your laptop. Enjoy peace of mind with unlimited technical support and a 12-month repair service for all customers.



6.1 Warranty Information

We provide customers with a one-year effective warranty period, including free return or exchange service. Offline maintenance services are also available for products beyond the initial warranty period.

6.2 Technical Support

If you have any questions or concerns regarding your AOC laptop, our professional service team is ready to assist you. You can consult us by telephone or email. We are committed to your satisfaction.

For contact details, please refer to the information provided with your product or visit the official AOC support website.

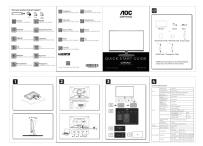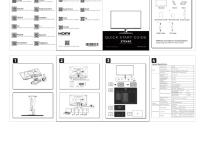	<p>AOC 22B2H LED Monitor User Manual and Specifications</p> <p>Detailed user manual and technical specifications for the AOC 22B2H 21.5-inch Full HD LED monitor. Learn about setup, OSD menu adjustments, connectivity options (VGA, HDMI), software features (i-Menu, e-Saver, Screen+), and compliance.</p>
	<p>AOC C27G42E Gaming Monitor: Quick Start Guide & Specifications</p> <p>Get started with your AOC C27G42E 27-inch gaming monitor. This guide covers setup, connections, OSD controls, and detailed technical specifications for optimal performance.</p>
	<p>Supermicro AOC-S3908L/S3916L Series SAS RAID Controller User's Manual</p> <p>User's manual for Supermicro AOC-S3908L-H8iR, AOC-S3908L-H8iR-32DD, AOC-S3908L-H8iR-16DD, AOC-S3916L-H8iR, and AOC-S39016L-H8iR-32DD SAS RAID controllers. Covers installation, configuration, and firmware updates for enterprise storage solutions.</p>
	<p>Custom PC: PC Building Masterclass Magazine</p> <p>Custom PC Issue 229 offers a comprehensive PC building masterclass, guiding users through hardware installation, cooling, and cable management. Also features reviews of the latest gaming monitors, CPUs, GPUs, and hobby tech from brands like Intel, AMD, NVIDIA, Samsung, and Raspberry Pi.</p>
	<p>AOC 27G4XE Gaming Monitor Quick Start Guide</p> <p>Concise guide to setting up and using the AOC 27G4XE gaming monitor, including specifications, connections, and OSD navigation.</p>
	<p>AOC CQ32G4E Gaming Monitor User Manual - Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the AOC CQ32G4E gaming monitor. Covers setup, installation, features like Adaptive-Sync and HDR, troubleshooting, and technical specifications. Get the most out of your AOC gaming display.</p>

Documents - AOC – RX16

<p>bullx cluster suite XR 5v3.1 U3</p> <p>Installation and Configuration Guide</p> <p style="text-align: center;">REFERENCE 86 A2 19FA 04</p>	<p>extreme computing</p> 
---	--

[\[pdf\]](#) Guide Configuration Guide

bullx cluster suite XR 5v3.1 U3 Installation and Configuration Guide 86 A2 19FA 04 Bull SAS

86A219FA04 audentia gestion fr BULL |||

extreme computing bullx cluster suite XR 5v3.1 U3 Installation and Configuration Guide REFERENCE 86 ... 68.1.200 255.255.255.0 FLS648 Switch config #end FLS648 Switch#write mem b. on BigIron RX4, RX8 and **RX16** models: RX Switch config #vlan 1 RX Switch config-vlan-1 # router-interface ve 1 RX Switch config... lang:en **score:17** filesize: 5 M page_count: 200 document date: 2010-08-02

<p>Users Manual</p> <p>32</p> <p>SH7786 グループ</p> <p>ユーザーズマニュアル ハードウェア編 ルネサス 32 ビット RISC マイクロコンピュータ SuperH™ RISC engine ファミリ / SH7780 シリーズ R8A77860</p> <p>ルネサスエレクトロニクス www.renesas.com</p> <p>Rev.1.00 2010.11</p>	<p>RENESAS</p>
--	----------------

[\[pdf\]](#) User Manual

7786 RJJ09B0533 0100 SH7786 Sep 06 10 Renesas Electronics Corporation 2021 04

01 — Reduced Instruction Set Computer SCIF Serial Communication Interface with FIFO


rjj09b0533 7786hm renesas document mah sh7786 group users manual hardware language ja |||

32 SH7786 32 RISC SuperHTM RISC engine SH7780 R8A77860 Rev.1.00 2010.11

1. 2. ... 27.3.10 HAC HACACR HACACR 32 HAC 31 30 29 28 27 26 25 24 23 22 21

20 19 18 17 16 DMA DMA **RX16** TX16 TX12_ ATOMIC RXDMAL TXDMAL RXDMAR TXDMAR _EN _EN _EN _EN 1 0 0 0 0...

lang:en **score:15** filesize: 10.55 M page_count: 1770 document date: 2010-11-04
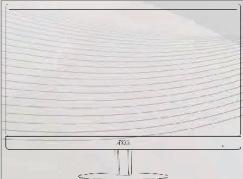
<p>SERVICE MANUAL</p> <p>维修手册</p> <p>客户/品牌 AOC 机种名 I2369V</p> <p></p>
--

[\[pdf\]](#) User Manual

Microsoft Word I2369V C0 202540 SERVICE MANUAL R142 470R 1 16W 5% C120 1NF 50V DDCSDA

A DDCSCL VSIN0 HSIN0 061G152M43852T SY RST MOFR 0 43 OHM 2WS FUTABA

061G152M43852T pIYBAFwqz12AaC0OAEsoRRLNp 0822 file elecfans web1 M00 80 FA |||

SERVICE MANUAL / AOC I2369V 1 A00 A01 JAN,28,2013 FEB,06,201,2 Initial

Release Add ... X2RX1 RX1RX0 RX0RXC RXC- RX2 RX2RX1 RX1RX0 RX0RXC

RXC- U401 10 REXT 1 2 RX2 3 RX24 RX1 5 **RX16** RX0 7 RX08 RXC RXC- C421

4.7uF 10V C0805 FB408 300R 0.7A OSC_VDD C422 0.1UF 16V C423 4.7uF...

lang:i-klingon **score:15** filesize: 4.7 M page_count: 69 document date: 2013-02-06