

[Manuals.plus](#) /

› [Aobante](#) /

› Aobante 10-inch Android 15 Tablet K70 User Manual

Aobante K70

Aobante 10-inch Android 15 Tablet K70 User Manual

Model: K70

1. IMPORTANT SAFETY INFORMATION

Please read this section carefully before using your Aobante K70 tablet to ensure safe and proper operation. Keep this manual for future reference.

- **Battery Safety:** Do not attempt to replace the battery yourself. Use only the original charger and cable provided. Avoid exposing the tablet to extreme temperatures (below 0°C or above 40°C) or direct sunlight for prolonged periods.
- **Charging:** Ensure the charger is connected to a power outlet with the correct voltage. Do not touch the charger or tablet with wet hands while charging.
- **Water and Moisture:** This tablet is not waterproof. Avoid exposing it to water, rain, or high humidity.
- **Hearing Protection:** When using headphones, set the volume to a moderate level to prevent hearing damage.
- **Disposal:** Dispose of the tablet and its accessories responsibly according to local regulations. Do not dispose of electronic waste in household trash.

2. PACKAGE CONTENTS

Verify that all items are present in your product package:

- Aobante 10-inch Android 15 Tablet K70
- Power Adapter
- USB-C Cable
- User Manual
- Screen Protector (pre-applied or included separately)
- Protective Case



Image: Aobante K70 Tablet with its standard accessories, including the charging adapter, USB-C cable, and a protective cover.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your Aobante K70 tablet.

Front View

- **10.1-inch IPS HD Display:** Main screen for interaction and content viewing.
- **Front Camera (5MP):** Located at the top center for video calls and selfies.

Rear View

- **Rear Camera (8MP):** Main camera for capturing photos and videos.
- **Speaker Grilles:** For audio output.

Side Views

- **Power Button:** Press and hold to turn on/off or restart. Press briefly to sleep/wake the screen.
- **Volume Buttons:** Adjust the audio volume.

- **USB-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expanding storage (up to 1TB).
- **Microphone:** For voice input.

4. SETUP

4.1 Initial Power On

1. Press and hold the **Power Button** on the side of the tablet until the Aobante logo appears on the screen.
2. Follow the on-screen prompts to select your language, region, and accept the terms and conditions.

4.2 Charging the Battery

Before first use, it is recommended to fully charge the tablet's 6000mAh battery.

1. Connect the USB-C cable to the tablet's USB-C port.
2. Connect the other end of the USB-C cable to the provided power adapter.
3. Plug the power adapter into a wall outlet.
4. The battery icon on the screen will indicate charging status.



Image: The tablet's 6000mAh battery provides long-lasting power and charges conveniently via the USB-C port.

4.3 Wi-Fi Connection

Connect to a Wi-Fi network to access the internet.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted, then tap **Connect**.

RAM 18GB(6+12GB)+ROM 128GB



128GB ROM
Large memory space on tablet

1TB MircoSD
Extra storage for more

Read/write speed increased by 40% 

Run speed increased by 20% 

Expandable 1 TB (TF card purchased separately)

Image: The tablet supports stable and fast 2.4G/5G Wi-Fi and Bluetooth 5.0 for reliable wireless connections.

4.4 Google Account Setup

A Google account is required to download apps from the Google Play Store, sync data, and use Google services.

1. During initial setup, you will be prompted to sign in with your Google account or create a new one.
2. If you skip this step, you can add an account later via **Settings > Accounts > Add account > Google**.

4.5 Storage Expansion

The tablet comes with 128GB of internal storage, expandable up to 1TB using a MicroSD card (purchased separately).


1. Locate the MicroSD card slot on the side of the tablet.
2. Gently insert the MicroSD card into the slot until it clicks into place.
3. The tablet will detect the new storage. You may be prompted to format the card for optimal use.

Powerful Large Capacity battery

The 6000mAh battery is ready for your long hours of use and can also be easily charged via the Type-C port. And it reduces your waiting time.



Type-C
Convenient charging



6000 mAh
High capacity battery



Image: The tablet features 18GB RAM (6GB physical + 12GB virtual) and 128GB ROM, with support for up to 1TB MicroSD card expansion.

5. OPERATING YOUR TABLET

5.1 Basic Navigation

- **Tap:** Select an item or open an app.

- **Tap & Hold:** Access contextual menus or move items.
- **Swipe:** Scroll through lists or switch between screens.
- **Pinch:** Zoom in or out on images and web pages.

5.2 Home Screen

The home screen provides quick access to your apps, widgets, and notifications. You can customize it by adding or removing app icons and widgets.

5.3 Notifications and Quick Settings

Swipe down from the top of the screen to access notifications and quick settings toggles (Wi-Fi, Bluetooth, brightness, etc.).

5.4 Installing/Uninstalling Apps

- **Install:** Open the **Google Play Store** app, search for your desired app, and tap **Install**.
- **Uninstall:** Tap and hold an app icon on the home screen or app drawer, then drag it to the **Uninstall** option, or go to **Settings > Apps > select the app > Uninstall**.

5.5 Camera Operation

The tablet features a 5MP front camera and an 8MP rear camera for photos and videos.

1. Open the **Camera** app.
2. Tap the camera switch icon to toggle between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.



Image: The tablet's dual camera setup, featuring a 5MP front camera for clear video calls and an 8MP rear camera for capturing detailed photos.

5.6 Media Playback

Enjoy videos and music on the 10.1-inch IPS HD display with 1280x800 resolution.

- Use pre-installed apps like YouTube or download streaming services like Netflix and Disney+ from the Google Play Store.
- The tablet features dual speakers for an enhanced audio experience.

Dual Camera- Record Beautiful

Dual front and rear camera configuration, 5MP front + 8MP rear, clear photos, smooth video calls, capture every wonderful moment in life.



Image: The 10.1-inch FHD screen provides realistic colors and clear pictures, ideal for watching videos from various streaming platforms.

Powerful Engine-Excellent Processor

With the powerful performance of T310 octa-core processor, it brings you a smooth and fluid operating experience. Your tablet responds quickly to every command, multiplying efficiency.


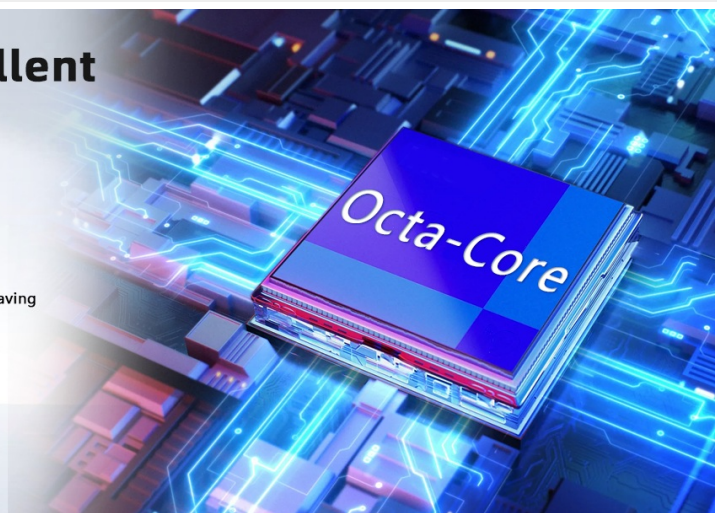


Image: The tablet is equipped with dual speakers for significantly higher volume and a wider soundstage, enhancing the audio experience for films and music.

5.7 GPS Functionality

The tablet includes a GPS positioning system for navigation and location-based services.

- Open a navigation app (e.g., Google Maps) to get directions.
- Ensure location services are enabled in **Settings > Location**.

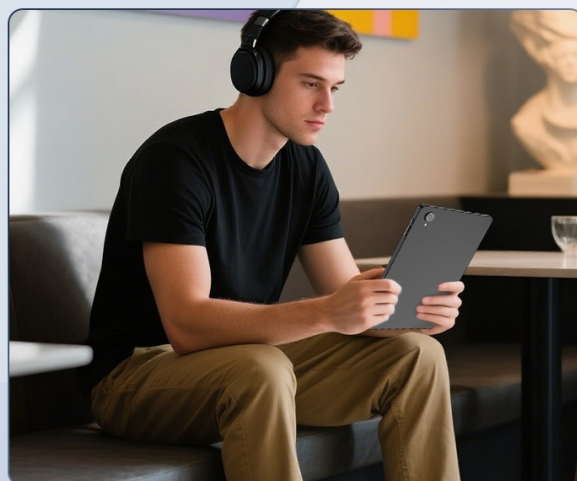

5G WiFi is Stable and Fast

Stay connected with 2.4G/5G WiFi to help you manage faster internet connections and web uploads.



Bluetooth 5.0

Powerful bluetooth 5.0 technology, stable connection, highdefinition sound quality. To enjoy every note.

Image: The tablet features a GPS positioning system for navigation and supports wireless projection to external displays.

5.8 Face Recognition

Unlock your tablet quickly and securely using face recognition.

1. Go to **Settings > Security & privacy > Face unlock**.
2. Follow the on-screen instructions to register your face.

6. MAINTENANCE

6.1 Cleaning the Device

- Use a soft, lint-free cloth to wipe the screen and body of the tablet.
- Do not use harsh chemicals, abrasive cleaners, or aerosol sprays.

6.2 Software Updates

Regularly check for and install software updates to ensure optimal performance and security.

1. Go to **Settings > System > System update**.
2. Follow the prompts to check for and install any available updates.



Image: The Android 15 system offers a smoother interface, optimized multitasking, and enhanced security features.

6.3 Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet connected to the charger for extended periods after it is fully charged.
- Store the tablet in a cool, dry place if not used for a long time.

6.4 Data Backup

Regularly back up your important data to a cloud service or external storage to prevent data loss.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common problems and solutions.

7.1 Common Issues and Solutions

Problem	Solution
---------	----------

Problem	Solution
Tablet won't turn on	Ensure the battery is charged. Connect the charger and try again. If unresponsive, press and hold the Power button for 10-15 seconds to force a restart.
Slow performance	Close unnecessary apps running in the background. Clear cache for frequently used apps. Restart the tablet. Check for system updates.
Wi-Fi connection issues	Ensure Wi-Fi is enabled. Restart your router. Forget the network and reconnect. Check if other devices can connect to the same network.
Apps crashing or freezing	Force close the app (Settings > Apps > [App Name] > Force stop). Clear the app's cache and data. Uninstall and reinstall the app.
Battery draining quickly	Reduce screen brightness. Disable Wi-Fi/Bluetooth when not in use. Close background apps. Check battery usage in Settings to identify power-hungry apps.

7.2 Factory Reset

A factory reset will erase all data on your tablet and restore it to its original factory settings. This should be a last resort for persistent issues.

1. **Backup your data** before proceeding.
2. Go to **Settings > System > Reset options > Erase all data (factory reset)**.
3. Follow the on-screen instructions to confirm the reset.

8. SPECIFICATIONS

Detailed technical specifications for the Aobante 10-inch Android 15 Tablet K70.

Feature	Specification
Model	K70
Operating System	Android 15
Processor	Octa-Core (T310, 2.0 GHz)
RAM	18GB (6GB physical + 12GB expansion)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via MicroSD card (not included)
Display Size	10.1 Inches
Display Resolution	1280 x 800 Pixels (IPS HD)
Front Camera	5MP

Feature	Specification
Rear Camera	8MP
Battery Capacity	6000mAh
Wireless Connectivity	Wi-Fi 6E (802.11ax), 2.4G/5G Wi-Fi
Bluetooth	Bluetooth 5.0
Ports	USB-C
Dimensions (LxWxH)	9.65 x 6.34 x 0.31 inches
Item Weight	2.53 pounds



Image: The tablet's powerful Octa-Core processor ensures smooth operation and efficient performance.

9. WARRANTY AND SUPPORT

9.1 Product Warranty

Your Aobante K70 tablet is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. This warranty typically covers defects in materials and workmanship under normal use.

9.2 Customer Support

If you have any questions, require technical assistance, or experience issues not covered in this manual, please contact Aobante customer support. Most inquiries are addressed within 24 hours.

- **Online Support:** Visit the official Aobante website for FAQs and support resources.
- **Email Support:** Refer to your product packaging or warranty card for the customer service email address.

