

[Manuals.plus](#) /

› [TRIUMPHKEY](#) /

› TRIUMPHKEY Electric Standing Desk Model 0788 User Manual

TRIUMPHKEY 0788

TRIUMPHKEY Electric Standing Desk Model 0788 User Manual

Model: 0788 | Dimensions: 110 x 60 cm | Color: White

1. INTRODUCTION

Thank you for choosing the TRIUMPHKEY Electric Standing Desk. This desk is designed to enhance your work experience by allowing seamless transitions between sitting and standing postures, promoting a healthier and more dynamic work environment. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk.



Image 1: TRIUMPHKEY Electric Standing Desk in a typical office setup.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Do not use the desk if it is damaged or if any part is missing.
- Do not place heavy objects on the edges of the desk to prevent it from tipping over.
- Keep the desk away from heat sources and do not place flammable objects nearby.
- Do not adjust the height of the desk while it is in use or if someone is sitting on it.
- Always follow the provided installation and maintenance instructions.
- Ensure children and pets are kept away from the desk during operation.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Tabletop (110 x 60 cm)
- Desk Frame (Legs, Crossbar)
- Control Panel with LED Display
- Power Adapter and Cable
- Headphone Hook
- Assembly Hardware (Screws, Allen Key)
- Instruction Manual

4. SETUP AND ASSEMBLY

The TRIUMPHKEY Electric Standing Desk is designed for quick and easy assembly, typically taking around 30 minutes. Follow the detailed instructions and use the numbered components provided in the separate assembly guide.

Key Assembly Steps:

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Assemble the desk frame according to the provided diagrams, ensuring all screws are tightened securely.
3. Attach the tabletop to the assembled frame using the pre-drilled holes.
4. Mount the control panel and headphone hook in their designated positions.
5. Connect the power adapter to the control box and plug it into a power outlet.

Diseño silencioso único

<50 dB de ruido, ideal para uso nocturno



Image 2: Desk structure demonstrating robust design and 80kg load capacity.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The desk is equipped with an intuitive 6-button control panel and a digital LED display for precise height adjustments.

Panel de control multifunción

Simple. Preciso. Más inteligente



Tecla de función M

3 posiciones
de memoria

Teclas de subir/bajar

Image 3: Multifunction control panel with LED display.

- **LED Display:** Shows current desk height in centimeters.
- **Up/Down Arrows (^ / v):** Press and hold to adjust the desk height manually.
- **'M' Button:** Used to save memory presets.
- **'1', '2', '3' Buttons:** One-touch buttons to recall saved height positions.

5.2 Height Adjustment

To adjust the desk height, press and hold the **Up arrow (^)** to raise the desk or the **Down arrow (v)** to lower it. The desk can be adjusted smoothly within a range of 71 cm to 119 cm.

Altura ajustable

Ya sea de pie, sentado
o en algún punto intermedio



Image 4: Demonstrating the adjustable height feature (71-119cm).

5.3 Setting Memory Presets

The desk allows you to save up to three preferred height positions for quick recall:

1. Adjust the desk to your desired height using the Up/Down arrows.
2. Press the **'M'** button. The LED display will show 'S-'.
3. Within 3 seconds, press one of the memory buttons (**'1'**, **'2'**, or **'3'**). The display will show 'S-1', 'S-2', or 'S-3' to confirm the height has been saved.

5.4 Recalling Memory Presets

To move the desk to a saved height, simply press the corresponding memory button (**'1'**, **'2'**, or **'3'**). The desk will automatically adjust to the saved position.

6. FEATURES AND DESIGN

The TRIUMPHKEY Electric Standing Desk incorporates several thoughtful design elements for user convenience and durability:

- **Quiet Operation:** The motor operates at less than 50 decibels, ensuring a peaceful work environment, even during night use.
- **Headphone Hook:** A practical hook is included for convenient storage of headphones or bags, keeping your desktop tidy.
- **Rounded Edges:** The tabletop features rounded, anti-collision edges for enhanced safety and comfort.
- **Cable Management Hole:** An integrated cable hole helps organize wires and maintain a clean workspace.
- **Robust Construction:** Built with an industrial-grade steel frame, the desk provides stable and reliable support for up to 80 kg.



Diseño ergonómico

Bordes redondeados antigolpes
Gancho para auriculares incluido

Image 5: Illustration of the desk's quiet operation (below 50dB).

Robusto y duradero

A cualquier altura, siempre estable.



Image 6: Ergonomic design details including rounded edges and headphone hook.

7. MAINTENANCE

To ensure the longevity and optimal performance of your TRIUMPHKEY Electric Standing Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, which can damage the finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they are tight. Re-tighten if necessary.
- **Cable Management:** Ensure cables are neatly organized and not pinched or tangled, which could affect desk operation or cause damage.
- **Weight Distribution:** Distribute weight evenly across the desktop to prevent strain on the lifting mechanism.

8. TROUBLESHOOTING

If you encounter any issues with your desk, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move	Power cable disconnected; Overload; Motor error	Check power connection; Reduce weight on desk; Unplug for 10 seconds and plug back in to reset.
Desk moves unevenly	Uneven weight distribution; Loose connections	Distribute weight evenly; Check and tighten all frame connections.
Error code on display	Specific system fault	Refer to the detailed assembly guide for specific error code meanings and solutions, or contact customer support.

If the problem persists after attempting these solutions, please contact TRIUMPHKEY customer support for further assistance.

9. SPECIFICATIONS

Feature	Detail
Brand	TRIUMPHKEY
Model Number	0788
Color	White
Tabletop Dimensions (L x W)	110 cm x 60 cm
Height Adjustment Range	71 cm - 119 cm
Product Weight	18.8 kg
Load Capacity	80 kg
Noise Level	< 50 dB
Tabletop Material	Wood
Base Material	Alloy Steel
Special Features	Adjustable height, 3 memory presets, LED display, Headphone hook, Rounded edges

10. WARRANTY AND SUPPORT

TRIUMPHKEY is committed to providing high-quality products and customer satisfaction. For warranty information, technical support, or any questions regarding your Electric Standing Desk, please contact TRIUMPHKEY customer service through the retailer where you purchased the product or visit the official TRIUMPHKEY website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question