

[Manuals.plus](#) /

> [PAKEWAY](#) /

> PAKEWAY Dog Nail Clippers with LED Light - Pet Nail Trimmer and File User Manual

## PAKEWAY 114001331

# PAKEWAY Dog Nail Clippers with LED Light - User Manual

Model: 114001331 | Brand: PAKEWAY

## INTRODUCTION

Thank you for choosing the PAKEWAY Dog Nail Clippers with LED Light. This tool is designed to assist in safely and effectively trimming the nails of small to medium-sized dogs, puppies, cats, and rabbits. The integrated LED light helps illuminate the quick, reducing the risk of injury during grooming. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your nail clippers.



Image: PAKEWAY Dog Nail Clippers, nail file, and packaging.

## PRODUCT FEATURES

- **LED Light for Quick Visibility:** A bright LED light illuminates the bloodline (quick) within your pet's nail, aiding in precise and safe trimming, especially for pets with dark nails.
- **Integrated Nail File:** A hidden nail file is included for smoothing rough edges after trimming.
- **Sharp Stainless Steel Blade:** The angled blade is designed for clean, efficient cuts on various pet nail types.
- **Ergonomic Design:** Features a comfortable, non-slip handle with soft TPE rubber to reduce hand strain and provide control.
- **Spring-Assisted Mechanism:** Facilitates smoother and easier trimming action.
- **Pre-installed Batteries:** Comes with standard button batteries pre-installed for immediate use.



Image: LED Light and Safety Guard features explained.

## SETUP

The PAKEWAY Dog Nail Clippers come with standard button batteries pre-installed, allowing for immediate use.

### Battery Replacement

If the LED light dims or stops working, the batteries may need replacement. The clippers use standard button cell batteries.

1. Locate the battery compartment cover, typically on the side of the clipper handle.
2. Carefully slide or unclip the cover to open the compartment.
3. Remove the old batteries and insert new ones, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.

**Caution:** Ensure the battery compartment is securely closed after replacement to prevent batteries from dislodging,

especially during use. Keep batteries out of reach of pets and children.

## OPERATING INSTRUCTIONS

Proper nail trimming is crucial for your pet's health and comfort. Follow these steps for safe and effective use of your PAKEWAY Dog Nail Clippers.

### Before You Begin

- Familiarize your pet with the clippers. Allow them to sniff the tool and offer treats.
- Ensure your pet is calm and comfortable. Consider trimming nails after a play session or when they are relaxed.
- Have styptic powder or cornstarch readily available in case of accidental over-cutting.

### Trimming Procedure

1. Hold your pet's paw firmly but gently.
2. Press the button to activate the LED light. Position the clipper so the light illuminates the nail.
3. Identify the quick (the pinkish area containing blood vessels and nerves). For dark nails, the quick may appear as a small dark circle when viewed from the tip. The LED light will help reveal this area.
4. Trim only the tip of the nail, staying a safe distance from the quick. Make small cuts if unsure.
5. Use the integrated nail file to smooth any rough edges after trimming.
6. Repeat for all nails. Praise and reward your pet throughout the process.

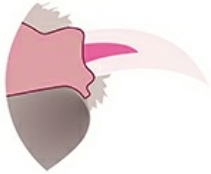


Image: Using the LED light to identify the quick for safe trimming.

## SAFELY, EASILY, PRECISELY

LED Light Illuminates nails for safe trimming

White Nails  
80%



Brown Nails  
60%



Black Nails  
10%



Image: Trimming guidance for various nail colors.

## MAINTENANCE

- **Cleaning:** After each use, wipe the blades with a clean, damp cloth to remove any nail debris. Ensure the clippers are dry before storage.
- **Storage:** Store the clippers in a dry, safe place, away from direct sunlight and moisture. Use the safety latch to keep the blades closed when not in use.
- **Blade Sharpness:** The stainless steel blades are designed for durability. If you notice the blades becoming dull over time, consider replacement or professional sharpening if available for this type of tool.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
LED light not working or dim.	Batteries are depleted or incorrectly installed.	Replace batteries, ensuring correct polarity. Refer to "Battery Replacement" in the Setup section.
Battery compartment cover pops open.	Cover not securely latched or manufacturing variation.	Ensure the cover is firmly closed and latched. If the issue persists, consider securing it with a small piece of tape for temporary use, or contact customer support.
Clippers not cutting cleanly.	Blades are dull or dirty.	Clean blades thoroughly. If dullness persists, consider replacing the clippers.

Problem	Possible Cause	Solution
Pet is resistant to nail trimming.	Lack of positive association or discomfort.	Introduce clippers gradually with treats and praise. Trim only a few nails at a time. Consult a veterinarian or professional groomer for guidance.

## SPECIFICATIONS

- **Model Name:** Dog Nail Clipper
- **Item Model Number:** 114001331
- **Brand:** PAKEWAY
- **Item Weight:** 3.84 ounces
- **Package Dimensions:** 6.73 x 3.54 x 1.06 inches
- **Color:** Green (for this specific variant)
- **Target Audience:** Dogs, Puppies, Cats, Rabbits (Small/Medium pets)
- **Included Components:** Nail Clipper with LED Light, Nail File

## WARRANTY INFORMATION

Warranty information for this product is not explicitly provided in the product details. For any warranty-related inquiries, please contact PAKEWAY customer support directly or refer to the retailer's return policy.

## SUPPORT

For further assistance, product inquiries, or to provide feedback, please visit the official PAKEWAY store or contact their customer service.

[Visit the PAKEWAY Official Store on Amazon](#)

