

Geokay E16

Geokay 16-Inch Rechargeable Doodle Glow LED Note Board User Manual

Model: E16 | Brand: Geokay

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Geokay 16-Inch Rechargeable Doodle Glow LED Note Board. Please read these instructions thoroughly before operating the device and retain them for future reference.



Image: The Geokay 16-Inch Rechargeable Doodle Glow LED Note Board showcasing vibrant, illuminated dinosaur artwork.

2. WHAT'S INCLUDED

Verify that all items listed below are present in your package:

- 1 x Geokay 16-Inch Rechargeable LED Drawing Pad
- 5 x Colorful Liquid Chalk Markers
- 10 x Double-Sided Tracing Papers
- 1 x USB-C Charging Cable
- 1 x Spray Bottle (for cleaning)
- 1 x Cleaning Cloth
- 1 x User Manual

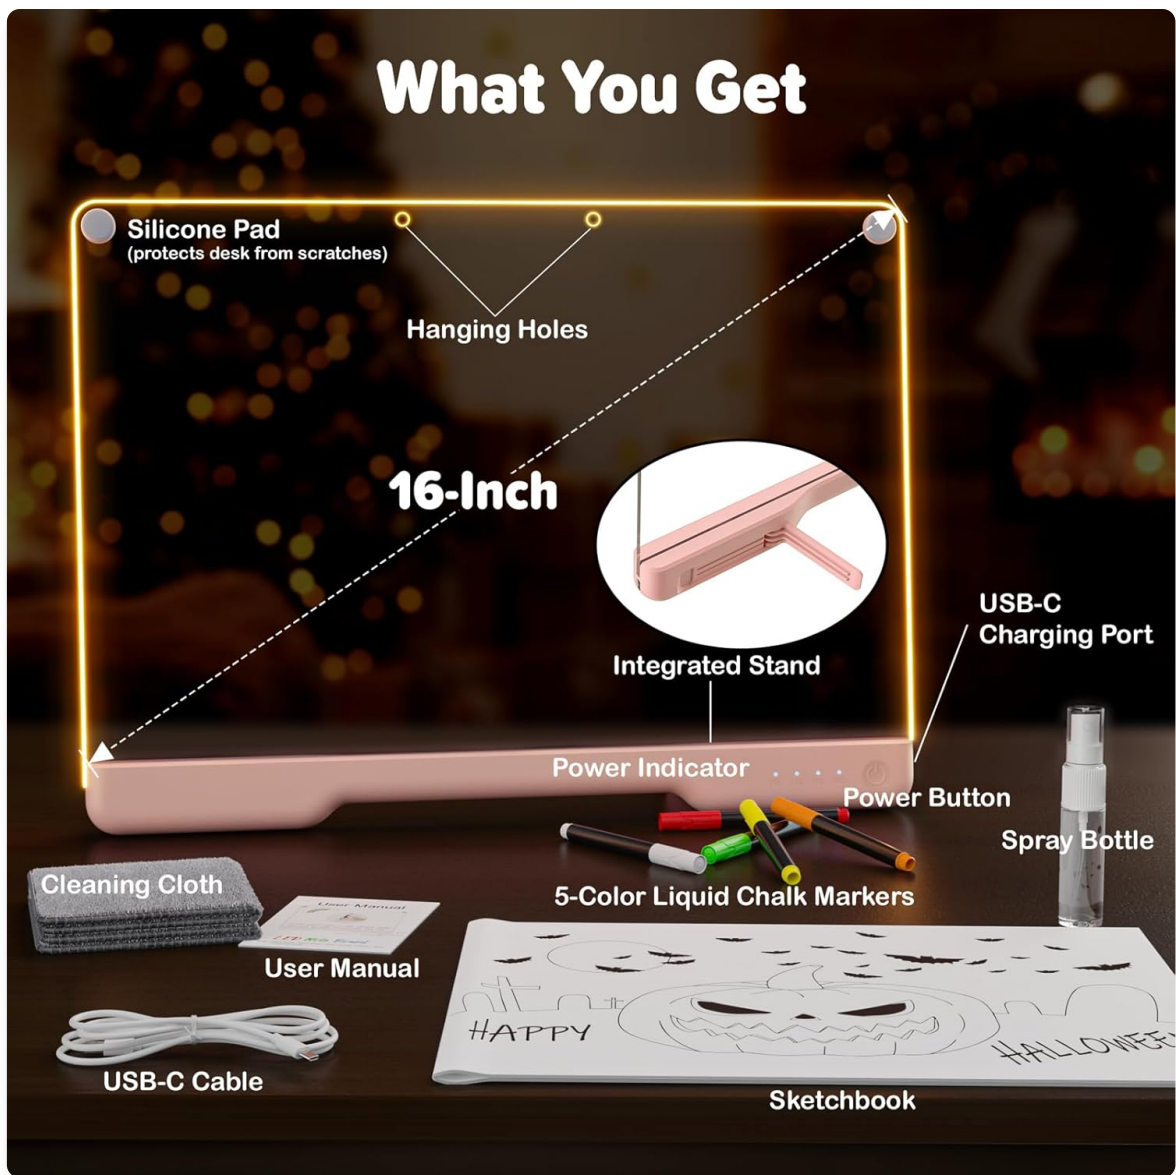


Image: All components included in the Geokay LED Note Board package.

3. SPECIFICATIONS

Feature	Detail
Model Number	E16
Dimensions	13.7 x 13.7 x 10 inches
Item Weight	15 ounces
Material Type	Acrylic, Plastic
Light Modes	7-Color (Warm White, Cold White, Red, Purple, Green, Blue, Flashing Mode)
Battery Type	1 Lithium Polymer battery (included)

Battery Life (Unplugged)	Up to 8 hours
Input	5V-1A (supports all phone charge adapters)
Mounting Type	Tabletop Mount and Wall Mount

4. SETUP

4.1 Initial Charging

Before first use, fully charge the LED Note Board using the provided USB-C cable. The battery indicator lights on the base will show the charging progress. The board supports standard 5V-1A phone chargers.

4.2 Preparing Markers

If the liquid chalk markers' color is not vibrant, shake the pen vigorously to help reactivate the ink flow.

4.3 Using the Built-in Stand

The board features a built-in stand for convenient tabletop use. Simply extend the stand from the back of the board to position it upright. For optimal stability when writing or drawing, ensure only the clear acrylic part rests on the surface, not the entire base.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Light Modes

- To turn the board **ON** or **OFF**, press and hold the power button for 3 seconds.
- To cycle through the 7 available lighting modes (Warm White, Cold White, Red, Purple, Green, Blue, Flashing Mode), single tap the power button.

7 Light Effects With Built-in Stand

Long press to power ON/OFF, single press to cycle through light modes



Image: The LED Note Board demonstrating its 7 different light effects.

5.2 Drawing and Tracing

Use the provided liquid chalk markers to draw directly onto the acrylic surface. The markers' colors will illuminate vibrantly when the board is powered on.

For tracing, place one of the double-sided tracing papers (or your own template) underneath the clear acrylic board. The transparent surface allows you to easily trace the designs. Ensure the clear acrylic board is resting on a flat, stable surface for accurate tracing.

Creative Tracing & Glowing Fun

Tracing book included to inspire kids' imagination and creative doodles



Image: A child using the tracing papers with the LED Note Board.

5.3 Versatile Use

The Geokay LED Note Board can be used as a drawing pad, a message board, a night light, or for decorative purposes. Its rechargeable nature allows for portable use in various settings.

Your browser does not support the video tag.

Video: Official product video demonstrating the rechargeable 7-color LED Note Board in various uses.

6. MAINTENANCE

6.1 Cleaning the Board

To clean the acrylic board and prevent scratches, lightly spray it with water using the included spray bottle, and wipe with the soft cleaning cloth. For drawings left on for over 3 days, a slightly damp cloth or paper towel may be needed for best results.

Important: Do not use alcohol-based cleaning solutions, as they may damage the board's surface.

Effortless Cleaning

For drawings left on for over 3 days, lightly spray with water or use a damp paper towel for best results.



Image: Demonstrating the effortless cleaning process of the LED Note Board.

7. TROUBLESHOOTING

7.1 Markers Not Vibrant

If the pen's color is not vibrant, shake the pen to help re-activate the ink.

7.2 Other Issues

If you encounter any other issues with your product that are not resolved by the above, please refer to the customer service information in Section 8.

8. SAFETY INFORMATION

- Do not use alcohol-based cleaning solutions on the board.
- For optimal stability and accurate tracing, only rest the clear acrylic board on the table when

writing/drawing. Do not place the entire base of the board flat on the table.

- Keep the product away from extreme temperatures and direct sunlight.
- Supervise young children during use to prevent accidental ingestion of small parts or markers.

9. WARRANTY AND SUPPORT

We value your satisfaction. If you encounter any issues with your product, or if it does not meet your expectations, please contact us. We are committed to resolving any problems to your satisfaction.

9.1 Contacting Customer Service

You can reach us via email at: donghaixinx@outlook.com. We aim to respond to all inquiries within 24 hours.

9.2 Amazon Returns/Replacements

If you received a product different from what you ordered, or if the product is defective or not functioning as expected, you can initiate a return or replacement through your Amazon account:

1. Go to Your Orders.
2. Choose the item that you want to return or replace.
3. Select 'Contact Seller'. You will be directed to the Seller Messaging Assistant.
4. Select the appropriate option and start the conversation.