

## Generic Multiple AUNA DisGo Box Models (10033685, 10033686, 10030725, 10030726, 10032598)

# Instruction Manual for Generic Replacement Remote Control

Compatible with AUNA DisGo Box 100, 2100, 10033685, 10033686, 10030725, 10030726, 10032598 Speaker Systems

## INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your new Generic Replacement Remote Control. This remote is designed to be a direct replacement for various AUNA DisGo Box speaker systems, including models 100, 2100, 10033685, 10033686, 10030725, 10030726, and 10032598.

The remote control is pre-programmed and requires no additional setup or coding. Simply insert the batteries, and it will be ready for immediate use with your compatible speaker system.

## SETUP

### 1. Battery Installation

The remote control requires **two (2) AAA batteries** (not included). Please purchase new batteries from a local store before proceeding.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



*Figure 1: Battery compartment with cover removed, showing slots for two AAA batteries.*

## **2. Initial Use**

Once batteries are correctly installed, the remote control is ready for use. No programming or pairing is required. Point the remote directly at your AUNA DisGo Box speaker system and press the desired function button.

## **OPERATING INSTRUCTIONS**

---

The remote control provides full functionality for your compatible AUNA DisGo Box speaker system. Below is a general overview of the buttons and their functions.



Figure 2: Front view of the remote control.

- **POWER:** Turns the speaker system on or off.
- **Number Buttons (0-9):** Used for direct track selection, radio station input, or other numerical inputs depending on the speaker system's mode.
- **FOLDER / SCAN:** Navigates through folders or initiates a scan function (e.g., for FM radio).
- **MODE:** Switches between different input modes (e.g., Bluetooth, USB, SD, AUX, FM, CD).
- **CD / U/SD / AUX / FM:** Direct selection buttons for specific input sources.
- **Previous/Next Track (|<>/|):** Skips to the previous or next track/file.
- **Play/Pause (>||):** Plays or pauses audio playback.
- **VOL+ / VOL-:** Increases or decreases the master volume.
- **EQ:** Cycles through equalizer presets.
- **TUN+ / TUN-:** Adjusts radio frequency up or down.

For specific functions and advanced operations, please refer to the original user manual of your AUNA DisGo Box speaker system.

## MAINTENANCE

### Battery Replacement

If the remote control's range decreases or it becomes unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

### Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or solvents, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

- **Remote not responding:**

- Ensure new batteries are correctly installed with the correct polarity.
- Check if there are any obstructions between the remote control and the speaker system's infrared receiver.
- Make sure you are within the effective range of the speaker system's IR receiver.
- Verify that the speaker system is powered on.

- **Some functions not working:**

- Confirm that your specific AUNA DisGo Box model is listed as compatible. If you are unsure, please contact the seller for verification.
- Ensure the speaker system is in the correct mode for the function you are trying to use (e.g., pressing track skip buttons while in FM radio mode might not work).

If problems persist after following these steps, please contact the seller for further assistance.

## SPECIFICATIONS

Feature	Detail
ASIN	B0F8NQNH7W
Batteries Required	2 AAA batteries (not included)
Manufacturer	Generic
Brand	Generic
Special Feature	No additional programming required
Color	As shown (Black)
Max Number of Supported Devices	1 (Specific AUNA DisGo Box Speaker System)
Compatible Devices	AUNA DisGo Box 100, 2100, 10033685, 10033686, 10030725, 10030726, 10032598 Speaker Systems

## WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact the seller directly through the platform where the product was purchased.

If you are unsure about compatibility with your device, it is recommended to contact the seller before purchase or for troubleshooting assistance.