

PERFASCIN FR60XD

PERFASCIN FR60XD IF-32FSB Replacement Remote Control User Manual

For Intertek Wall Mount Electric Fireplace Heater Models IF-1340, IF-1350, IF-1360

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your PERFASCIN FR60XD IF-32FSB Replacement Remote Control. This remote is designed to operate specific Intertek Wall Mount Electric Fireplace Heater models.

Compatible Intertek Fireplace Heater Models:

- IF-1340
- IF-1350
- IF-1360

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



Image 1: Back of the remote control with the battery compartment open, illustrating where to insert two AAA batteries.

2.2 Initial Use

The PERFASCIN FR60XD remote control requires no programming or pairing. Once batteries are installed, it is ready for immediate use with compatible Intertek electric fireplace heaters.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Intertek electric fireplace heater to ensure proper communication.





Image 2: Front view of the PERFASCIN FR60XD remote control, displaying its button layout.

3.1 Button Functions

- **Power Button** (): Turns the fireplace heater ON or OFF.
- **Heat Button** (☼): Adjusts the heat settings or activates/deactivates the heating element.
- **Flame Button** (): Controls the flame effect, such as brightness or on/off.
- **Light Button** (): Manages the internal lighting of the fireplace.
- **Timer Button** (): Sets or adjusts the operational timer for the fireplace heater.
- **Function Button** (F): May control additional functions such as fan speed or temperature adjustment, depending on the fireplace model.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's range decreases or it stops responding. Always use new AAA batteries and dispose of old batteries responsibly according to local regulations.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the fireplace heater's receiver.
 - Ensure you are within the effective operating range of the fireplace heater.
- **Specific Functions Not Working:**
 - Verify that your specific Intertek fireplace heater model supports the function you are attempting to use.
 - Some functions may require the fireplace heater to be in a specific mode. Refer to your fireplace heater's manual.

6. SPECIFICATIONS

Feature	Detail
Model Number	FR60XD
Product Dimensions	6 x 3 x 0.5 inches (15.24 x 7.62 x 1.27 cm)
Item Weight	1.9 ounces (53.86 grams)
Power Source	2 x AAA Batteries (not included)
Compatible Devices	Intertek Wall Mount Electric Fireplace Heater (Models IF-1340, IF-1350, IF-1360)
Special Feature	No Programming Required



Image 3: Dimensions of the PERFASCIN FR60XD remote control.

7. WARRANTY AND SUPPORT

For any issues, questions, or concerns regarding your PERFASCIN FR60XD IF-32FSB Replacement Remote Control, please contact the manufacturer or seller directly. They can provide assistance and solutions for product-related inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question