

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FanttikRide](#) /

› [FanttikRide C9 Apex Kids Electric Scooter User Manual](#)

FanttikRide C9 Apex

FanttikRide C9 Apex Kids Electric Scooter User Manual

Model: C9 Apex

1. PRODUCT OVERVIEW

The FanttikRide C9 Apex is an electric scooter designed for children aged 8-12, supporting riders between 3.9-5.2 ft tall and up to 132 lbs. It combines fun features with safety, offering adjustable speeds, vibrant lighting, and integrated audio capabilities.



Figure 1: FanttikRide C9 Apex Electric Scooter

2. SAFETY INFORMATION

Before operating the scooter, please read and understand all safety instructions. Failure to follow these instructions may result in serious injury or damage to the product.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Ensure the scooter is fully charged before each use.
- Do not ride in wet conditions, on uneven surfaces, or in heavy traffic.
- Maintain a safe distance from other riders, pedestrians, and vehicles.
- Parental supervision is required for children operating the scooter.
- The electric scooter motor will only activate when the G-sensor switch on the deck is engaged and the speed reaches 3 mph.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- FanttikRide C9 Apex Electric Scooter
- Charging Adapter
- User Manual
- Assembly Tools (Allen wrench)

4. SETUP AND ASSEMBLY

The FanttikRide C9 Apex scooter comes partially assembled. Follow these steps to complete the setup:

1. **Unboxing:** Carefully remove the scooter and all accessories from the packaging. Ensure all protective materials are removed.
2. **Unfolding the Scooter:** Locate the folding mechanism near the base of the handlebar stem. Release the latch and lift the handlebar stem until it locks securely into the upright position.
3. **Attaching the Handlebar:** Insert the handlebar into the top of the stem. Align the holes and secure it using the provided Allen wrench and screws.
4. **Adjusting Handlebar Height:** Locate the height adjustment clamp on the handlebar stem. Open the clamp, press the button on the side, and slide the handlebar to one of the three adjustable heights (31.7, 34.1, or 36.5 inches). Ensure the button clicks into place and then close the clamp securely.

Your browser does not support the video tag.

Video 1: Assembly and Features of the FanttikRide C9 Apex Electric Scooter.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on: Press and hold the power button on the handlebar for a few seconds until the LED display illuminates.
- To power off: Press and hold the power button again for a few seconds.

5.2 Speed Modes and LED Display

The scooter offers three speed settings: Economical (5 mph), Normal (8 mph), and Sport (10 mph). The LED display shows battery status, current speed, and pedal mode.

- To change speed mode: Short press the power button while the scooter is on. The display will show 'E', 'N', or 'S' for the selected mode.
- The LED display provides real-time information about your ride.

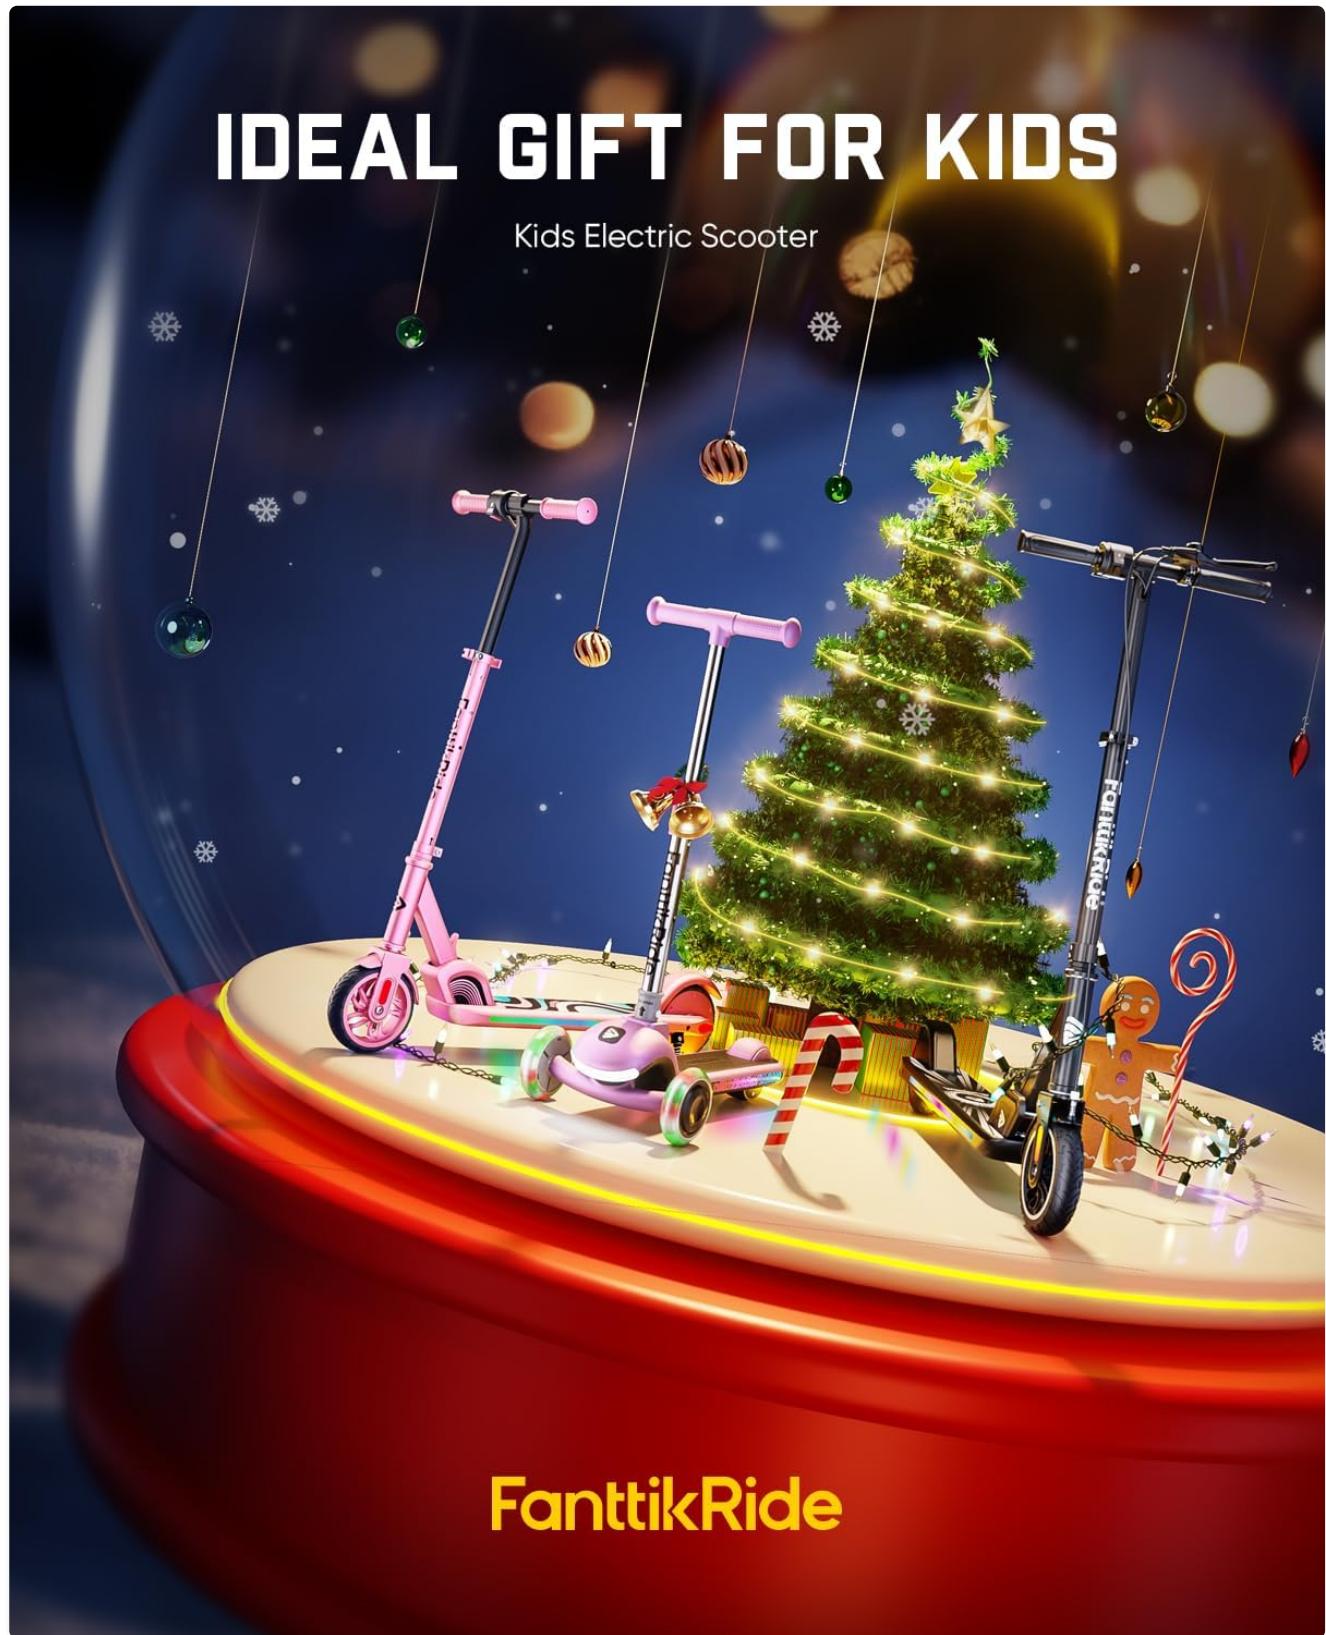


Figure 2: LED Display showing speed modes and battery status.

5.3 Lights and Bluetooth Speaker

The scooter features dazzling rainbow lights with 6 dynamic modes that pulse to music, and a built-in Bluetooth speaker.

- To activate/change lights: Press the light button next to the power button to cycle through 6 dynamic light modes.
- To use Bluetooth speaker: The scooter's Bluetooth speaker will activate automatically when the scooter is powered on. Pair your mobile device with "FanttikRide" to play music. The lights will pulse to the beat of the music.



Figure 3: Scooter with active lights and music feature.

5.4 Riding

- To start riding: Place one foot on the deck and use the other foot to push off the ground to gain initial speed (at least 3 mph).
- Once moving, press the thumb throttle to engage the electric motor.

5.5 Braking

- To brake: Apply pressure to the rear fender brake with your foot.

5.6 Folding and Storage

The scooter features a one-step folding system for easy portability and storage.

- To fold: Locate the folding lever near the base of the handlebar stem. Release the latch and fold the handlebar stem down towards the deck until it clicks into place.
- The compact folded size is approximately 29.5" x 14.6" x 10.6", making it easy to carry and store.



3 ADJUSTABLE HEIGHTS

Two children, a boy and a girl, are shown adjusting the handlebar height of a kick scooter. The boy is on the left, wearing a blue helmet and grey shirt, and the girl is on the right, wearing a pink helmet and pink shirt. The scooter has a black deck with colorful graphics and yellow wheels. The background shows a residential area with a house and a lawn.

Height	Rider Height	Age
31.7in / 34.1in / 36.5in	3.9ft / 5.2ft	8-12 Years

Figure 4: Scooter in folded position for transport or storage.

6. CHARGING

To charge the scooter, locate the charging port on the handlebar. Connect the provided charging adapter to the port and then plug it into a standard electrical outlet.

- Ensure the scooter is powered off before charging.
- A full charge provides approximately 5 miles of range for a rider weighing 110 lbs, or up to 40 minutes of ride time.
- Note: Please fully charge the battery after each ride. If the battery is left idle with low power for a long time, it may be unable to recharge.

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- Keep the scooter clean and dry. Wipe down with a damp cloth after use.
- Regularly check all screws and fasteners to ensure they are tight.
- Inspect the wheels and brakes for wear and tear. Replace parts as needed.
- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter any issues with your FanttikRide C9 Apex scooter, refer to the following common troubleshooting tips:

- **Scooter not turning on:** Ensure the battery is charged. Press and hold the power button for the required duration.
- **Motor not engaging:** Confirm the scooter has reached an initial speed of 3 mph and the G-sensor on the deck is activated before pressing the throttle.
- **Lights not working:** Check battery level. Press the light button to cycle through modes.
- **Bluetooth not connecting:** Ensure the scooter is powered on and your device's Bluetooth is enabled. Try restarting both devices.
- **Error Codes (e.g., 'EO code' from reviews):** Consult the full user manual for specific error code definitions and solutions. If the issue persists, contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	FanttikRide
Model Name	C9 Apex
Color	Blue
Age Range (Description)	Kids 8+
Weight Limit	132.27 Pounds (60 kg)

Product Dimensions	32.44" L x 14.57" W x 36.5" H
Item Weight	14 Pounds
Number of Wheels	2
Wheel Material	Rubber
Frame Material	Aluminum
Special Feature	Adjustable Handlebar Height (31.7" / 34.1" / 36.5")
Maximum Speed	10 mph (3 adjustable settings: 5, 8, 10 mph)
Maximum Distance Range	5 Miles (per charge for 110 lbs rider)
Brake Style	Rear Braking
Included Components	Scooter

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The FanttikRide C9 Apex Electric Scooter comes with a Limited Warranty. Please refer to the full warranty documentation included in your package for details on coverage and duration.

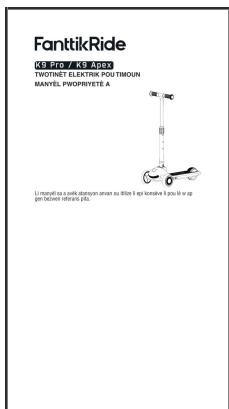
10.2 Customer Support

 
For further assistance, troubleshooting, or warranty claims, please contact FanttikRide customer support through their official website or the contact information provided in your product packaging.

Your browser does not support the video tag.

Video 2: "Spark Joy on Wheels with FanttikRide" - A promotional video showcasing the scooter's features and fun.

Related Documents - C9 Apex

 <p>FanttikRide K9 Pro / K9 Apex ΤΥΠΩΝΕΣ ΕΛΕΚΤΡΙΚΗΣ ΠΟΥΤΙΡΙΟΥ ΜΑΝΙΓΛΙΑ ΠΡΟΠΗΤΕΙΑΣ</p>	<p><u>FanttikRide K9 Pro / K9 Apex Electric Scooter for Kids - Owner's Manual</u></p> <p>Comprehensive owner's manual for the FanttikRide K9 Pro and K9 Apex electric scooters for kids, covering safety, assembly, operation, maintenance, and troubleshooting. Learn how to safely operate and care for your electric scooter.</p>
--	--

 <p>FanttikRide K9 Pro / K9 Apex MONOPATTINO ELETTRICO PER BAMBINI MANUALE DEL PROPRIETARIO</p> <p>Leggere questo manuale con attenzione e conservare per riferimento futuro.</p>	<p>FanttikRide K9 Pro / K9 Apex Electric Scooter for Children Owner's Manual</p> <p>Comprehensive owner's manual for the FanttikRide K9 Pro and K9 Apex electric scooters for children. This guide covers essential safety warnings, package contents, product overview, setup instructions, charging procedures, Bluetooth pairing, riding guidance, maintenance tips, specifications, troubleshooting, and warranty information.</p>
 <p>FanttikRide T10/T10 Apex ELECTRIC SCOOTER FOR KIDS OWNER'S MANUAL</p> <p>Read this manual carefully before use and keep it for future reference.</p>	<p>FanttikRide T10/T10 Apex Electric Scooter for Kids Owner's Manual</p> <p>Comprehensive owner's manual for the FanttikRide T10 and T10 Apex electric scooters for kids, covering safety, assembly, operation, maintenance, specifications, and warranty information.</p>
 <p>FanttikRide K9 Pro / K9 Apex ELECTRIC SCOOTER FOR KIDS OWNER'S MANUAL</p> <p>Read this manual carefully before use and keep it for future reference.</p>	<p>FanttikRide K9 Pro / K9 Apex Electric Scooter Owner's Manual</p> <p>Comprehensive owner's manual for the FanttikRide K9 Pro and K9 Apex electric scooters for kids, covering setup, safety, operation, maintenance, and troubleshooting.</p>
 <p>FanttikRide C9 Pro/C9 Apex ELECTRIC SCOOTER FOR KIDS OWNER'S MANUAL</p> <p>Read the manual carefully before use and keep it for future reference.</p>	<p>FanttikRide C9 Pro/C9 Apex Electric Scooter for Kids Owner's Manual</p> <p>Comprehensive owner's manual for FanttikRide C9 Pro and C9 Apex electric scooters for kids, covering safety, assembly, operation, maintenance, troubleshooting, and warranty.</p>
 <p>FanttikRide K9 Pro / K9 Apex 儿童电动滑板车 说明书</p> <p>使用前请仔细阅读本手册，并将其保存以备将来参考。</p>	<p>FanttikRide K9 Pro / K9 Apex Electric Scooter Owner's Manual</p> <p>Comprehensive owner's manual for the FanttikRide K9 Pro and K9 Apex electric scooters, covering safety, setup, operation, maintenance, specifications, troubleshooting, and warranty information.</p>