

[Manuals.plus](#) /

› [GE](#) /

› GE Big Button Universal Remote Control User Manual

GE 83036

GE Big Button Universal Remote Control User Manual

Brand: GE | Model: 83036

INTRODUCTION

This manual provides comprehensive instructions for the GE Big Button Universal Remote Control, model 83036. This remote is designed to consolidate control of up to two devices, such as your TV, soundbar, streaming device, cable, and satellite. Its large, simplified keypad and ergonomic design ensure ease of use and comfortable operation for all users.

SETUP

Before using your universal remote control, you will need to install batteries and program it to control your devices.

1. Battery Installation

The remote requires two AAA batteries (not included). Ensure correct polarity when inserting the batteries.



Image: The GE Universal Remote Control with an overlay indicating the requirement for two AAA batteries, which are not included. This image illustrates where the batteries are inserted.

2. Device Programming

The GE Universal Remote Control offers simple, user-friendly setup with your choice of automatic code search or direct code entry programming. It is preprogrammed for immediate use with Samsung TVs and Roku boxes.

For other brands, refer to the included code list or use the automatic code search function. Detailed step-by-step programming videos are also available online for assistance.

Patent Pending

Preprogrammed
for Samsung TVs
and Roku boxes




Image: The GE Universal Remote Control resting on a wooden surface, with text overlays highlighting that it is preprogrammed for Samsung TVs and Roku boxes. This demonstrates its out-of-the-box compatibility with these popular brands.

OPERATING INSTRUCTIONS

This section details the primary functions and operation of your GE Universal Remote Control.

Basic Functions

- **Power Button:** Turns your device on or off.
- **Volume Control (+/-):** Adjusts the volume level. The master volume control feature allows you to adjust audio regardless of which device is being used.
- **Channel Control (CH +/-):** Changes channels.
- **Input Button:** Cycles through available input sources on your TV.
- **Number Pad (0-9):** For direct channel entry.
- **Directional Pad (Up, Down, Left, Right, OK):** Used for navigating menus and smart TV interfaces.

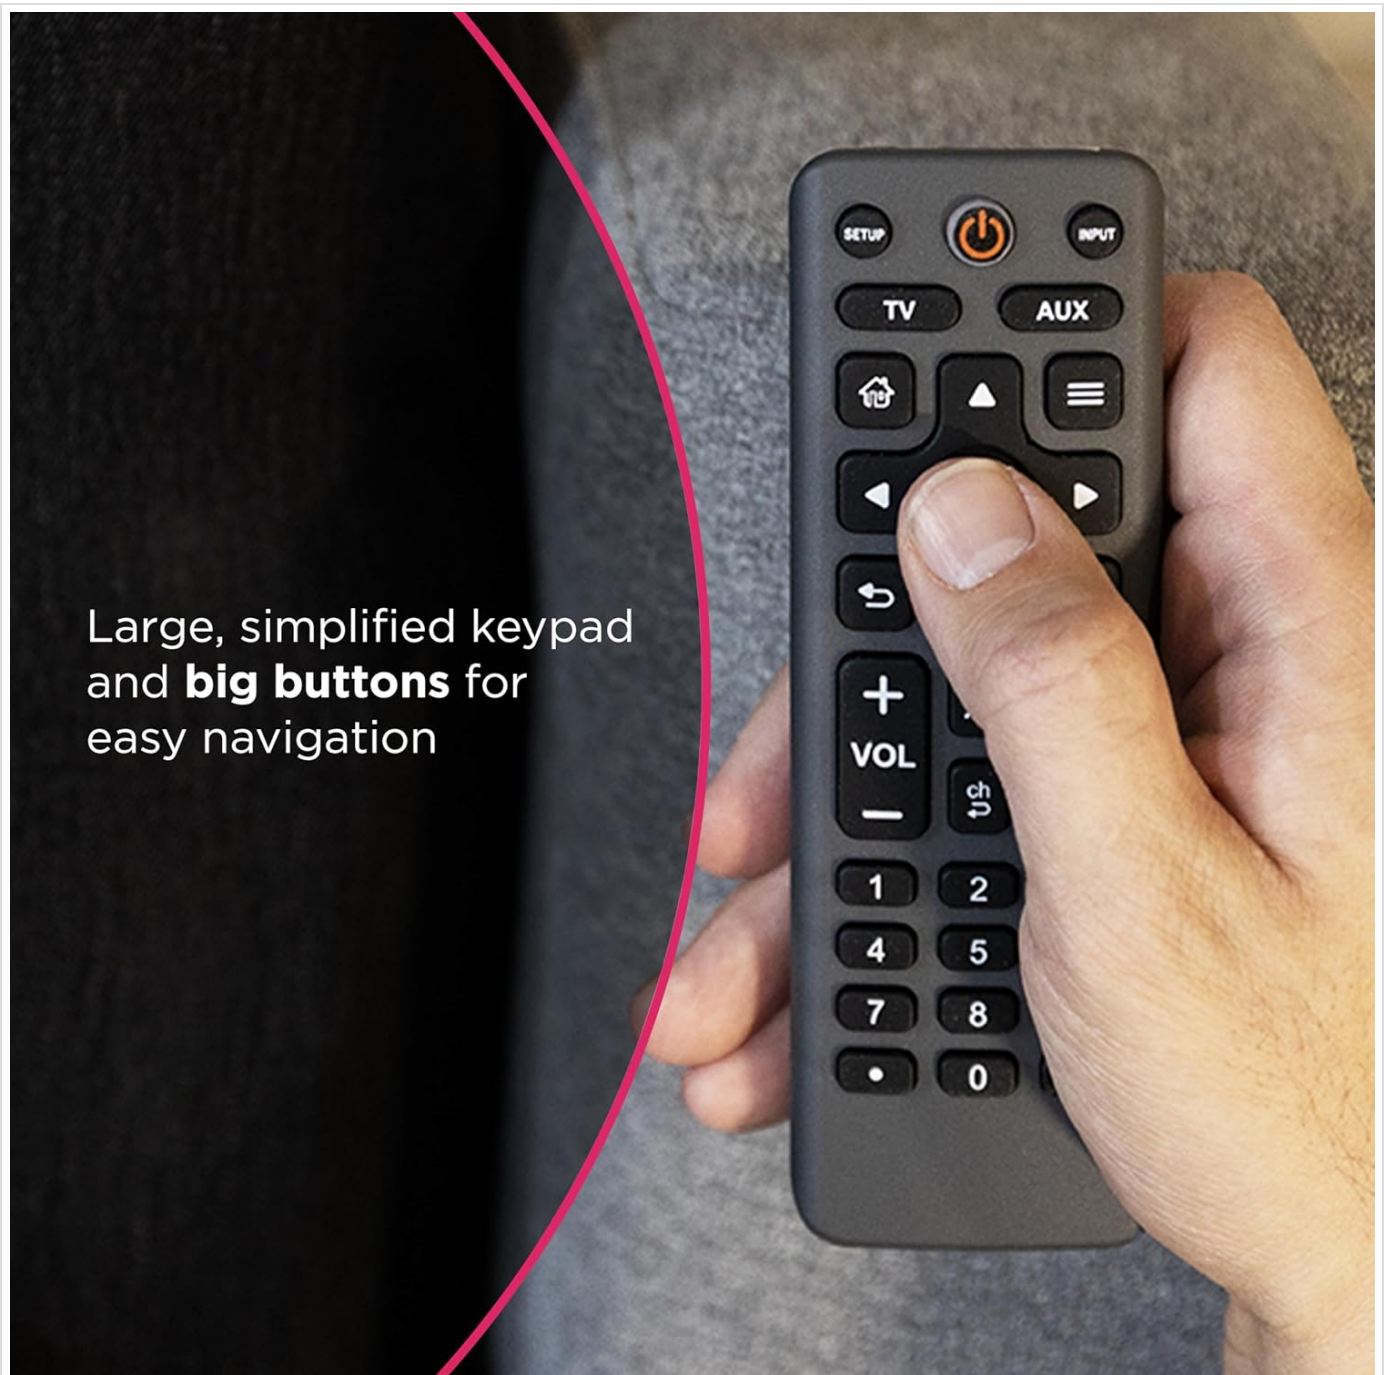

Large, simplified keypad
and **big buttons** for
easy navigation

Image: A hand holding the GE Universal Remote Control, showcasing its ergonomic design and the large, easy-to-read buttons. This image highlights the user-friendly nature of the remote's keypad for easy navigation.

Multi-Device Configuration

The remote is designed to control up to two devices. Use the dedicated device buttons (e.g., TV, AUX) to switch control between your programmed devices.



Image: A close-up of the GE Universal Remote Control, with a red box highlighting the "TV" and "AUX" buttons. This visual explains how to switch between the two configured devices, such as a television and an auxiliary component.

MAINTENANCE

Battery Replacement

When the remote's performance degrades or buttons become unresponsive, it is likely time to replace the AAA batteries. Follow the battery installation steps outlined in the Setup section.

Cleaning

To clean the remote, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the remote in water.

TROUBLESHOOTING

If you encounter issues with your GE Universal Remote Control, please review the following common solutions:

- **Remote not responding:** Ensure batteries are correctly installed and not depleted. Replace if necessary.
- **Device not responding to remote:** Verify that the remote is programmed correctly for the specific device. Try re-programming using direct code entry or automatic code search.
- **Buttons not working:** Check for obstructions or dirt around the buttons. Ensure the correct device mode (TV, AUX) is selected on the remote.
- **Limited functionality with Smart TVs/Streaming Devices:** This remote is designed for basic control. Advanced functions requiring on-screen cursor movement or specific app buttons may not be supported.

For further assistance, refer to the online step-by-step programming videos or contact technical support.

SPECIFICATIONS

Brand	GE
Model Number	83036
Package Dimensions	7.2 x 2.4 x 1.18 inches
Item Weight	3.2 ounces
Batteries Required	2 AAA batteries
Max Number of Supported Devices	2
Compatible Devices	Television, Streaming Device, Soundbar, Cable Box
Color	Charcoal
Country of Origin	Vietnam



Image: The GE Universal Remote Control shown with its approximate dimensions (length, width, and thickness) indicated in inches. This provides a clear visual reference for the physical size of the remote.

WARRANTY INFORMATION

Specific warranty details for the GE Big Button Universal Remote Control are typically provided with the product packaging or can be found on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical support or further assistance with programming and operation, free U.S.-based technical support is

available Monday-Friday. Additionally, online step-by-step programming videos are accessible to guide you through the setup process.

Please visit the official GE product support website for contact information and online resources.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I select the input using the GE 83036 Big Button Universal Remote Control?

To select or change the input source on your TV using the GE 83036 Big Button Universal Remote Control, follow these steps:Locate the Input Button on the remote. According to the manual, this button...

[Read full answer](#)