

RadioShack 100241039

RadioShack Wireless Ergonomic Mouse User Manual

Model: 100241039

INTRODUCTION

Thank you for choosing the RadioShack Wireless Ergonomic Mouse. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new mouse. Designed for comfort during extended use, this mouse features an ergonomic design, 6 functional buttons, and versatile wireless connectivity.



Figure 1: RadioShack Wireless Ergonomic Mouse, showcasing its ergonomic shape.

PACKAGE CONTENTS

- RadioShack Wireless Ergonomic Mouse
- USB Receiver (typically stored inside the mouse or packaging)
- USB Type-C Charging Cable
- User Manual (this document)



Figure 2: The mouse alongside its retail packaging, indicating typical package contents.

SETUP

Charging the Mouse

The mouse comes with a built-in 500 mAh rechargeable battery. Before first use, it is recommended to fully charge the mouse.

1. Locate the USB Type-C charging port on the front of the mouse.
2. Connect the provided USB Type-C cable to the mouse and the other end to a USB power source (e.g., computer USB port, USB wall adapter).
3. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.



Figure 3: Side view of the mouse highlighting the USB Type-C charging port.

Connecting the Mouse

The mouse supports both 2.4 GHz wireless via a USB receiver and Bluetooth 5 connectivity.

2.4 GHz Wireless Connection:

1. Locate the USB receiver, usually found in a compartment on the bottom of the mouse or within the packaging.
2. Insert the USB receiver into an available USB port on your computer.
3. Turn on the mouse using the ON/OFF switch located on the bottom.
4. The mouse should automatically connect to your computer.

Bluetooth 5 Connection:

1. Turn on the mouse using the ON/OFF switch on the bottom.
2. Press and hold the Bluetooth pairing button (if available, often combined with the mode switch on the bottom) until the indicator light flashes, indicating pairing mode.
3. On your computer, go to Bluetooth settings and search for new devices.
4. Select "RadioShack Mouse" or a similar name from the list of available devices to pair.



Figure 4: Bottom view of the mouse, showing the ON/OFF switch and optical sensor.

OPERATING THE MOUSE

The RadioShack Ergonomic Mouse is designed for intuitive use with its 6-button layout and adjustable sensitivity.

Button Functions:

- **Left Click Button:** Standard primary click function.
- **Right Click Button:** Standard secondary click function.
- **Scroll Wheel:** Scroll up/down, and middle click.
- **DPI Button:** Adjusts cursor sensitivity (DPI).

- **Forward Button:** (Side button) Navigates forward in web browsers or file explorers.
- **Backward Button:** (Side button) Navigates backward in web browsers or file explorers.



Figure 5: Top view of the mouse, indicating the DPI button and side navigation buttons.

DPI Adjustment:

Press the DPI button (located near the scroll wheel) to cycle through the available DPI settings: 1000, 1200, and 1600 DPI. Choose the sensitivity that best suits your needs for precision or speed.

Ergonomic Design:

The vertical ergonomic design of this mouse is intended to reduce wrist strain and provide a more natural hand posture, making it comfortable for prolonged use.

MAINTENANCE

Proper care will extend the life of your RadioShack Wireless Ergonomic Mouse.

- **Cleaning:** Use a soft, dry cloth to clean the surface of the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** To maximize battery lifespan, avoid fully discharging the mouse frequently. Recharge it when the battery low indicator (if present) appears. Store the mouse in a cool, dry place when not in use for extended periods.
- **Storage:** When transporting or storing the mouse, ensure the USB receiver is securely placed in its dedicated compartment to prevent loss.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mouse not responding.	Battery is low or dead. Mouse is turned off. USB receiver not connected or loose. Bluetooth not paired.	Charge the mouse. Turn on the mouse. Re-insert the USB receiver firmly. Re-pair via Bluetooth.
Cursor movement is erratic or jumpy.	Dirty optical sensor. Mouse used on an unsuitable surface.	Clean the optical sensor with a soft cloth. Use the mouse on a clean, non-reflective mouse pad or surface.
Connectivity issues (frequent disconnections).	Interference from other wireless devices. Mouse too far from receiver/computer.	Move the mouse closer to the receiver/computer. Avoid using near other strong wireless signals. Try a different USB port.
Side buttons not working.	Software conflict or application specific.	Ensure the application supports forward/backward navigation. Restart the computer.

SPECIFICATIONS

Feature	Detail
Brand	RadioShack
Model Number	100241039
Connectivity	Wireless 2.4 GHz, Bluetooth 5
Buttons	6 (Left, Right, Scroll Wheel, DPI, Forward, Backward)
DPI Resolution	1000, 1200, 1600 DPI (Adjustable)
Battery	500 mAh Rechargeable
Charging Port	USB Type-C
Wireless Range	Up to 10 meters
Dimensions	12 x 6 x 0.1 cm (approximate, based on product data)
Weight	141 g (approximate, based on product data)
Color	Black

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official RadioShack website. Keep your proof of purchase for any warranty claims.

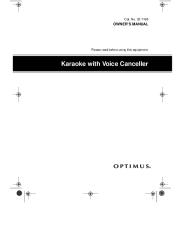
Online Resources:

- For frequently asked questions and product registration, visit the official RadioShack support page.

- Check for driver updates or software utilities on the manufacturer's website if available.

© 2025 RadioShack. All rights reserved.
Product specifications are subject to change without notice.

Related Documents - 100241039

	<p><u>RadioShack Ergonomic Wireless Bluetooth Mouse 2604735 User Manual</u> Comprehensive user guide for the RadioShack Ergonomic Wireless Bluetooth Mouse (model 2604735), covering package contents, system requirements, technical specifications, usage instructions for 2.4GHz and Bluetooth modes, troubleshooting, and FCC compliance.</p>
	<p><u>RadioShack GT-KB36GCM Wireless Keyboard and Mouse Combo - Product Overview and Specifications</u> Detailed specifications and features for the RadioShack GT-KB36GCM wireless keyboard and mouse combo, including 2.4GHz technology, ergonomic design, multimedia keys, and FCC compliance information.</p>
	<p><u>RadioShack Transparent Wireless Gaming Mouse 2604734 User Manual</u> User manual for the RadioShack Transparent Wireless Gaming Mouse, Model 2604734. Includes setup, operating instructions, specifications, and safety precautions.</p>
	<p><u>RadioShack 4-Button Ultrathin Wireless Mouse User Manual (Models 2604802, 2604803)</u> Comprehensive user manual for the RadioShack 4-Button Ultrathin Wireless Mouse (Models 2604802, 2604803). Includes setup, features, technical specifications, troubleshooting, and FCC compliance information.</p>
	<p><u>RadioShack 4001942 & 4001944 Dual PA Speaker User Manual</u> User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
	<p><u>Optimus 32-1168 Karaoke with Voice Canceller Owner's Manual</u> Owner's manual for the Optimus 32-1168 Karaoke with Voice Canceller. Learn how to connect, operate, and maintain your karaoke system, including features like voice cancellation and echo control.</p>

