



[Manuals.plus](#) /

› [Orient Electric](#) /

› Orient Electric Stand 81 400 MM Pedestal Fan User Manual

Orient Electric Stand 81

Orient Electric Stand 81 Pedestal Fan User Manual

Model: Stand 81 | Brand: Orient Electric

INTRODUCTION

Thank you for choosing the Orient Electric Stand 81 Pedestal Fan. This manual provides essential information for the safe and efficient use of your fan. Please read these instructions carefully before assembly and operation, and retain them for future reference.



Image: The Orient Electric Stand 81 Pedestal Fan in black, showcasing its design and features like speed control and air delivery.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or any objects through the fan guards when the fan is operating.
- Unplug the fan from the power outlet before cleaning, moving, or performing any maintenance.
- Do not operate the fan with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer or a qualified service agent.
- Keep the fan away from water or other liquids. Do not use it in wet or damp environments.
- This fan is equipped with **Thermal Overload Protection** to prevent overheating. If the fan shuts off unexpectedly, unplug it and allow it to cool down before restarting.
- Supervise children to ensure they do not play with the appliance.



orient
electric

Safety
that stands by you



Thermal Overload
safety

Image: A child standing near the fan, illustrating the safety features including thermal overload protection.

PACKAGE CONTENTS

Carefully unpack the box and ensure all the following components are present:

- Motor & Switch Box Assembly
- Pipe Assembly
- Bottom Base
- Front Guard
- Back Guard & Blades (in knocked down condition)

ASSEMBLY INSTRUCTIONS

Assembly of your Orient Electric Stand 81 Pedestal Fan is straightforward and requires no special tools. Follow these steps:

1. **Attach Back Guard:** Fix the back guard onto the motor assembly and tighten securely.
2. **Fix the Blade:** Slide the fan blade onto the motor spindle. Ensure it is seated correctly and secure it with the provided cap/nut.
3. **Attach Front Guard:** Align the front guard with the back guard, ensuring the logo is correctly oriented. Secure the front guard using the clips or screws provided.
4. **Assemble Stand:** Connect the pipe assembly to the bottom base and then attach the motor and guard assembly to the top of the pipe. Ensure all connections are firm and stable.



Assemble in minutes

No tools needed

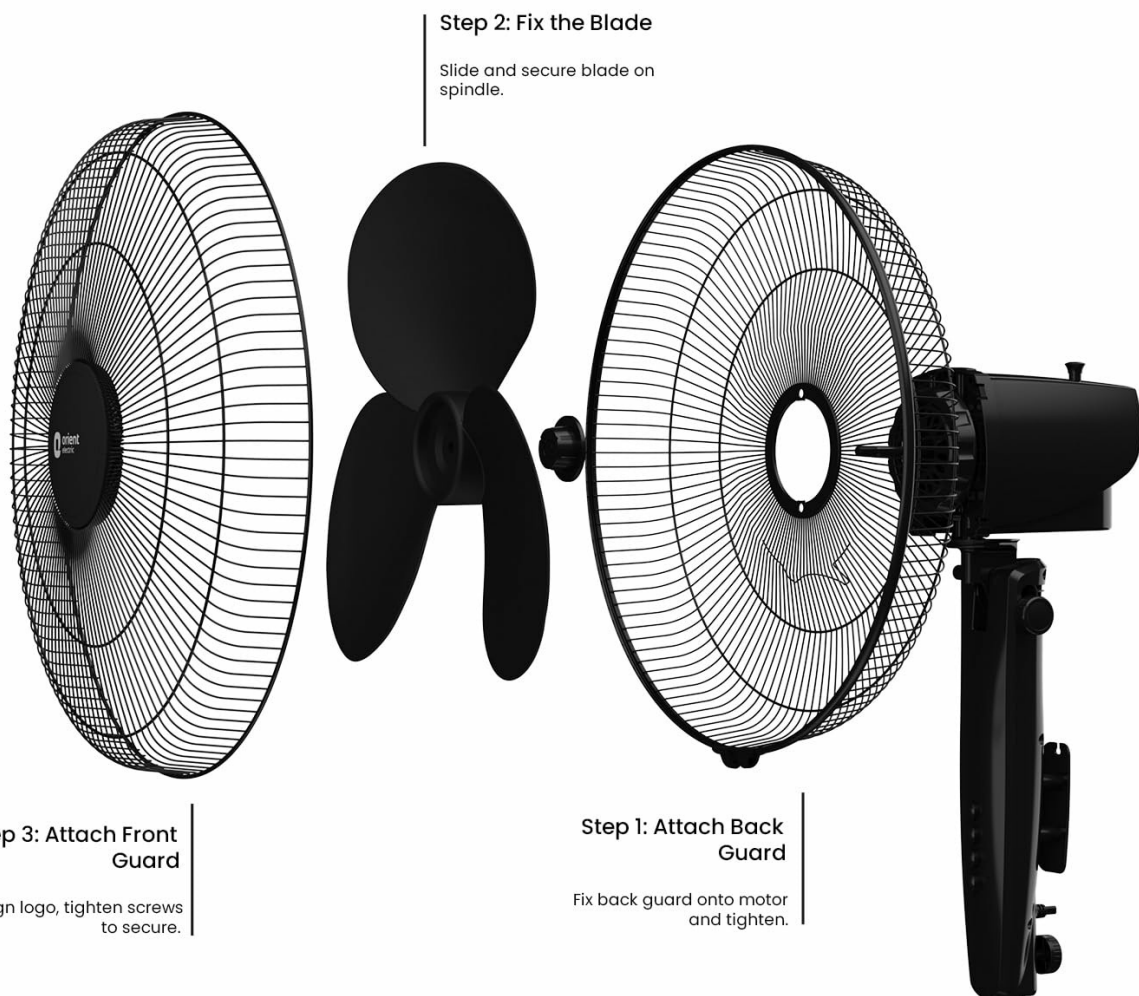


Image: A visual guide illustrating the three main steps for assembling the fan: attaching the back guard, fixing the blade, and attaching the front guard.

OPERATING INSTRUCTIONS

Once assembled, your fan is ready for use. Ensure it is plugged into a suitable power outlet.

- **Power On/Off and Speed Control:** Use the piano switch controls located on the fan's body to turn the fan on and off, and to select one of the three available speed settings (Low, Medium, High).
- **Oscillation:** To activate the 90-degree oscillation feature, press down the oscillation knob located on top of

the motor housing. To stop oscillation, pull the knob up.

- **Up and Down Tilt:** Adjust the fan head's vertical angle by loosening the tilt adjustment knob, positioning the head to your desired angle, and then tightening the knob securely.
- **Height Adjustment:** The fan's height can be adjusted. Loosen the height adjustment collar on the stand, raise or lower the fan to the desired height, and then firmly tighten the collar.



Image: The fan highlighting the piano switch speed control buttons on the main body.



Image: Illustrations demonstrating the 90-degree oscillation, up and down tilt, and adjustable height features of the pedestal fan.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. For the fan blades and guards, use a soft brush or vacuum cleaner to remove dust. Do not use abrasive cleaners or immerse the fan in water.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place. Utilize the integrated **cord winder** to keep the power cord neat and prevent tangling or damage.
- **Motor:** The 100% copper winding motor is designed for long-lasting reliability and requires no lubrication.



Cord winder for a clutter-free life

Image: A close-up view of the integrated cord winder on the fan's stand, designed for tidy storage.

TROUBLESHOOTING

If you encounter any issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not working; thermal overload activated.	Ensure fan is securely plugged in. Check power outlet with another appliance. If thermal overload activated, unplug and allow to cool for 30 minutes before restarting.
Weak airflow.	Fan speed set too low; guards or blades are dirty.	Increase fan speed. Unplug fan and clean guards and blades to remove dust buildup.

Problem	Possible Cause	Solution
Fan makes unusual noise.	Loose parts; fan not on a level surface; obstruction in blades.	Check for loose screws or components and tighten. Ensure fan is on a stable, flat surface. Unplug and check for any obstructions around the blades.
Oscillation not working.	Oscillation knob not engaged correctly.	Ensure the oscillation knob on top of the motor housing is pressed down firmly.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Model Name	Stand 81
Brand	Orient Electric
Type	Pedestal Fan (Floor Fan)
Colour	Black
Power Source	Corded Electric
Wattage	55 Watts
Number of Speeds	3
Air Flow Capacity	75 Cubic Meters Per Minute (CMM)
Speed	1330 RPM
Blade Length	400 Millimetres
Number of Blades	3
Special Features	Oscillating, Up and Down Tilt, Adjustable Height, Thermal Overload Protection, Cord Winder, 100% Copper Motor
Product Dimensions (D x W x H)	55D x 15W x 56.5H Centimeters
Item Weight	5.2 Kilograms
Material	Plastic
Indoor/Outdoor Usage	Indoor
Control Method	Push Button
Country of Origin	India

WARRANTY AND SUPPORT

Your Orient Electric Stand 81 Pedestal Fan comes with a **2-year warranty** from the date of purchase, covering

manufacturing defects under normal use. Please retain your purchase receipt as proof of warranty.

For warranty claims, technical assistance, or any other inquiries, please contact Orient Electric customer support:

- **Customer Service:** Refer to the contact information provided on your product packaging or the official Orient Electric website.
- **Online Support:** Visit the [Orient Electric website](#) for FAQs and support resources.