

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DEVIA](#) /
- › [DEVIA OWS Pro2 Clip-on Wireless Earbuds User Manual](#)

DEVIA OWS Pro2

DEVIA OWS Pro2 Clip-on Wireless Earbuds User Manual

Model: OWS Pro2 | Brand: DEVIA

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your DEVIA OWS Pro2 Clip-on Wireless Earbuds. Please read this manual thoroughly before using the product and retain it for future reference.

The DEVIA OWS Pro2 earbuds are designed for a secure and comfortable fit, ideal for various activities. They feature a dual-chip system for enhanced sound quality, delivering clear and faithful audio reproduction. With an extended battery life of up to 40 hours, they are suitable for prolonged use. The directional sound technology provides an immersive audio experience with minimal latency, making them suitable for gaming and other media consumption.

PACKAGE CONTENTS

- DEVIA OWS Pro2 Clip-on Wireless Earbuds (Left and Right)
- Charging Case
- User Manual (this document)
- Charging Cable (Type-C, typically included)



Image: The retail packaging for the DEVIA OWS Pro2 Clip-on Wireless Earbuds, showing the earbuds and charging case.

SETUP

1. Initial Charging

1. Before first use, fully charge the earbuds and the charging case.
2. Connect the charging cable (typically USB-C) to the charging port on the case and to a power source.
3. The indicator light on the case will show charging status. Once fully charged, the light will change or turn off.
4. Place the earbuds into the charging case to charge them. Ensure they are properly seated.



Image: Top view of the DE VIA OWS Pro2 charging case, indicating its compact design.

2. Bluetooth Pairing

1. Open the charging case. The earbuds will automatically enter pairing mode (or manually activate pairing mode as per specific product instructions, usually by pressing a button on the case or earbuds).
2. On your device (smartphone, tablet, computer, game console), go to Bluetooth settings.
3. Search for available devices. You should see "DEVIA OWS Pro2" or a similar name appear in the list.
4. Select "DEVIA OWS Pro2" to connect. Once connected, a confirmation sound or indicator light will signal successful pairing.
5. If pairing fails, turn off Bluetooth on your device, restart the earbuds (by placing them back in the case and taking them out), and try again.

OPERATING INSTRUCTIONS

Wearing the Earbuds

The OWS Pro2 earbuds feature a clip-on, open-ear design. Gently clip each earbud onto your ear, ensuring the audio output is positioned correctly for optimal sound delivery without blocking your ear canal. Adjust for a comfortable and secure fit.



Image: The DE VIA OWS Pro2 Clip-on Wireless Earbuds shown outside their charging case, highlighting their design.

Basic Controls (General)

Specific control functions (e.g., play/pause, skip track, volume, answer call) are typically managed via touch sensors on the earbuds. Refer to the quick start guide included with your product for detailed touch control gestures. Common functions include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.

Power On/Off

- **Power On:** The earbuds typically power on automatically when removed from the charging case.
- **Power Off:** Place the earbuds back into the charging case. They will automatically disconnect and power off.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and ensure they remain charged. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** While designed for active use, avoid submerging the earbuds in water. Wipe off sweat or moisture immediately after use.
- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds frequently. Charge them regularly.

TROUBLESHOOTING

Earbuds not pairing or connecting:

- Ensure both earbuds are charged.
- Make sure Bluetooth is enabled on your device.
- Place the earbuds back in the case, close it, wait a few seconds, then open it again to reset.
- Forget "DEVIA OWS Pro2" from your device's Bluetooth list and attempt to pair again.
- Ensure the earbuds are within the effective Bluetooth range of your device (typically 10 meters/33 feet).

No sound or low volume:

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are properly connected to your device.
- Try playing audio from a different application or source.

Charging issues:

- Verify the charging cable is securely connected to both the case and the power source.
- Try a different charging cable or power adapter.
- Ensure the charging contacts on the earbuds and inside the case are clean and free of debris.

SPECIFICATIONS

Model Name	OWS Pro2 Clip-on Wireless
Brand	DEVIA
Model Number	P06942297112261
Connectivity Technology	Wireless (Bluetooth)
Battery Life (Average)	Up to 40 Hours
Compatible Devices	Mobile phones, Tablets, Desktop computers, Game consoles
Specific Uses	Sport, Video Games

Dimensions (Package)	10 x 10 x 3 cm; 200 g
Color	Black
Ear Placement	Open-ear, Clip-on design

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official DEVIA website. You may also contact DEVIA customer support through the retailer where the product was purchased.

Manufacturer: Devia

Official Brand Store: [DEVIA México on Amazon](#)

© 2025 DEVIA. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.