

SnapFresh SP5091

SnapFresh 4V Cordless Electric Scissors User Manual

Model: SP5091

1. INTRODUCTION

Thank you for choosing the SnapFresh 4V Cordless Electric Scissors. This tool is designed for efficient cutting of various materials such as cardboard, fabric, carpet, and leather. Please read this manual thoroughly before operation to ensure safe and effective use. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always prioritize safety when operating any power tool. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

2.1 General Safety

- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- Always wear appropriate personal protective equipment, including safety glasses, gloves, and hearing protection if necessary.

2.2 Electrical Safety

- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling, or unplugging the power tool. Keep cord away from heat, oil, sharp edges, or moving parts. Damaged or entangled cords increase the risk of electric shock.

2.3 Blade Safety

- Ensure the safety lock is engaged when the tool is not in use or when changing blades.
- Always use sharp, undamaged blades. Dull blades can bind and cause kickback.
- Keep hands and fingers away from the rotating blade during operation.
- Do not attempt to cut materials thicker than 1/4 inch (6.35 mm).

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking.

- 1 x Cordless Electric Scissors (SP5091)
- 1 x Extra SKS7 Alloy Blade
- 1 x USB Type-C Charging Cable
- 1 x User Manual
- 1 x Storage Bag



Image: The complete kit, showing the electric scissors, an extra blade, a USB charging cable, the user manual, and a storage

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your SnapFresh Electric Scissors.



Image: A detailed view of the electric scissors, pointing out the SKS7 alloy blade, safety switch, LED status indicator, Type-C charging port, and built-in LED light.

- **SKS7 Alloy Blade:** Durable and self-sharpening for precise cuts.
- **Safety Switch:** Prevents accidental activation.
- **LED Status Indicator:** Shows battery charge level.
- **Type-C Charging Port:** For convenient recharging.
- **Built-in LED Light:** Illuminates the cutting area for improved visibility.

5. SETUP

5.1 Charging the Battery

The tool is powered by a 4V 2.0Ah rechargeable battery. Ensure the battery is fully charged before first use.

1. Locate the Type-C charging port on the tool.
2. Connect the provided USB Type-C charging cable to the tool and a compatible USB power adapter (not included).
3. The LED status indicator will show the charging progress. A full charge is indicated when all LED lights are solid green.
4. Disconnect the charger once charging is complete.

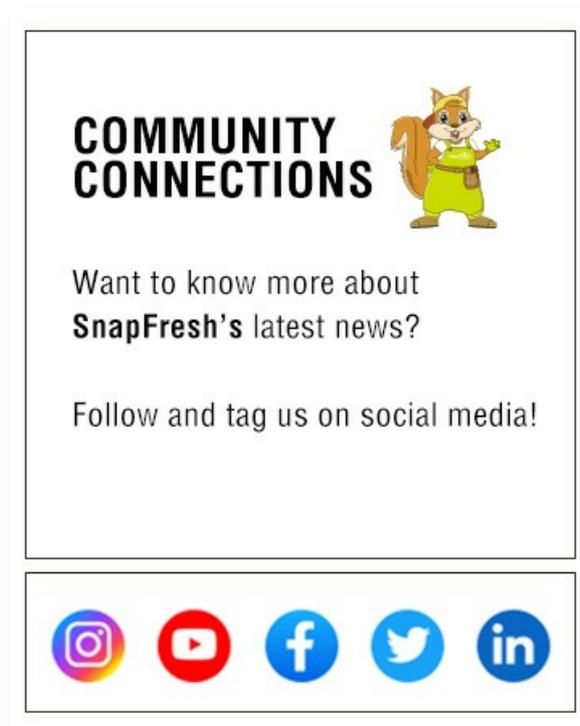


Image: The electric scissors being charged via its Type-C USB port.

5.2 Installing/Replacing the Blade

Always ensure the tool is turned off and the safety lock is engaged before handling the blade.

1. Press the safety lock to prevent accidental activation.
2. Using a screwdriver, unscrew the screw holding the blade in place.
3. Carefully remove the old blade, holding it with pliers if necessary.
4. Place the new SKS7 alloy blade onto the spindle, ensuring it aligns correctly.
5. Tighten the screw securely.



Image: Visual instructions for replacing the cutting blade, detailing how to hold the blade, unscrew, remove, prepare, install, and tighten the new blade.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

1. To turn on: Press and hold the safety lock button, then pull the trigger. The blade will begin rotating.
2. To turn off: Release the trigger. The blade will stop rotating.

1/ PRESS SAFETY LOCK



2/ PULL TRIGGER



3/ BLADE STARTS ROTATING



Image: A three-step visual guide demonstrating how to activate the electric scissors by pressing the safety lock and pulling the trigger.

6.2 Cutting Various Materials

The SnapFresh Electric Scissors are suitable for cutting materials up to 1/4 inch thick, including:

- Cardboard
- Fabric
- Carpet
- Leather
- Paper
- Ribbon
- Artificial Grass

For best results, ensure the material is laid flat and stable. Guide the tool smoothly along the desired cutting line. The built-in LED light will illuminate your path.



PAPER



CARDBOARD



LEATHER



RIBBON



ARTIFICIAL GRASS

Image: The electric scissors demonstrating its capability to cut through various materials like paper, leather, cardboard, ribbon, and artificial grass.



Image: The electric scissors making both straight and curved cuts on a piece of leather, highlighting its precision.

Your browser does not support the video tag.

Video: An official product video demonstrating the SnapFresh Electric Scissors cutting various materials like burlap, kraft paper, ribbon, and newspaper, showcasing its versatility for crafting and DIY projects.

7. MAINTENANCE

7.1 Cleaning

- After each use, ensure the tool is off and the safety lock is engaged.
- Use a dry cloth to wipe away any dust or debris from the blade and tool body.
- Do not use harsh chemicals or abrasive cleaners.

7.2 Battery Care

- Store the tool with a partially charged battery (around 50%) if not used for extended periods.
- Avoid fully discharging the battery frequently, as this can reduce its lifespan.
- Do not expose the battery to extreme temperatures.

7.3 Storage

Store the electric scissors and its accessories in the provided storage bag in a dry, secure place, out of reach of children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not turn on	Battery is low or depleted Safety lock not disengaged	Charge the battery fully Ensure both safety lock and trigger are pressed simultaneously
Blade not cutting effectively	Blade is dull or damaged Material is too thick	Replace the blade Do not attempt to cut materials thicker than 1/4 inch
Tool stops during operation	Battery is depleted Overload protection activated	Recharge the battery Reduce pressure or cut thinner material

9. SPECIFICATIONS

Feature	Specification
Model Number	SP5091
Voltage	4V
Battery Capacity	2.0Ah Lithium Ion
No-Load Speed	285 RPM
Max Cutting Thickness	1/4 inch (6.35 mm)
Blade Material	SKS7 Alloy Steel
Charging Port	USB Type-C
Item Weight	0.81 lbs (370 Grams)
Product Dimensions	7.9 x 2 x 3 inches

10. WARRANTY AND SUPPORT

SnapFresh products are designed and manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact SnapFresh customer service through the official website or the contact information provided on your warranty card.

Website: [Visit the SnapFresh Store](#)

