

[Manuals.plus](#) /

› [JOYIN](#) /

› JOYIN 8FT Halloween Witch and Black Cat Inflatable Decoration Instruction Manual

JOYIN 17525

JOYIN 8FT Halloween Witch and Black Cat Inflatable Decoration Instruction Manual

Model: 17525

1. INTRODUCTION

Thank you for choosing the JOYIN 8FT Halloween Witch and Black Cat Inflatable Decoration. This product is designed to enhance your outdoor Halloween display with its impressive size and integrated LED lighting. Please read this manual carefully before setup and operation to ensure safe and proper use.



Image 1.1: The JOYIN 8FT Halloween Witch and Black Cat Inflatable Decoration.

2. SAFETY INFORMATION

- **Electrical Safety:** Ensure the power adapter and cord are protected from water and damage. Do not operate with a damaged cord or plug.
- **Outdoor Use:** This inflatable is designed for outdoor use. Position it away from heat sources, sharp objects, and areas with heavy foot traffic.
- **Securing the Inflatable:** Always use the provided stakes and tethers to secure the inflatable firmly to the ground or structure to prevent it from being blown away by wind.
- **Children and Pets:** Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement or injury.
- **Weather Conditions:** While weather-resistant, it is recommended to deflate and store the inflatable during extreme weather conditions such as strong winds, heavy rain, or snow.

3. PACKAGE CONTENTS

Verify that all components are present before proceeding with setup:

- 1 x JOYIN 8FT Halloween Witch and Black Cat Inflatable
- 1 x Built-in IP44 Air Blower
- 1 x UL Safety Certified Power Adapter
- Stakes and Tethers for securing
- Sandbag (integrated or separate, for stability)

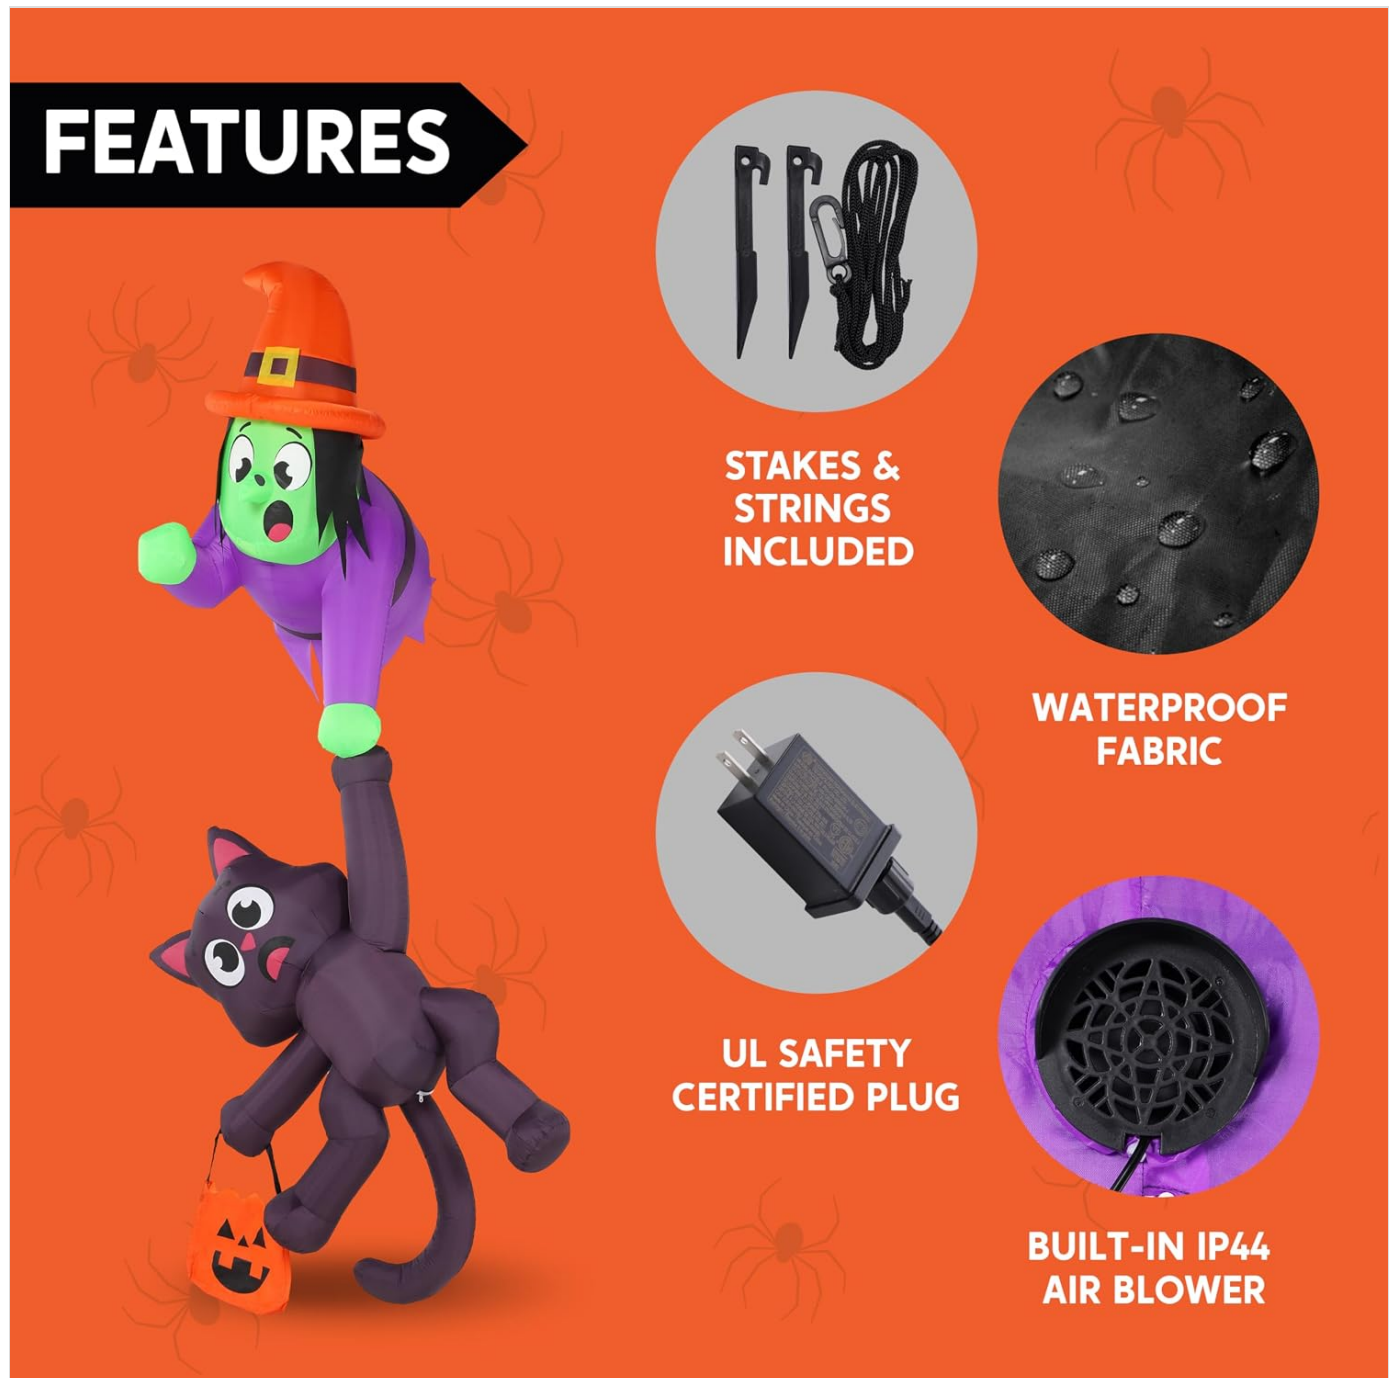


Image 3.1: Key features and included accessories for the inflatable.

4. SETUP INSTRUCTIONS

Follow these steps to set up your inflatable decoration:

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position:** Place the inflatable in your desired outdoor location, ensuring there is enough clear space for it to fully inflate (8 feet tall).
3. **Zip Up:** Locate the zipper on the bottom or side of the inflatable and ensure it is fully closed. This prevents air leakage during inflation.
4. **Plug In:** Connect the UL safety certified power adapter to the inflatable's blower and then plug it into a standard outdoor-rated electrical outlet. The inflatable will begin to inflate automatically.
5. **Secure with Strings:** Once partially inflated, use the provided strings and stakes to anchor the inflatable. Attach the strings to the designated loops on the inflatable and secure them to the ground using the stakes. For roof decoration, utilize appropriate anchor points on your roof or structure.
6. **Secure Suction Cups (if applicable):** If your model includes suction cups for window attachment, ensure they are firmly pressed onto a clean, smooth window surface to provide additional stability for the witch figure.
7. **Adjust:** Adjust the tethers and stakes as needed to ensure the inflatable stands upright and is stable.

Easy To Set Up

Simple 4 steps to create your inflatable



**Zip up the
bottom zipper**



Plug in & Inflate



**Hook the inflatable
with strings**



**Secure suction
cups to window**

5. OPERATING INSTRUCTIONS

Operating your JOYIN inflatable is straightforward:

- **Inflation:** Plug the power adapter into an electrical outlet. The built-in blower will automatically inflate the decoration.
- **LED Lights:** The integrated LED lights will illuminate automatically when the unit is powered on, providing visibility and ambiance during nighttime.
- **Deflation:** To deflate the decoration, simply unplug the power adapter from the electrical outlet. The inflatable will slowly deflate.



Image 5.1: The inflatable decoration illuminated at night.

6. MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** When not in use, deflate the inflatable, fold it neatly, and store it in its original packaging or a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the inflatable, power cord, and blower for any signs of wear or damage. Discontinue use if damage is found.

7. TROUBLESHOOTING

- **Inflatable not inflating:**
 - Check if the power adapter is securely plugged into a working electrical outlet.
 - Ensure the bottom zipper of the inflatable is fully closed.
 - Verify that the air intake of the blower is not obstructed.
- **LED lights not working:**
 - Ensure the inflatable is powered on and fully inflated.
 - Check for any visible damage to the light wiring.
- **Inflatable leaning or unstable:**
 - Re-adjust the stakes and tethers to ensure proper tension and anchoring.
 - Ensure the sandbag (if applicable) is properly positioned for stability.

8. SPECIFICATIONS

- **Model Number:** 17525
- **Height:** Approximately 8.2 feet (250 cm)
- **Width:** Approximately 3.3 feet (100 cm)
- **Depth:** Approximately 1.8 feet (56 cm)
- **Material:** Waterproof Polyester Fabric
- **Blower:** Built-in IP44 Air Blower
- **Power:** UL Safety Certified Plug
- **Features:** Integrated LED Lights, Weather Resistant

PRODUCT SIZE



Image 8.1: Product size and dimensions.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact JOYIN customer service directly. Keep your purchase receipt for any warranty claims.

JOYIN Customer Service: Please visit the official JOYIN website or refer to the contact information provided with your product for assistance.

© 2025 JOYIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8Q2SCMV>

More documents and user manuals: <https://manuals.plus/>