

[Manuals.plus](#) /

› [Jxrev](#) /

› Jxrev Wireless Earbuds Model J53 User Manual

Jxrev J53

Jxrev Wireless Earbuds Model J53 User Manual

This manual provides detailed instructions for the Jxrev Wireless Earbuds, Model J53. Please read thoroughly before use to ensure proper operation and maintenance.

1. PRODUCT OVERVIEW

Package Contents

- Wireless Earbuds (2)
- Wireless Charging Case
- Type-C Charging Cable (1)
- User Manual

Earbud and Case Diagram

ADVANCED BLUETOOTH 5.4

Connecting and pairing in 1 second once you open the charging case.



Image: A diagram showing the Jxrev wireless earbuds and their charging case, highlighting key components and features.

2. SETUP

Initial Charging

Before first use, fully charge the earbuds and charging case to ensure optimal battery performance.

1. Connect the provided Type-C charging cable to the charging port on the case.
2. Connect the other end of the cable to a USB power adapter (not included).
3. The LED display on the charging case will show the current battery percentage.
4. Place the earbuds into the charging case. The LED indicator bars will display their individual charging status.
5. A full charge for the case takes approximately 1.5 hours. Earbuds charge fully in about 1 hour.



Image: The Jxrev charging case connected to a Type-C cable, with earbuds inside, showing the LED display indicating battery levels.

Pairing with a Device

The earbuds feature one-step pairing for quick and easy connection.

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device, search for Bluetooth devices and select "J53" from the list.
4. Once connected, the earbuds will automatically pair with this device when the case is opened in the future.

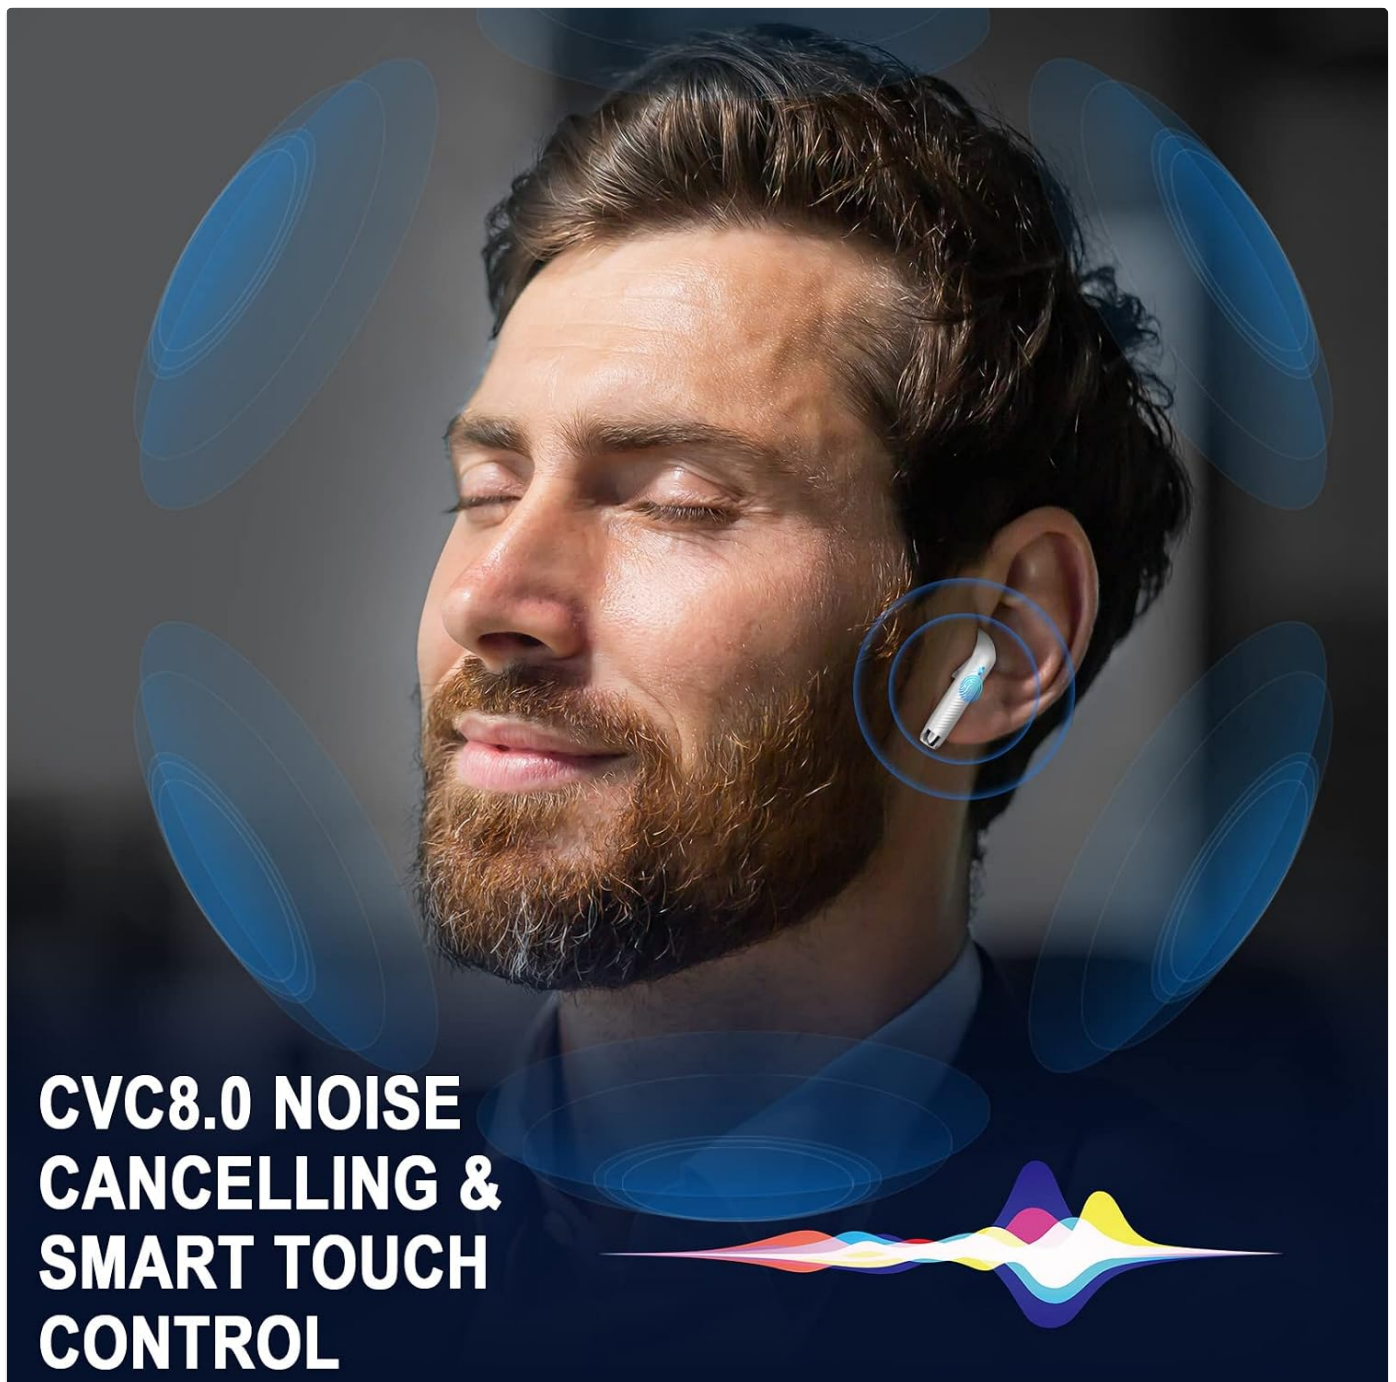 


Image: A smartphone screen showing "J53" in the Bluetooth device list, with the Jxrev earbuds and charging case nearby, illustrating the pairing process.

3. OPERATING INSTRUCTIONS

Wearing the Earbuds

Insert the earbuds into your ears and gently rotate them to find a comfortable and secure fit. The ergonomic design ensures stability during various activities.

13MM DRIVER FOR DEEP BASS

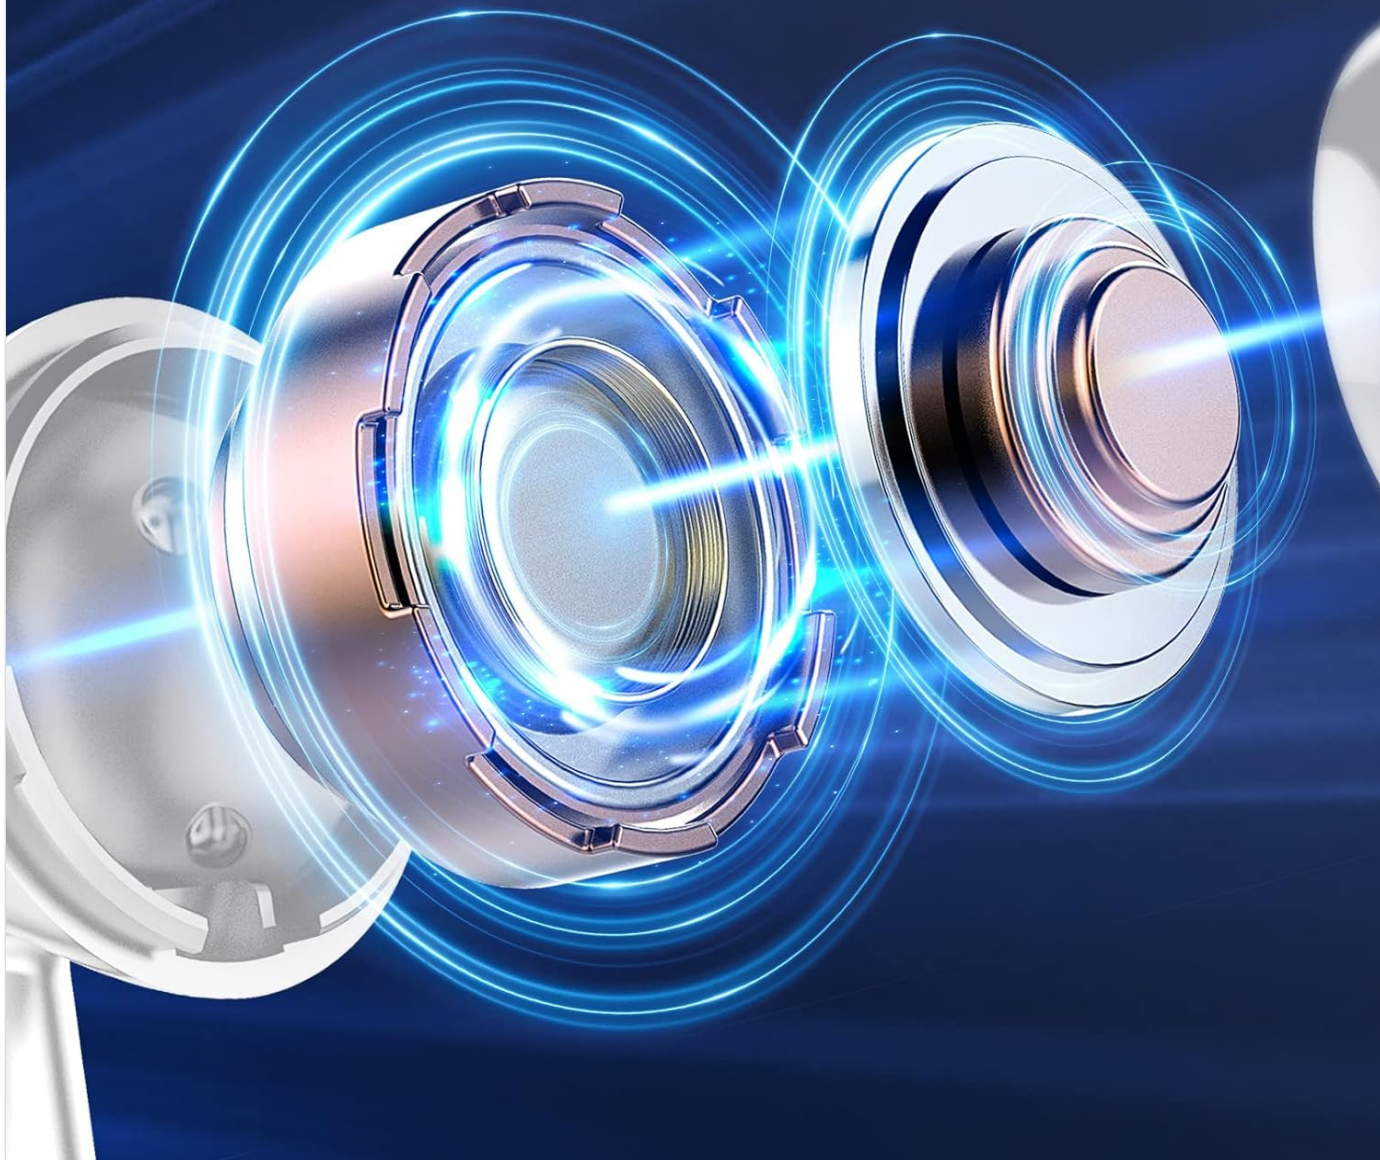 


Image: A person wearing the Jxrev earbuds, demonstrating a comfortable and secure fit in the ear.

Touch Controls

The earbuds are equipped with touch control sensors for easy management of audio and calls.

Action	Left Earbud	Right Earbud
Play/Pause Music	Tap 2 times	Tap 2 times
Next Track	N/A	Press and hold for 2 seconds
Previous Track	Press and hold for 2 seconds	N/A
Answer/End Call	Tap 2 times	Tap 2 times
Reject Call	Press and hold for 2 seconds	Press and hold for 2 seconds
Activate Voice Assistant	Tap 3 times	Tap 3 times

Volume Down	Tap 1 time	N/A
Volume Up	N/A	Tap 1 time

Note: Specific touch controls may vary slightly based on device and operating system.

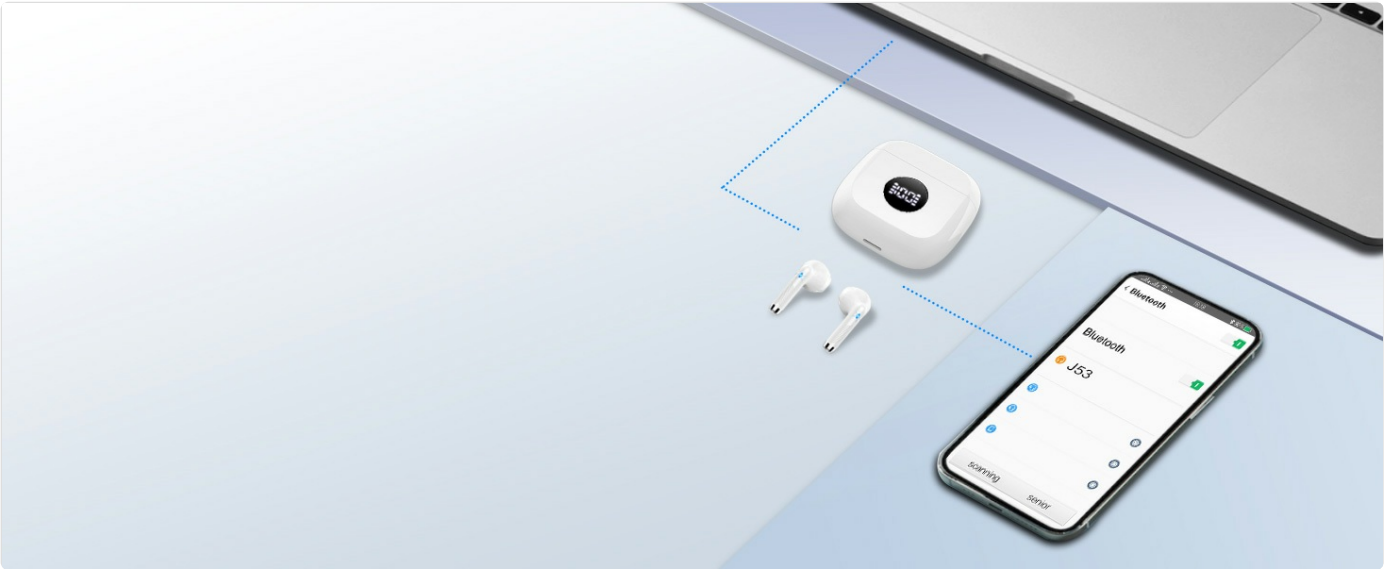 


Image: A visual representation of the touch control functions on the Jxrev earbuds, showing different tap and hold gestures for various actions.

Dual and Single Earbud Mode

The earbuds support both dual-ear stereo mode and individual use. You can use either the left or right earbud independently for calls or music. Simply remove one earbud from the case, and it will connect to your device.

4. MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- Gently clean the charging contacts on both the earbuds and the case with a dry cotton swab.

Water Resistance (IP7)

The Jxrev Wireless Earbuds feature an IP7 nano-coating technology, providing protection against daily splashes, sweat, and rain.

- Do not intentionally submerge the earbuds in water for extended periods.
- Ensure the earbuds are dry before placing them back into the charging case to prevent damage to the charging contacts.



Image: Jxrev earbuds partially submerged in water, illustrating their IP7 waterproof capability.

Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store the case in a cool, dry place away from extreme temperatures.

5. TROUBLESHOOTING

Common Issues and Solutions

Earbuds not pairing or connecting:

- Ensure both earbuds are charged.
- Turn off Bluetooth on your device and turn it back on.
- Forget "J53" from your device's Bluetooth list and try pairing again.
- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid to re-initiate pairing mode.

Only one earbud working:

- Ensure both earbuds are charged.
- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid. This often resets the connection between the two earbuds.
- If the issue persists, try resetting the earbuds (refer to the full user manual for specific reset instructions if available, or try forgetting the device and re-pairing).

Poor sound quality or disconnections:

- Ensure the earbuds are within the 15-meter Bluetooth range of your device.
- Check for obstructions between the earbuds and your device.
- Ensure the earbuds are clean and free of debris.
- Try connecting to a different audio source to rule out device-specific issues.

Charging case not charging:

- Verify the Type-C charging cable is securely connected to both the case and the power source.
- Try a different Type-C cable or USB power adapter.
- Ensure the charging port on the case is clean and free of debris.

6. SPECIFICATIONS

Technical Details

Feature	Detail
Brand	Jxrev
Model Number	J53
Color	White
Ear Placement	In Ear
Noise Control	Sound Isolation (ENC Noise Cancelling Mics)
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	Up to 15 Meters
Control Type	Touch Control
Earbud Battery Life (Single Charge)	8 Hours
Total Playback Time (with Case)	40 Hours
Earbud Charging Time	1 Hour (in case)
Case Charging Time	1.5 Hours
Audio Driver Type	Dynamic Driver
Audio Driver Size	13 Millimeters
Frequency Range	20Hz - 20,000Hz
Water Resistance Level	IP7 Waterproof
Earbud Weight	3 Grams (each)
Compatible Devices	iOS 9.0 and above, Android 5.0 and above

7. WARRANTY AND SUPPORT

Warranty Information

The Jxrev Wireless Earbuds Model J53 come with a **1 Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. For details on warranty coverage and terms, refer to the official Jxrev website or contact customer support.

Customer Support

If you encounter any issues or have questions regarding your Jxrev Wireless Earbuds, please contact Jxrev customer support. Contact information can typically be found on the product packaging, the official Jxrev website, or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8Q3BKPQ>

More documents and user manuals: <https://manuals.plus/>