

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Ceramic Heater QN816DR User Manual

## Aigostar QN816DR

# Aigostar Ceramic Heater QN816DR User Manual

Model: QN816DR

## 1. INTRODUCTION

Thank you for choosing the Aigostar Ceramic Heater QN816DR. This manual provides essential information for the safe and efficient operation of your new heater. Please read it thoroughly before use and retain it for future reference.





Image 1: Aigostar Ceramic Heater QN816DR and its remote control.

## 2. SAFETY INFORMATION

**Please read all safety warnings and instructions carefully before using this appliance to prevent electric shock, fire, injury, or property damage.**

- Always place the heater on a firm, level surface.
- Do not cover the heater. Covering the heater can cause overheating and fire.
- Keep flammable materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and away from the sides and rear.
- Do not use the heater in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water.
- This heater is equipped with an automatic anti-tip safety switch that will shut off the heater if it is accidentally tipped over.
- The heater also features overheat protection, which automatically turns off the unit if it reaches an unsafe temperature. If this occurs, unplug the heater and allow it to cool down before restarting.
- Ensure the power cord is not damaged and is placed away from heated surfaces.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.

# Detalles del Producto



Image 2: Multi-layer safety features including overheat protection and anti-tip switch.

## 3. PRODUCT OVERVIEW

The Aigostar Ceramic Heater QN816DR is a tower-style heater designed for efficient and quiet heating of indoor spaces. It features PTC ceramic heating elements for rapid warmth, multiple operating modes, and convenient controls.

### Key Features:

- **PTC Ceramic Heating:** Provides rapid and consistent heat.
- **4 Operating Modes:** Low Heat (1000W), High Heat (2000W), ECO Mode, and Fan Only.
- **Adjustable Thermostat:** Temperature range from 5°C to 35°C.
- **65° Oscillation:** Distributes heat evenly across the room.
- **24-Hour Timer:** Program the heater to turn off automatically.
- **LED Touch Screen & Remote Control:** Easy operation.

- **Night Light Function:** Provides soft ambient lighting.
- **Quiet Operation:** Noise level below 35 dB.
- **Safety Features:** Anti-tip switch and overheat protection.
- **Portable Design:** Integrated leather handle for easy transport.



Image 3: Product details highlighting low noise, automatic screen off, integrated handle, remote control, 24-hour timer, and night light.

## 4. SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain the packaging for storage or in case of return.
2. **Placement:** Place the heater on a stable, flat, and heat-resistant surface. Ensure there is at least 1 meter (3 feet) of clear space around the heater from walls, furniture, and other objects to allow for proper airflow and prevent fire hazards. This heater is designed for indoor use only.
3. **Power Connection:** Ensure the heater is switched off before plugging it into a grounded electrical outlet. The power

supply must match the voltage specified on the heater's rating label.

# Temperatura Ajustable

Control preciso de la temperatura, controlando cada grado de calor.



Image 4: Heater placed in a living room, demonstrating effective heating.

## 5. OPERATING INSTRUCTIONS

The heater can be operated using the LED touch screen on the top panel or the included remote control.

### 5.1 Power On/Off

- Press the **Power button** (  ) on the touch screen or remote control to turn the heater on or off.

### 5.2 Mode Selection

Press the **Mode button** (  ) to cycle through the available modes:

- **Low Heat (1000W):** For gentle heating.

- **High Heat (2000W):** For rapid and powerful heating.
- **ECO Mode:** The heater automatically adjusts its power consumption (between 1000W and 2000W) to maintain the set temperature, optimizing energy efficiency.
- **Fan Only:** Circulates air without heating.

## Calentamiento Rápido

La calefacción especial de cerámica se calienta rápidamente en 2s.



**2000W** ↑ ↑ ↑

Alta potencia, mejorando la eficiencia de calefacción en un 30 %

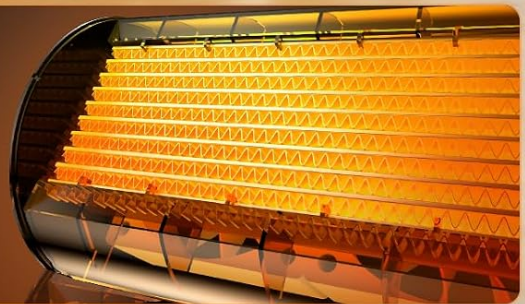


Image 5: Overview of the 4 operating modes and ECO function.

### 5.3 Temperature Adjustment

In heating modes (Low, High, ECO), you can adjust the desired temperature between 5°C and 35°C.

- Use the '+' and '-' buttons on the touch screen or remote control to increase or decrease the temperature.
- The display will show the set temperature. The heater will work to maintain this temperature.

# Temporizador y Silencioso

Para una operación de calefacción sin preocupaciones día y noche.



Image 6: Adjustable temperature range from 5°C to 35°C.

## 5.4 Oscillation Function

- Press the **Oscillation button** (🔊) on the touch screen or remote control to activate or deactivate the 65° oscillation feature. This helps distribute heat more widely.

# Protección Multicapa



Image 7: Wide oscillation feature distributing heat evenly.

## 5.5 Timer Function

- Press the **Timer button** (II) to set the automatic shut-off timer for up to 24 hours. Each press increases the timer by 1 hour.
- The heater will automatically turn off once the set time has elapsed.

# Amplia Oscilación

La oscilación de 65° distribuirá el calor uniformemente en habitaciones de hasta 20m<sup>2</sup>.



Image 8: 24-hour timer for convenient and silent operation.

## 5.6 Night Light Function

- Press the **Light button** (  ) to turn the night light on or off. The LED display will automatically turn off after 30 seconds of inactivity to avoid disturbing sleep.

## 5.7 Remote Control Usage

- The remote control allows for convenient operation from a distance of up to 5 meters.
- Ensure the remote control has working batteries.
- Point the remote control directly at the heater's display panel for optimal response.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your heater.

## 6.1 Cleaning

1. Always unplug the heater and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles.
4. Never immerse the heater in water or allow water to drip into the interior.

## 6.2 Storage

- If storing the heater for an extended period, clean it thoroughly and place it back in its original packaging.
- Store the heater in a cool, dry place, away from direct sunlight and moisture.

## 7. TROUBLESHOOTING

If you encounter issues with your heater, please refer to the following common problems and solutions:

| Problem                        | Possible Cause                                                                            | Solution                                                                                                                                                           |
|--------------------------------|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Heater does not turn on.       | No power supply.<br>Overheat protection activated.<br>Anti-tip switch activated.          | Ensure the heater is plugged into a working outlet.<br>Unplug, let cool for 30 minutes, then restart.<br>Ensure the heater is on a flat, stable surface.           |
| No heat output.                | Fan-only mode selected.<br>Temperature setting too low.                                   | Select a heating mode (Low, High, or ECO).<br>Increase the desired temperature setting.                                                                            |
| Heater turns off unexpectedly. | Overheat protection activated.<br>Anti-tip switch activated.<br>Timer function activated. | Unplug, let cool for 30 minutes, then restart.<br>Ensure the heater is on a flat, stable surface.<br>Check if the timer is set; adjust or deactivate if necessary. |
| Remote control not working.    | Dead batteries.<br>Obstruction between remote and heater.                                 | Replace batteries.<br>Ensure a clear line of sight to the heater's display.                                                                                        |

If the problem persists after trying these solutions, please contact Aigostar customer support.

## 8. SPECIFICATIONS

| Feature         | Specification           |
|-----------------|-------------------------|
| Brand           | Aigostar                |
| Model Number    | QN816DR                 |
| Power           | 2000 Watts              |
| Material        | Ceramic                 |
| Number of Modes | 4 (Low, High, ECO, Fan) |

| Feature                     | Specification                                                                                             |
|-----------------------------|-----------------------------------------------------------------------------------------------------------|
| Special Features            | LED Touch Screen, Remote Control, Night Light, 24-hour Timer, Oscillation, ECO Function, Silent Operation |
| Product Weight              | 2.3 kg                                                                                                    |
| Form Factor                 | Tower                                                                                                     |
| Indoor/Outdoor Use          | Indoor                                                                                                    |
| Room Type                   | Office, Bedroom, Living Room, Other spaces                                                                |
| Fuel Type                   | Electric                                                                                                  |
| Minimum Temperature Setting | 5°C                                                                                                       |
| Maximum Temperature Setting | 35°C                                                                                                      |
| Dimensions (Package)        | 65.5 x 18.5 x 18.5 cm                                                                                     |

## 9. WARRANTY AND SUPPORT

Aigostar products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Aigostar website. For customer service inquiries, please contact your retailer or the Aigostar support team directly.

© 2025 Aigostar. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0F8Q47DNX>

More documents and user manuals: <https://manuals.plus/>