

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DCHK](#) /

› [DCHK Haribo HBT-03 Noise Cancelling Bluetooth Earphones User Manual](#)

## DCHK HBT-03

# DCHK Haribo HBT-03 Noise Cancelling Bluetooth Earphones User Manual

Model: HBT-03 | Brand: DCHK

## INTRODUCTION

---

Thank you for choosing the DCHK Haribo HBT-03 Noise Cancelling Bluetooth Earphones. This manual provides essential information for the safe and efficient use of your new earphones. Please read it thoroughly before use and retain it for future reference.

## PACKAGE CONTENTS

---

Ensure all items are present in the package:

- Wireless Earphones (Left and Right)
- Charging Case with LCD Touch Screen
- Ear Cushions (S, M, L sizes)
- USB Charging Cable
- User Manual (this document)

# ぴったりフィットするイヤークリップ

3サイズのイヤークリップが付属しており、大人も子供も安心して装着できます。



Image: The package includes the wireless earphones, the charging case, three pairs of ear tips in sizes S (11.4mm), M (11.9mm), and L (13.0mm), and a USB charging cable.

## PRODUCT OVERVIEW

The DCHK Haribo HBT-03 earphones feature a compact design with advanced audio capabilities.

- **13mm Dynamic Drivers:** Deliver powerful bass and clear mid-high tones.
- **Bluetooth 5.4:** Ensures stable and efficient wireless connectivity.
- **Active Noise Cancelling (ANC):** Reduces ambient noise for an immersive listening experience.
- **Ambient Sound Mode:** Allows you to hear your surroundings while listening to audio.
- **LCD Touch Screen Charging Case:** Provides intuitive control over various functions.

# HARIBO

Electronics by HK DC Global

## ディスプレイ ノイズキャンセリング Bluetooth イヤホン



ワイヤレス  
イヤホン



ポケット  
サイズ



LCD  
ディスプレイ



Bluetooth  
5.4



12時間  
再生



13mm  
ドライバー



Image: An illustration of the Haribo HBT-03 earphones and their charging case, emphasizing key features such as wireless design, pocket-sized form factor, LCD display, Bluetooth 5.4 connectivity, up to 12 hours of playback, and 13mm dynamic drivers.

## SETUP

### 1. Initial Charging

Before first use, fully charge the earphones and charging case.

1. Place the earphones into the charging case.
2. Connect the USB charging cable to the charging port on the case and a power source.
3. The LCD screen on the case will display the charging status. A full charge takes approximately 1.5 hours for the case.

# 高速充電、長時間パフォーマンス

たった1.5時間でフル充電が可能。音楽や動画を最大12時間中断なく楽しめます。



Image: This graphic illustrates the charging and playback times: 1.5 hours for a full charge of the case, 5 hours of playback for the earphones alone, and up to 12 hours of total playback when used with the charging case.

## 2. Bluetooth Pairing

1. Open the charging case. The earphones will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "HBT-03" from the list.
4. Once connected, the LCD screen on the case may indicate successful pairing.

The earphones will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

## 安定したリッチなサウンド



13mmダイナミックドライバー



Bluetooth 5.4



アクティブノイズキャンセリング



トランスペアレンシーモード



Image: This image highlights the benefits of Bluetooth 5.4 connectivity, including an enhanced communication range of 9.7 meters, high-quality audio transmission, optimized power consumption, and excellent connection stability.

## OPERATING INSTRUCTIONS

### Earphone Touch Controls

The earphones feature touch-sensitive areas for control. Specific functions may vary based on the number of taps or long presses.

- **Play/Pause:** Single tap on either earphone.
- **Next Track:** Double tap on the right earphone.
- **Previous Track:** Double tap on the left earphone.
- **Answer/End Call:** Single tap on either earphone.
- **Reject Call:** Long press on either earphone.
- **Activate Voice Assistant:** Triple tap on either earphone.

### Charging Case LCD Touch Screen Functions

The full-color LCD touch screen on the charging case provides access to various settings and controls. Swipe left/right or tap icons to navigate.



Image: A comprehensive display of the various functions available on the charging case's LCD touch screen. These include battery level display, track control, volume adjustment, equalizer settings (Standard, Classic, Jazz, Rock, Pop), noise reduction/ambient sound mode switching, flashlight activation, screen lock, language selection, earphone locator, remote camera control, timer, power off, and factory reset options.

- **Battery Level Display:** Shows real-time battery status of both earphones and case.
- **Music Playback Controls:** Play, pause, skip tracks.
- **Volume Adjustment:** Control audio volume directly from the case.
- **EQ Modes:** Select from 5 preset equalizer modes (Standard, Classic, Jazz, Rock, Pop) to optimize sound for different genres.
- **Noise Control Modes:** Switch between Active Noise Cancelling (ANC) and Ambient Sound Mode.
- **Screen Brightness Adjustment:** Modify the display brightness.
- **Language Switching:** Change the display language.
- **Earphone Search:** Helps locate misplaced earphones.
- **Flashlight:** Built-in flashlight function.
- **Timer:** Set a countdown timer.
- **Remote Camera Control:** Use the case to trigger your phone's camera shutter.
- **Wallpaper Change:** Customize the screen background.

## MAINTENANCE

### Cleaning

- Regularly clean the earphones and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

### Storage

- Store the earphones in their charging case when not in use to protect them and keep them charged.
- Avoid storing in extreme temperatures, high humidity, or dusty environments.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Earphones do not turn on.	Low battery.	Charge the earphones and case fully.
Cannot pair with device.	Bluetooth is off on device; earphones not in pairing mode; too far from device.	Ensure Bluetooth is on. Place earphones in case, close, then open to re-enter pairing mode. Move closer to device.
No sound or poor sound quality.	Volume too low; ear tips not properly fitted; dirty ear tips/grilles; connection issue.	Adjust volume. Try different ear tip sizes. Clean ear tips and grilles. Reconnect Bluetooth.
Touch controls unresponsive.	Dirty touch sensor; temporary software glitch.	Clean the touch sensor area. Restart earphones by placing them in the case and taking them out.
Charging case LCD screen is blank.	Low battery on case.	Charge the charging case.

## SPECIFICATIONS

Feature	Detail
Model Name	HBT-03
Brand	DCHK
Connectivity Technology	Wireless (Bluetooth 5.4)
Driver Size	13mm Dynamic Driver
Noise Control	Active Noise Cancellation
Frequency Response	20 KHz (Upper limit, typical range 20Hz-20kHz)
Impedance	16 Ohm
Control Method	Touch (Earphones & Case LCD)
Water Resistance Level	IPX4 (Water resistant)
Earphone Playback Time	6-8 hours (single charge)
Total Playback Time (with case)	Up to 12 hours
Case Charging Time	Approx. 1.5 hours
Material	Acrylonitrile Butadiene Styrene (ABS)

Feature	Detail
Package Dimensions	11.2 x 7.6 x 3.2 cm
Weight	100 g

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official DCHK website. Keep your proof of purchase for warranty claims.