

[Manuals.plus](#) /

› [NUTRI FIT](#) /

› NUTRI FIT EK9380HR-W Rechargeable Digital Kitchen Scale User Manual

NUTRI FIT EK9380HR-W

NUTRI FIT EK9380HR-W Digital Kitchen Scale User Manual

Model: EK9380HR-W

1. PRODUCT OVERVIEW

The NUTRI FIT EK9380HR-W is a versatile digital kitchen scale designed for precise measurement of food ingredients. It features a durable tempered glass platform, a clear backlit LCD display, and a convenient USB-C rechargeable battery.



Image: The NUTRI FIT EK9380HR-W Digital Kitchen Scale in white, showing a bowl of cherry tomatoes being weighed.

2. SETUP AND CHARGING

2.1 Initial Setup

1. Place the scale on a flat, stable surface.
2. Ensure the scale is clean and free from debris before first use.

2.2 Charging the Battery

The scale is equipped with a rechargeable battery and charges via the included USB Type-C cable. This eliminates the need for disposable batteries.

- Connect the USB-C end of the cable to the scale's charging port.
- Connect the standard USB end to any compatible USB power source (e.g., computer, wall adapter, power bank).

- Allow the scale to charge fully before its first use.



Image: The NUTRI FIT scale connected to a USB-C charging cable.



Image: The USB-C charging cable provided with the scale.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

To power on the scale, press the **ZERO** button. The scale will automatically turn off after 30 seconds of inactivity to conserve battery life.

3.2 Unit Conversion

Press the **UNIT** button to cycle through the available measurement units: grams (g), pounds and ounces (lb:oz), fluid

ounces (fl'oz), and milliliters (ml).

Your browser does not support the video tag.

Video: Demonstrates the unit conversion feature of the NUTRI FIT kitchen scale, showing how to switch between grams, pounds/ounces, fluid ounces, and milliliters for various ingredients like water and milk.

3.3 Tare Function (Zero Adjustment)

The tare function allows you to subtract the weight of a container or previous ingredients, enabling you to measure multiple items in the same bowl accurately.

1. Place an empty container on the scale. The display will show its weight.
2. Press the **ZERO** button. The display will reset to zero.
3. Add your ingredients to the container. The display will show only the weight of the added ingredients.



Image: Visual guide demonstrating the tare function for accurate ingredient measurement.

3.4 Weighing Ingredients

Place the item(s) to be weighed directly onto the tempered glass platform or into a container (using the tare function). The backlit LCD display will show the weight clearly.



Image: The scale in use, accurately weighing cherry tomatoes.

4. MAINTENANCE AND STORAGE

4.1 Cleaning

The tempered glass platform is designed for easy cleaning.

- Wipe the surface with a damp cloth.
- For stubborn stains, use a mild detergent and then wipe clean with a dry cloth.
- Avoid abrasive cleaners or submerging the scale in water.
- To prolong battery life, wipe any water stains from the surface before daily storage.



Image: Cleaning the tempered glass surface of the scale.

4.2 Storage

The slim design of the scale allows for convenient storage.

- Store the scale in a dry place.
- It can be easily stored in a drawer or hung on a wall hook.



5. TROUBLESHOOTING

- **Scale not turning on:** Ensure the battery is charged. Connect the scale to a USB power source using the provided cable.
- **Inaccurate readings:** Ensure the scale is on a flat, stable surface. Avoid placing it near strong electromagnetic fields. Recalibrate by turning it off and on, then performing a tare function.
- **Display shows 'Lo':** The battery is low and needs recharging.
- **Display shows 'Err':** The scale is overloaded. Remove items immediately to prevent damage.
- **Backlight turns off quickly:** The backlight is designed to turn off after 30 seconds of inactivity to save battery. This is normal operation.

6. SPECIFICATIONS

Feature	Detail
Model Number	EK9380HR-W
Brand	NUTRI FIT
Maximum Weight Capacity	11 lb / 5 kg
Reading Accuracy	1 g / 0.1 oz
Measurement Units	g, lb:oz, fl'oz, ml
Display Type	Backlit LCD (45.5 x 21.5 mm)
Power Source	Rechargeable via USB Type-C
Material	Tempered Glass (3 mm thick)
Product Dimensions	21.08 x 16 x 1.78 cm (8.3 x 6.3 x 0.7 inches)
Product Weight	399 g (0.88 lbs)
Special Features	Automatic Shut-off, Tare Function



Image: Dimensions of the NUTRI FIT EK9380HR-W Digital Kitchen Scale.

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official NUTRI FIT website. Keep your proof of purchase for any warranty claims.

© 2023 NUTRI FIT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question