

[Manuals.plus](#) /

› [ZWP](#) /

› Replacement Remote Control User Manual for Valuxhome Fireplace Heater

ZWP Lexey/Luxey Series Remote

Replacement Remote Control User Manual

For Valuxhome Fireplace Heaters

1. INTRODUCTION

This manual provides instructions for the ZWP Replacement Remote Control, designed for use with various Valuxhome Fireplace Heater models. This remote offers a convenient way to operate your fireplace heater from a distance.



Image 1.1: The ZWP Replacement Remote Control, showing its ergonomic design and button layout.

2. COMPATIBILITY

This remote control is compatible with the following Valuxhome Fireplace Heater models:

- Lexey42, Lexey 50, Lexey 50 WH, Lexey 60, Lexey 72, Lexey 90
- Luxey42, Luxey 50, Luxey 50 WH, Luxey 60, Luxey 72, Luxey 84, Luxey 95
- EF23T, VEF28, VHBI74, VEF72, MEF36, EF36, EF42, EF50, EF60, EF72, EF84
- VEF30T, VEF33W, VEF40T, EF50T, VWM72, VWM60, WM50-WH, BI42, BI50, VHBI60

3. FEATURES

- **Durable Construction:** Made of high-quality ABS material, ensuring wear resistance and durability.
- **Comfortable Grip:** Ergonomically designed for a comfortable hand feeling.
- **Soft Silicon Buttons:** Environmentally friendly and designed for tactile feedback.
- **No Programming Required:** Ready to use immediately after battery installation.
- **Long Operational Distance:** Effective up to 8 meters (approximately 26 feet).



Image 3.1: Front and back view of the remote, highlighting the durable ABS material and soft silicon buttons for comfortable use.

4. SETUP

4.1 Battery Installation

The remote control requires two (2) 1.5V AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Important: Ensure correct battery polarity. Do not mix old and new batteries, or different types of batteries.

Requires Two 1.5V AAA Batteries

(Batteries are not included)



Image 4.1: Front and back view of the remote control, illustrating the battery compartment location and indicating the requirement for two 1.5V AAA batteries.

5. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use. Point the remote directly at your Valuxhome Fireplace Heater and press the desired function button.

5.1 Button Functions



**For remote control with the same buttons,
please distinguish carefully when purchasing**

Image 5.1: Close-up view of the remote control buttons, showing the various icons and their positions.

Button Icon	Function	Description
(Power Symbol)	Power ON/OFF	Turns the fireplace heater on or off.
(Flame Symbol)	Flame Effect	Adjusts or cycles through flame brightness/effect settings.
(Heat Wave Symbol)	Heat Setting	Controls the heat output (e.g., low, high, off).
(Timer Symbol)	Timer Function	Sets or adjusts the automatic shut-off timer.
(Temperature Symbol)	Temperature Control	Adjusts the desired temperature setting.

The operational distance of the remote control is up to 8 meters (approximately 26 feet), allowing for convenient control from various points in a room.



Image 5.3: A hand holding the remote control, demonstrating its use with a fireplace heater.

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Moisture:** Keep the remote control away from water and excessive humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries.	Replace batteries, ensuring correct polarity (+/-).
Reduced range	Low batteries or obstruction between remote and fireplace.	Replace batteries. Ensure a clear line of sight to the fireplace receiver.
Specific button not working	Button stuck or internal issue.	Gently press the button multiple times. If issue persists, contact support.

8. SPECIFICATIONS

- **Brand:** ZWP
- **Compatible Devices:** Valuxhome Fireplace Heaters (various Lexey and Luxey models)
- **Power Source:** 2 x 1.5V AAA Batteries (not included)
- **Material:** High-quality ABS
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1
- **Package Dimensions:** 6.8 x 2.3 x 1 inches
- **Item Weight:** 2.08 ounces

9. SUPPORT

For any questions or assistance regarding your ZWP Replacement Remote Control, please do not hesitate to contact us before leaving feedback. We are committed to helping you resolve any issues.

Note: Specific warranty information is not provided in the product details. Please refer to your purchase documentation or contact the seller for warranty details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question