

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ZWP](#) /
- › [ZWP GYKQ-78 Replacement Remote Control User Manual for Pioneer Diamante Air Conditioners](#)

ZWP GYKQ-78

ZWP GYKQ-78 Replacement Remote Control User Manual

For Pioneer Diamante Air Conditioners

1. PRODUCT OVERVIEW

The ZWP GYKQ-78 is a direct replacement remote control designed for a range of Pioneer Diamante Air Conditioner models. This remote offers full functionality without the need for complex programming, providing a convenient solution for controlling your air conditioning unit.

For Long Lasting Use

Built to Last


long lifespan


Advanced chip


Safety materials


Quality assurance



Image 1.1: The ZWP GYKQ-78 replacement remote control, showcasing its ergonomic design and clear button layout.

Key Features:

- **No Programming Required:** Ready to use directly after battery installation.
- **Durable Construction:** Made from high-quality, wear-resistant ABS material for long-lasting use.
- **Ergonomic Design:** Comfortable to hold and operate.
- **Wide Compatibility:** Compatible with numerous Pioneer Diamante Air Conditioner models.

Compatible Air Conditioner Models:

WYT020GLHI22M2
WYT012GLFI19RL
WYT009ALFI19RL
WYT009GLFI19RL
WYT012ALFI19RL
WYT018GLFI19RL
WYT024GLFI19RL
WYT036GLFI19RL

WYT009ALFI22RL
WYT009GLFI22RL
WYT024GLFI22RL
WYT012GLFI22RL
WYT012ALFI22RL
WYT030GLHI22M3

2. SETUP AND BATTERY INSTALLATION

The ZWP GYKQ-78 remote control requires two AAA batteries (not included) for operation. No programming or pairing is necessary; simply install the batteries, and the remote is ready for use.

1. **Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Slide the cover downwards or press the latch and lift to open.
2. **Insert Batteries:** Insert two new AAA batteries into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. **Close the Battery Compartment:** Replace the battery cover by sliding it back into position until it clicks securely.

NO Need to Set Up

Direct Use

Requires Two AAA batteries

(Batteries are not included) AAA



Image 2.1: Illustration showing the battery compartment and the requirement for two AAA batteries (not included).

Important: Ensure correct battery polarity. Remove batteries if the remote will not be used for an extended period to prevent leakage.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your ZWP GYKQ-78 remote control. The remote features an LED luminous display for clear visibility, even in low light conditions.



Image 3.1: The remote control's LED luminous display, which ensures buttons and screen are clearly visible without needing external light.

3.1 Button Functions

Button	Function
POWER (🔌)	Turns the air conditioner ON or OFF.
MODE	Cycles through operating modes: Cool, Heat, Dry, Fan, Auto, Sleep, ECO.
TEMP (🌡️)	Adjusts the desired temperature setting.
TURBO	Activates or deactivates the Turbo function for rapid cooling or heating.
FAN	Adjusts the fan speed (Low, Medium, High, Auto).
SWING	Controls the vertical louver swing function.
MUTE	Mutes or unmutes the air conditioner's operational sounds.
ECO	Activates or deactivates the energy-saving ECO mode.

Button	Function
TIMER	Sets the ON/OFF timer for the air conditioner.
SLEEP	Activates or deactivates the Sleep mode for comfortable nighttime operation.
I FEEL	Activates the "I Feel" function, which senses the temperature at the remote's location.
DISPLAY	Turns the air conditioner's display ON or OFF.



Image 3.2: The remote control displaying various functional modes such as Cool, Heat, Dry, Sleep, ECO, and Fan.

3.2 Remote Control Range

The ZWP GYKQ-78 remote control is designed for sensitive and precise control from a distance. It operates effectively up to 40 feet (approximately 12 meters) with a 180-degree multi-angle range, allowing flexible control within your room.

Sensitive buttons, long-distance precise control

Far from 40ft, 180° Multi angle remote control



Image 3.3: Illustration demonstrating the remote control's effective operating range of up to 40 feet and 180-degree angle.

4. MAINTENANCE

To ensure the longevity and optimal performance of your ZWP GYKQ-78 remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or the display becomes dim. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period (e.g., more than one month), remove the batteries to prevent potential leakage and damage to the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Impacts:** Protect the remote from physical shocks, as internal components can be sensitive to damage from drops.

5. TROUBLESHOOTING

If you encounter issues with your ZWP GYKQ-78 remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- Confirm you are within the effective operating range (up to 40 feet).

- **Display is Dim or Blank:**

- This usually indicates low battery power. Replace the batteries.

- **Air Conditioner Not Responding to Specific Functions:**

- Ensure the remote is pointed directly at the air conditioner.
- Some functions may be specific to certain air conditioner models or operating modes. Refer to your air conditioner's manual for specific feature compatibility.

5.1 Advanced Reset Functions (Refer to original AC manual for full details)

The back of the remote control may contain small text indicating advanced reset or pairing functions. These are typically for specific air conditioner models or diagnostic purposes. For the GYKQ-78, the following combinations are noted:

- Pressing **"FAN"** and **"MUTE"** together for over 3 seconds.
- Pressing **"SWING"** and **"SWING"** together for over 3 seconds.
- Pressing **"SLEEP"** and **"DISPLAY"** together for over 3 seconds.

Note: These combinations are for reference. Consult your specific Pioneer Diamante Air Conditioner user manual for detailed instructions on their use and potential effects.

Product Parameter



Image 5.1: Rear view of the remote control, showing product dimensions and small text detailing advanced button combinations for specific functions or resets.

6. SPECIFICATIONS

Feature	Detail
Model Number	GYKQ-78
Brand	ZWP
Compatible Devices	Pioneer Diamante Air Conditioners (various models)
Power Source	2 x AAA Batteries (not included)
Color	Black
Special Feature	Ergonomic design
Max Number of Supported Devices	1

Feature	Detail
Item Weight	2.24 ounces (approx. 63.5 grams)
Package Dimensions	6.8 x 2.2 x 1.1 inches (approx. 17.3 x 5.6 x 2.8 cm)

7. WARRANTY AND SUPPORT

For any questions or concerns regarding your ZWP GYKQ-78 replacement remote control, please contact the seller directly. While specific warranty details are not provided in this manual, the manufacturer aims to ensure customer satisfaction.

If you experience any issues, please reach out to the seller before leaving feedback. They are committed to assisting you with resolution.