

Beelicious Pro 28QT Air Fryer Toaster Oven Combo (Model B0F8448DV6)

Beelicious Pro 28QT Air Fryer Toaster Oven Combo

User Manual

Model: B0F8448DV6

INTRODUCTION

Thank you for choosing the Beelicious Pro 28QT Air Fryer Toaster Oven Combo. This versatile appliance is designed to simplify your cooking experience, offering 12 functions in one compact unit. With its advanced HeatWave Convection technology and spacious interior, you can prepare a wide variety of meals with ease and efficiency. Please read this manual thoroughly before operation to ensure safe and optimal use of your new appliance.



Figure 1: Beelicious Pro 28QT Air Fryer Toaster Oven Combo

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any other materials not specifically designed for cooking.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT OVERVIEW

Components and Features

The Beelicious Pro Air Fryer Toaster Oven is equipped with advanced features for optimal cooking performance:

- **Next-Gen HeatWave Convection:** Utilizes 6 heating elements and a powerful 1700W motor with a top convection fan (3,000 RPM) for rapid heating and even cooking.
- **28QT Large Capacity:** Designed with a 3-layer rack system to accommodate family-sized meals, such as a 12-inch pizza or a whole chicken.
- **12-in-1 Functions:** Offers versatile cooking modes including Air Fry, Toast, Bake, Broil, Roast, Reheat, Warm, Slow Cook, Preheat, Rotate, and Dehydrate.
- **Precise Temperature Control:** Adjustable from 100°F to 450°F with $\pm 5^{\circ}\text{F}$ accuracy, and the ability to switch between Fahrenheit and Celsius.
- **Intuitive Control Panel:** Features an LED display, control dials, and prominent buttons for easy operation.
- **Interior Oven Light:** Allows you to monitor cooking progress without opening the door.
- **Stainless Interior:** Durable and easy to clean.

Next-Gen HeatWave™ Convection

MAX

AIRFLOW



1700W Power

Fast Cooking

6 Heating Tubes

Uniform Heating

3,000 RPM

Ultra-Fast Speed

Powered by Beelicious HeatWave™

Figure 2: Next-Gen HeatWave Convection System

Included Accessories

Your Beelicious Pro Air Fryer Toaster Oven comes with a full set of accessories to enhance your cooking versatility:

- **Rotisserie Spit:** For roasting whole chickens or other large cuts of meat.
- **Rotisseries Lift:** Tool for safely removing the hot rotisserie spit from the oven.
- **Fry Basket:** Ideal for air frying foods like fries, nuggets, and vegetables, ensuring crispy results.
- **Wire Rack:** Suitable for toasting bread, baking, or cooking items that require air circulation.
- **Bake Pan:** For baking pizzas, cookies, or roasting various dishes.

- **Crumb Tray:** Collects crumbs and drips for easy cleaning and maintenance.



Figure 3: Included Accessories



**360° Convection for
Easier, Crispier Results**

Figure 4: Detailed View of Accessories and Their Uses

Control Panel Description

The control panel features an intuitive design for easy program selection and adjustment:

- **LED Display:** Shows time, temperature, and selected cooking mode.
- **Menu Dial:** Rotate to select cooking functions.
- **Time/Temp Dial:** Rotate to adjust cooking time or temperature.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.
- **Light Button:** Turns the interior oven light on or off.
- **Fan Button:** Controls the convection fan speed.
- **Mute Button:** Silences operational beeps.
- **°F/°C Button:** Toggles between Fahrenheit and Celsius temperature units.

Cook Smarter in Seconds!

Turn, Tap, Cook — It's That Easy



LED
Display



Intuitive
Control Dial



Prominent
Buttons



Mute
Button



Figure 5: Control Panel Layout

SETUP

Before First Use

1. Unpack the appliance and all accessories from the packaging. Remove any packing materials, stickers, or labels.
2. Wipe the exterior of the oven with a clean, damp cloth.
3. Wash all accessories (fry basket, wire rack, bake pan, rotisserie spit, rotisserie lift, crumb tray) with warm,

soapy water. Rinse thoroughly and dry completely.

4. Place the oven on a stable, level, heat-resistant surface, ensuring adequate clearance (at least 4 inches) on all sides for proper ventilation. Do not place it directly against a wall or under cabinets.
5. Before cooking food, run the oven empty for approximately 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present during this initial use; this is normal. Ensure the area is well-ventilated.
6. Allow the oven to cool completely before its first actual use.

OPERATING INSTRUCTIONS

Basic Operation

1. Plug the power cord into a grounded electrical outlet. The LED display will illuminate.
2. Rotate the **Menu Dial** to select your desired cooking function (e.g., Air Fry, Bake, Toast). The default time and temperature for the selected function will appear on the display.
3. Rotate the **Time/Temp Dial** to adjust the cooking time and temperature as needed. Press the dial to toggle between time and temperature adjustment.
4. Press the **Start/Pause Button** to begin the cooking cycle.
5. To pause cooking, press the **Start/Pause Button** again. Press it once more to resume.
6. To stop cooking, press and hold the **Start/Pause Button** for a few seconds until the display turns off or resets.

Cooking Functions

The Beelicious Pro offers 12 versatile cooking functions:

- **Air Fry:** For crispy foods with little to no oil, such as fries, chicken wings, and nuggets.
- **Toast:** Perfect for bread, bagels, and waffles.
- **Bake:** Ideal for cakes, cookies, casseroles, and other baked goods.
- **Broil:** For quick cooking and browning, such as melting cheese or searing meats.
- **Roast:** For cooking meats and vegetables to tender perfection.
- **Reheat:** Warms up leftovers while maintaining texture.
- **Warm:** Keeps food warm after cooking without overcooking.
- **Slow Cook:** For tender, slow-cooked meals.
- **Preheat:** Heats the oven to the desired temperature before adding food.
- **Rotate:** Activates the rotisserie function for even roasting.
- **Dehydrate:** For drying fruits, vegetables, and making jerky.

Effortless Meals for Every Craving

12 in 1 Functions



TOAST



ROAST



BROIL



BAKE



BAGEL



PIZZA



DEHYDR



SLOW COOK



Air Fryer

Enjoy crispy foods with both sides evenly and quickly cooked



Roast

Retain natural flavors and moisture for juicy, flavorful

Figure 6: Examples of 12-in-1 Cooking Functions

Using Accessories

Proper use of accessories ensures optimal cooking results:

- **Rotisserie Spit:** Insert the spit through the center of the food (e.g., whole chicken). Secure with forks. Place the spit into the rotisserie slots inside the oven. Select the 'Rotate' function.
- **Fry Basket:** Place food evenly in the basket. Slide the basket into the desired rack position. Ideal for air frying.
- **Wire Rack:** Use for items that need air circulation or for toasting. Place on any of the three rack levels.
- **Bake Pan:** Use for baking or roasting. Place on the wire rack or directly on the lower support rails.

- **Crumb Tray:** Always ensure the crumb tray is in place at the bottom of the oven to catch drips and crumbs.

Interior Oven Light

Check food anytime without opening the door.



Easy Rotisserie Setup

Easy rotisserie with removable fork & lift tool.



Stainless Interior

Wipes clean easily, stays shiny and durable.

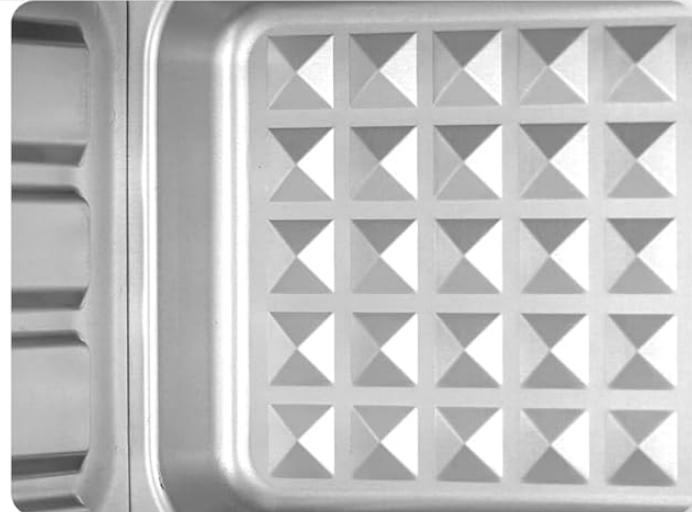


Figure 7: Interior Features and Rotisserie Setup

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Beelicious Pro Air Fryer Toaster Oven.

General Cleaning

1. Always unplug the oven from the power outlet and allow it to cool completely before cleaning.

2. Wipe the exterior with a clean, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
3. For the interior, wipe down with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure all cleaning solution is wiped away.
4. The stainless steel interior is designed for easy cleaning.



Figure 8: Cleaning the Oven Interior

Accessory Cleaning

- **Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray with warm, soapy water. Rinse and dry thoroughly before replacing. Clean regularly to prevent grease buildup and potential fire hazards.
- **Fry Basket, Wire Rack, Bake Pan, Rotisserie Spit/Lift:** These accessories can be washed by hand with warm, soapy water. For baked-on food, soak them in hot water before cleaning. They are also dishwasher safe.



Figure 9: Cleaning the Bake Pan

TROUBLESHOOTING

If you encounter any issues with your Beelicious Pro Air Fryer Toaster Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. If the issue persists, contact customer support.
Food is not cooking evenly.	Overcrowding the basket/rack; Incorrect temperature/time setting; Food not spread out.	Avoid overcrowding; cook in smaller batches if necessary. Adjust temperature and time according to recipe. Ensure food is spread in a single layer for air frying.
White smoke coming from the oven.	Grease/food residue buildup; Fatty foods cooking.	Unplug and allow to cool. Clean the interior and accessories thoroughly, especially the crumb tray. For fatty foods, this is normal; ensure good ventilation.
Oven light not working.	Light bulb burnt out; Electrical issue.	Contact customer support for assistance with bulb replacement or electrical issues.

If the problem persists after trying these solutions, please contact Beelicious Pro customer support.

SPECIFICATIONS

Feature	Detail
Brand	Beelicious Pro
Model	B0F8448DV6
Color	Sparkle Black
Product Dimensions (D x W x H)	16.3"D x 16.85"W x 13.23"H
Interior Dimensions (D x W x H)	12.2"D x 13.9"W x 7.2"H
Capacity	28 Quart
Item Weight	22.7 pounds
Power Source	Electric
Control Type	Touch & Dial
Number of Shelves	3 (rack positions)
Temperature Range	100°F – 450°F ($\pm 5^{\circ}\text{F}$ accuracy)
Special Feature	Programmable, Convection, Rotisserie
Included Components	Crumb tray, Fry Basket, Wire Rack, Bake Pan, Rotisserie Spit, Rotisseries Lift

Know the Size, Plan Your Space

Interior & Exterior Dimensions at a Glance



Figure 10: Product Dimensions

WARRANTY AND CUSTOMER SUPPORT

Your Beelicious Pro Air Fryer Toaster Oven Combo is backed by a **1-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For any questions, concerns, or warranty claims, our dedicated customer service team is ready to assist you promptly. Please feel free to contact us via Amazon's messaging system or through our consumer hotline. Problems will typically be resolved within 2 working days.

Please have your purchase information and product model number (B0F8448DV6) ready when contacting support to expedite the process.

© 2025 Beelicious Pro. All rights reserved.

Related Documents - 28QT Air Fryer Toaster Oven Combo (Model B0F8448DV6)

The image shows the Beelicious Pro 28-Quart Digital Air Fryer Toaster Oven (BAF-811). It is a white oven with a digital control panel featuring several buttons and a small display screen. The brand name 'Beelicious Pro' is printed above the control panel, and '28QUART DIGITAL AIR FRYER TOASTER OVEN' is printed below it. The model number 'BAF-811' is printed at the bottom of the oven door.	<p><u>Beelicious Pro 28-Quart Digital Air Fryer Toaster Oven User Manual</u> Comprehensive user manual for the Beelicious Pro 28-Quart Digital Air Fryer Toaster Oven (Model BAF-811), covering important safeguards, operation, cleaning, and troubleshooting.</p>
The image shows the Beelicious Pro BAF-811 28 Quart Digital Air Fryer Toaster Oven. It is a white oven with a digital control panel featuring several buttons and a small display screen. The brand name 'Beelicious Pro' is printed above the control panel, and '28QUART DIGITAL AIR FRYER TOASTER OVEN' is printed below it. The model number 'BAF-811' is printed at the bottom of the oven door.	<p><u>Beelicious Pro BAF-811 28 Quart Digital Air Fryer Toaster Oven User Manual</u> Comprehensive user manual for the Beelicious Pro BAF-811 28 Quart Digital Air Fryer Toaster Oven. Learn about its features, operation, cooking guides, cleaning, storage, and troubleshooting tips.</p>
The image shows the Beelicious Pro BAF-811 28 Quart Digital Air Fryer Toaster Oven. It is a white oven with a digital control panel featuring several buttons and a small display screen. The brand name 'Beelicious Pro' is printed above the control panel, and '28QUART DIGITAL AIR FRYER TOASTER OVEN' is printed below it. The model number 'BAF-811' is printed at the bottom of the oven door.	<p><u>Beelicious Pro BAF-811 28 Quart Digital Air Fryer Toaster Oven User Manual</u> Comprehensive user manual for the Beelicious Pro BAF-811 28 Quart Digital Air Fryer Toaster Oven, covering setup, operation, cooking guides, care, and troubleshooting.</p>
The image shows the Beelicious Pro VS8001 Vacuum Sealer. It is a white vacuum sealer with a digital control panel and a small display screen. The brand name 'Beelicious Pro' is printed above the control panel, and 'Manual de usuario' is printed below it. The model number 'VS8001' is printed at the bottom of the unit.	<p><u>Beelicious Pro VS8001 Vacuum Sealer User Manual</u> Comprehensive user manual for the Beelicious Pro VS8001 Vacuum Sealer, covering features, operation, troubleshooting, maintenance, and storage guidelines. Includes technical specifications and package contents.</p>
The image shows the Elite Gourmet ETO-4510M Countertop French Door Convection Toaster Oven. It is a white oven with a French door design, a digital control panel, and a small display screen. The brand name 'Elite Gourmet' is printed at the top, and 'COUNTERTOP FRENCH DOOR CONVECTION TOASTER OVEN' is printed below it. The model number 'ETO-4510M' is printed at the bottom of the oven door.	<p><u>Elite Gourmet ETO-4510M Countertop French Door Convection Toaster Oven Instruction Manual</u> Comprehensive instruction manual for the Elite Gourmet ETO-4510M Countertop French Door Convection Toaster Oven. Learn about important safeguards, parts identification, how to use the control panel, and various cooking functions like broil, bake, toast, convection, and rotisserie. Includes recipes and warranty information.</p>

