

Easytry11735

Generic Replacement Remote Control User Manual

Model: Easytry11735

INTRODUCTION

This document provides instructions for the Generic replacement infrared remote control, model Easytry11735. This remote is designed to be compatible with various Nordmende 4K LED UHD HDTV Android TV models, including ND39S3400T, ND55KFS5700T, ND32S4100M, ND39N2400T, NMT32DFHD, ND32S3400, ND32S4000T, and ND24S3400T.

Please ensure your current remote control matches the appearance of the remote shown in this manual for optimal compatibility. This replacement remote operates via infrared (IR) technology and typically requires no special setup or programming.



Image: Front view of the replacement remote control, showing all buttons.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, showing the two AAA battery slots.

2. Initial Use

This remote control is designed as an infrared replacement and typically does not require any programming or setup. Once batteries are installed, it should function directly with compatible Nordmende TV models. Point the remote directly at your television's IR sensor.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. Below is a general guide to common functions:

- **Power (●)**: Turns the TV on or off.
- **Input**: Selects the input source (HDMI, AV, etc.).
- **Number Buttons (0-9)**: Directly select channels.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the channel up or down.
- **MUTE**: Mutes or unmutes the TV sound.
- **DISP**: Displays on-screen information.

- **MENU:** Accesses the TV's main menu.
- **EXIT:** Exits the current menu or function.
- **ENTER:** Confirms a selection in menus.
- **Arrow Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **S.MODE (Sound Mode):** Cycles through sound presets.
- **P.MODE (Picture Mode):** Cycles through picture presets.
- **NETFLIX / YouTube:** Direct access buttons for these streaming services.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Next/Previous Track for media playback.

Note: Some advanced functions or specific buttons may not be fully compatible or may operate differently than your original remote, as this is a replacement unit.

MAINTENANCE

1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

2. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

3. Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's IR sensor.
 - Confirm you are pointing the remote directly at the TV.
- **Some functions do not work or work differently:**
 - This is a replacement remote. While it is broadly compatible, it may not replicate all functions of your original TV remote exactly.
 - Refer to your TV's original manual for specific functions if needed.
- **Remote does not work with my TV model:**
 - Verify that your TV model is listed as compatible in the product description.
 - Ensure your original remote control has the same appearance as this replacement remote. If

your model is not included or the remote looks different, it may not be compatible.

SPECIFICATIONS

Brand	Generic
Model Number	Easytry11735
Compatible Devices	Nordmende Televisions (Specific models listed in Introduction)
Connector Type	Infrared (IR)
Batteries Required	2 x AAA (not included)
Battery Cell Composition	Alkaline (recommended)
Color	Black

SUPPORT

For further assistance or inquiries regarding compatibility, please contact the seller directly. Ensure you provide your TV's exact model number and a description of the issue for efficient support.

Seller: [Easytry123](#)