

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Canon](#) /

> [Canon PIXMA G3180 High-Performance Wi-Fi Multifunction Printer User Manual](#)

## Canon G3180

# Canon PIXMA G3180 High-Performance Wi-Fi Multifunction Printer User Manual

Model: G3180 (Part Number: 6708C004)

## INTRODUCTION

---

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Canon PIXMA G3180 High-Performance Wi-Fi Multifunction Printer. Please read this manual thoroughly before using the printer to ensure correct and safe operation.

## SETUP

---

### 1. Unpacking and Initial Placement

Carefully remove the printer from its packaging. Place the printer on a stable, flat surface with adequate space around it for ventilation and access to connections.

# PIXMA G3180



## Impresión automática a doble cara desde cualquier dispositivo inalámbrico

Rendimiento

Impresora | Copiadora | Escáner

● Negro 6,000 páginas

● Color 7,700 páginas



Cabezal y cartucho de mantenimiento reemplazables

Conexión inalámbrica directa



Conectividad Wi-Fi



Compatible con:



Garantía extendida aplicable registrando el equipo en [www.canon.com.mx/servicio/registro](http://www.canon.com.mx/servicio/registro) dentro del primer año posterior a la compra. Aplicable en todos los modelos de tinta continua

Image: Front view of the Canon PIXMA G3180 printer, showing its compact design and front-facing ink tanks.

## 2. Filling the Ink Tanks

The PIXMA G3180 uses a refillable MegaTank system. Open the ink tank covers and carefully fill each tank with the corresponding color ink bottle (Black, Cyan, Magenta, Yellow). Ensure the ink bottles are securely sealed after filling.

## 3. Power Connection and Initial Power On

Connect the power cord to the printer and then to a power outlet. Press the power button to turn on the printer. Follow the on-screen instructions on the LCD display for initial setup, including language selection and print head alignment.

## 4. Wi-Fi Setup

To connect your printer to a Wi-Fi network, navigate to the Wi-Fi setup option on the printer's LCD screen. Select your network and enter the password. Alternatively, use the Canon PRINT Inkjet/SELPHY app on your smartphone or tablet for guided setup.

## OPERATING INSTRUCTIONS

### 1. Loading Paper

Open the paper support and pull out the paper output tray. Load plain paper (up to 100 sheets) into the rear paper tray. Adjust the paper guides to fit the paper size. The maximum paper size supported is 8.5 x 11 inches.

## 2. Printing Documents

From your computer or mobile device, select the Canon PIXMA G3180 as your printer. Adjust print settings as needed, such as paper size, print quality, and duplex printing. The printer supports automatic two-sided (duplex) printing, saving paper by printing on both sides of a sheet without manual reinsertion.

**Canon**

# GI-11

**Bajo costo de impresión\***  
\*En comparación con modelos de cartucho.

**Modelos Compatibles**

<b>G1130</b>	<b>G2160</b>	<b>G3160</b>	<b>G2170</b>
<b>G3170</b>	<b>G4170</b>	<b>G3180</b>	<b>G4180</b>

Para garantizar el óptimo funcionamiento de los equipos recomendamos el uso de tintas originales Canon. Las impresoras solo traen un juego de tintas. Las tintas se venden por separado.

Elige **Mega Tank**

Image: The Canon PIXMA G3180 printer in operation, with a document being printed and exiting the output tray.

# PIXMA

## Imprime fácil y rápido desde tus dispositivos

**Canon Print** es la aplicación para las impresoras Canon que facilita la conexión con tu celular o tableta.

**Configura fácilmente tu PIXMA y comienza a imprimir.** También podrás utilizar funciones como la comprobación de los niveles de tinta y la impresión a través de la nube.

**Compatible con iOS y Android.**



**Canon**

*Image: A close-up of the Canon PIXMA G3180's paper output tray, extended and ready to receive printed pages.*

### 3. Copying and Scanning

Lift the scanner lid and place your document face-down on the flatbed scanner glass. Close the lid. Use the printer's 3.4cm monochromatic LCD display to select 'Copy' or 'Scan'. For scanning, you can choose to save to a connected computer or a cloud service via the Canon PRINT app.

# Canon

## UTILIZA TINTAS ORIGINALES CANON



✓ Elige consumibles diseñados para proteger tu impresora.

✓ Aprovecha al máximo la tecnología de impresión de tu equipo.

✓ Asegura la compatibilidad con tus equipos Canon.



Image: The Canon PIXMA G3180 printer with its scanner lid open, revealing the flatbed glass for copying and scanning documents.

### 4. Using the LCD Display

The 3.4cm monochromatic LCD display with backlight can be adjusted up to 45 degrees for optimal viewing. Use the navigation buttons to access various functions, check ink levels, and configure settings.

## MAINTENANCE

### 1. Refilling Ink Tanks

When ink levels are low, refill the tanks using genuine Canon GI-11 ink bottles. The printer is designed for high yield, offering up to 7,700 color prints and 6,000 black and white prints per full set of ink bottles.

# Canon

## ¿NECESITAS AYUDA CON TU IMPRESORA?

Visita el portal de soporte técnico de Canon

Escanea  
el código QR  
para ir a la página




o llama al  
**800 710 7168**

**PIXMA**



*Image: A set of Canon GI-11 ink bottles (PGBK, C, M, Y) designed for the MegaTank refillable ink system.*

# Canon

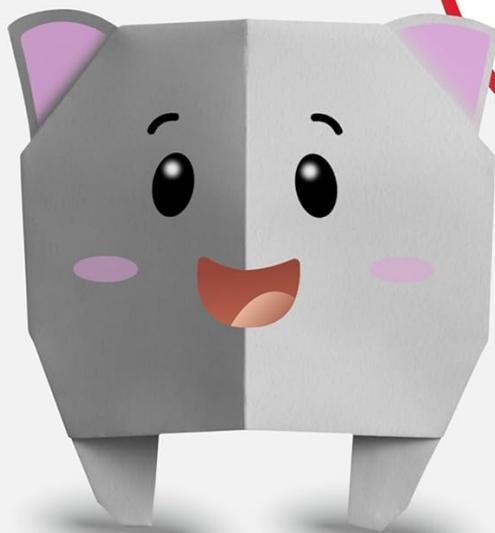

Conoce los resultados  
de las impresoras  
**Canon en la Revista  
del Consumidor** de  
Septiembre de 2024.

¡Escanea el código  
y conoce toda la  
información!



También puedes consultar la revista en:  
[https://www.profeco.gob.mx/revista/RevistaDelConsumidor\\_571\\_SEPTIEMBRE\\_2024.pdf](https://www.profeco.gob.mx/revista/RevistaDelConsumidor_571_SEPTIEMBRE_2024.pdf)

*Image: Canon GI-11 ink bottles displayed alongside a list of compatible PIXMA G-series printer models, including G3180.*

## 2. Using Genuine Canon Inks

For optimal performance and to protect your printer, always use genuine Canon consumables. This ensures maximum utilization of your equipment's printing technology and guarantees compatibility.

## 3. Print Head Cleaning

If print quality declines (e.g., streaks or faded colors), perform a print head cleaning from the printer's maintenance menu or through the printer driver on your computer.

## TROUBLESHOOTING

If you encounter issues with your printer, refer to the following general troubleshooting steps:

- **No Power:** Ensure the power cord is securely connected to both the printer and a working electrical outlet.
- **Printing Issues:** Check ink levels, paper loading, and ensure the printer is connected to your device (Wi-Fi or USB). Verify print settings on your computer or mobile device.
- **Wi-Fi Connection Problems:** Restart your router and printer. Re-attempt the Wi-Fi setup process. Ensure your printer

is within range of your Wi-Fi network.

- **Poor Print Quality:** Perform a print head cleaning and nozzle check from the printer's maintenance menu. Ensure you are using genuine Canon inks.

For more detailed troubleshooting, please visit the official Canon support portal.

## SPECIFICATIONS

---

Feature	Description
Maximum Paper Size	8.5 x 11 inches
Included Components	Ink Bottles
Print Media	Plain Paper
Scanner Type	Flatbed
Maximum Input Sheet Capacity	100 sheets
Sheet Size	8.5" x 11"
Duplex Printing	Yes (Automatic)
Manufacturer	CANON
Model Name	G3180
Part Number	6708C004
Special Features	Display Screen, Refillable Ink Tank
Form Factor	All-in-One
Product Dimensions	36.3 x 41.7 x 17.8 cm; 9.5 kg
Connectivity Technology	Wi-Fi
Printing Technology	Inkjet
Color (Printer)	Black
Print Output	Color
Maximum Color Print Speed	10 Pages per minute
Maximum Monochrome Print Speed	10 Pages per minute

## WARRANTY INFORMATION

---

The Canon PIXMA G3180 printer comes with a limited warranty. Additionally, an extended 2-year warranty may be available upon product registration. Please refer to the warranty documentation included with your product or visit the Canon website for specific terms and conditions.

## SUPPORT

---

For further assistance, technical support, or to access the full product manual, please use the following resources:

- **Online Manuals and Support Portal:** Visit the official Canon manual portal for comprehensive guides and troubleshooting tips: [Canon Official Manual Portal](#) (Note: Content may be in Spanish, select your preferred language if available).
- **Telephone Support:** You can contact Canon customer service at **800 710 7168** for direct assistance.



**Creative Park**

**Canon**

**IMPRIME Y CREA**  
Puedes encontrar una gran variedad de proyectos, manualidades y decoraciones en la página de **Creative Park**

A QR code is located to the left of the text.

*Image: A visual guide to Canon support, featuring a QR code for online resources and a contact phone number.*