

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Claus 4-Door Wardrobe Instruction Manual

Vicco 26972

Vicco Claus 4-Door Wardrobe Instruction Manual

Model: 26972 | Brand: Vicco

SAFETY INFORMATION

Important! Retain this manual for future reference. Read all instructions carefully before assembly and use.

TIPPING HAZARD! Unanchored furniture can tip over, causing serious or fatal injuries. To prevent this furniture from tipping, it **must be anchored to the wall**. Use appropriate fixing hardware suitable for your home's wall type. If you have questions or are unsure about the correct hardware, consult your local specialist retailer. Please follow each step of the assembly instructions carefully.

PRODUCT OVERVIEW

The Vicco Claus wardrobe is designed for organized storage in your home. This 4-door hinged wardrobe features a clothes rail for hanging garments and multiple shelves for folded items and accessories. Its universal design integrates seamlessly into various interior styles.



Full view of the assembled Vicco Claus 4-door wardrobe in white, positioned against a wall in a room setting.



Diagram illustrating the dimensions of the Vicco Claus wardrobe: 40 cm depth, 74 cm width, and 191.5 cm height.

SETUP AND ASSEMBLY

This wardrobe is delivered unassembled and requires careful assembly. Please ensure you have sufficient space and the necessary tools before beginning.

Before You Begin:

- Unpack all components and verify against the parts list in the separate assembly instructions.
- Ensure all mounting hardware is present.
- Prepare a clean, flat surface for assembly to prevent scratching components.

Assembly Steps:

Refer to the detailed graphical assembly instructions provided in the packaging for step-by-step guidance. Key steps include:

1. Assemble the main frame of the wardrobe.
2. Install the back panel for structural integrity.
3. Attach the clothes rail and position the shelves according to your storage needs.
4. Mount the four doors using the provided hinges, ensuring proper alignment.

5. **Wall Anchoring:** As per safety information, securely anchor the assembled wardrobe to a solid wall using appropriate wall fixings. This step is critical for preventing tipping.



The Vicco Claus wardrobe with its doors open, showcasing the interior layout with a clothes rail and multiple shelves for organized storage of garments and accessories.



A detailed view of the interior of the Vicco Claus wardrobe, highlighting the adjustable shelves and the sturdy clothes rail.

USAGE GUIDELINES

The Vicco Claus wardrobe is designed for efficient storage of clothing and various personal items.

- **Hanging Space:** Utilize the integrated clothes rail for hanging shirts, jackets, dresses, and other garments.
- **Shelf Storage:** The multiple shelves provide ample space for folded clothes, shoes, bags, and other accessories.
- **Weight Distribution:** Distribute the weight of items evenly across the shelves and hanging areas to maintain the wardrobe's stability and prevent warping. Do not exceed the maximum weight capacity of 40 kg.
- **Door Operation:** Open and close the doors gently to prevent wear and tear on the hinges.

MAINTENANCE

Proper maintenance will help preserve the appearance and functionality of your Vicco Claus wardrobe.

- **Cleaning:** Wipe surfaces with a soft, slightly damp cloth. Avoid using abrasive cleaners, harsh chemicals, or

solvents, as these can damage the painted finish.

- **Dusting:** Regularly dust the wardrobe with a dry, soft cloth to prevent dust buildup.
- **Hardware Check:** Periodically inspect all screws, bolts, and fittings. Retighten any loose connections to ensure the wardrobe remains stable and secure.
- **Environmental Conditions:** Protect the wardrobe from excessive moisture, humidity, and direct sunlight. Extreme conditions can cause the engineered wood material to warp, discolor, or degrade.

TROUBLESHOOTING

This section addresses common issues you might encounter with your wardrobe.

Doors do not align properly:

- Check the hinge adjustments. Most hinges allow for minor adjustments (up/down, left/right, in/out) to align doors. Refer to the assembly instructions for specific hinge adjustment details.
- Ensure the wardrobe is on a level surface. Use shims if necessary to level the unit.

Wardrobe feels unstable or wobbly:

- Verify that all assembly screws and fasteners are fully tightened.
- Confirm that the wardrobe is properly anchored to the wall as described in the Safety Information section. This is crucial for stability.
- Ensure the wardrobe is not overloaded and weight is distributed evenly.

Damaged parts upon delivery:

- If any parts are damaged or missing, do not proceed with assembly. Contact customer support immediately with details and photographic evidence of the damage.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Vicco
Model Number	26972
Color	White
Material	Engineered Wood (16 mm particle board)
Product Dimensions (L x W x H)	40 x 74 x 191.5 cm
Item Weight	52 Kilograms
Maximum Weight Capacity	40 Kilograms
Number of Doors	4
Style	Modern
Mounting Type	Floor Mount (requires wall anchoring)

Feature	Detail
Finish Type	Painted

WARRANTY AND SUPPORT

Warranty: This product is covered by standard legal guarantees. For specific details regarding warranty coverage, duration, and terms, please refer to your purchase documentation or contact the retailer where the product was purchased.

Returns: A 30-day return policy is typically available from the date of purchase. Please consult your seller's return policy for detailed procedures and conditions.

Customer Support: For any questions, assistance with assembly, troubleshooting, or to report damaged/missing parts, please contact specialized customer support. Refer to your purchase receipt or the seller's information for contact details.

© 2026 Vicco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

