

[Manuals.plus](#) /

› [MZK](#) /

› MZK Pressure Washer ET2501 Instruction Manual

MZK ET2501

MZK Pressure Washer ET2501 Instruction Manual

Model: ET2501

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your MZK ET2501 Electric Pressure Washer. Please read all instructions carefully before use and retain this manual for future reference. This electric pressure washer is designed for deep cleaning with up to 3.0 GPM water flow, suitable for various surfaces.



Figure 1: MZK Pressure Washer ET2501 Main Unit

The MZK ET2501 Electric Pressure Washer is equipped with anti-tipping technology, 360-degree lockable wheels, and a low center of gravity for enhanced stability and mobility during operation. It features four quick-connect metal spray nozzles and a foam cannon for diverse cleaning needs.



Figure 2: Anti-Tipping Design with 360° Lockable Wheels

2. SAFETY INFORMATION

Always prioritize safety when operating the pressure washer. High-pressure jets can be dangerous if misused. Never direct the water jet at people, animals, the unit, or electrical components.

- **Safety Switch:** The pressure washer is equipped with a safety switch to prevent accidental activation. Ensure the machine is only started when intended.
- **Eye and Ear Protection:** Always wear appropriate eye and ear protection during operation.
- **Electrical Safety:** Disconnect the product from the power supply when not in use, before cleaning, checking, or working on the product. Do not use if the power cord is damaged.
- **Water Supply:** Ensure the water supply is clean and free from debris. Do not use the product to rain or moisture.



SAFETY LOCK

PROTECTS KIDS FROM
ACCIDENTALLY
TRIGGERING THE
SPRAY GUN



**NEVER DIRECT THE WATER JET AT PEOPLE, ANIMALS,
THE UNIT OR ELECTRICAL COMPONENTS**

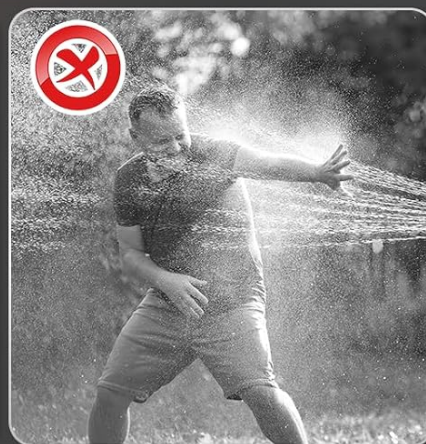


Figure 3: Safety Lock and Usage Warnings

3. PACKAGE CONTENTS

Verify that all items are present and undamaged upon unpacking. If any items are missing or damaged, contact customer support.

- MZK Pressure Washer Main Unit
- High-Pressure Hose (21 FT)
- Power Cord (17 FT)
- Spray Gun Assembly
- Quick-Connect Wand with 4 Nozzles (0°, 15°, 25°, 40°)
- Foam Cannon / Detergent Bottle
- 4 Swivel Wheels
- Handle
- Power Cord Hook

- Nozzle Holder
- User Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your MZK Pressure Washer:

1. **Attach Wheels:** Securely attach the four swivel wheels to the base of the main unit using the provided screws. Ensure they are firmly in place and can be locked if desired.
2. **Install Handle:** Slide the handle into the designated slots at the top of the unit and secure it with the supplied screws.
3. **Attach Power Cord Holder:** Slide the power cord holder onto the left side of the unit.
4. **Attach Gun Holder:** Slide the gun holder onto the right side of the unit.
5. **Attach Foam Blaster Holder:** Attach the foam blaster holder to the back of the unit.
6. **Connect High-Pressure Hose:** Push the high-pressure hose into the quick-connect port at the front of the main unit until it clicks securely.
7. **Connect Garden Hose:** Connect your standard garden hose to the water inlet at the back of the unit. Ensure a tight, leak-free connection.
8. **Connect Spray Gun:** Attach the other end of the high-pressure hose to the spray gun assembly.
9. **Attach Wand/Foam Cannon:** Connect either the quick-connect wand (with desired nozzle) or the foam cannon to the front of the spray gun assembly.



Figure 4: Assembly Guide Overview

5. OPERATING INSTRUCTIONS

Before operating, ensure all connections are secure and the water supply is turned on. Plug the power cord into a standard AC outlet.

5.1. Nozzle Selection

The MZK ET2501 comes with four quick-connect nozzles for various cleaning tasks:

- **0° (Red):** Intense spot cleaning for tough stains on durable surfaces like concrete cracks, rust, or metal.
- **15° (Yellow):** Powerful stain removal for oil, concrete, or boat hulls.
- **25° (Green):** Surface cleaning for decks, wood, or fences.
- **40° (White):** Light dusting and dirt removal for automobiles, windows, or garden furniture.



Figure 5: Quick-Connect Nozzles and Spray Patterns

5.2. Foam Cannon Usage

The included foam cannon is ideal for pre-treatment and deep cleaning, especially for vehicles. Fill the detergent bottle with your preferred cleaning solution (e.g., car wash soap, bleach). The cleaner will not pass through the pump, ensuring its longevity.



Figure 6: Foam Cannon for Pre-Treatment

5.3. Water Source Options

The pressure washer offers multiple ways to draw water, providing flexibility for different locations:

- **Faucet Connection:** Directly connect to a standard outdoor faucet.
- **Bucket/Pool Intake:** The unit can also draw water from a bucket or swimming pool, making it convenient for areas without direct faucet access.



Figure 7: Multiple Water Intake Options

5.4. Official Product Video

Your browser does not support the video tag.

Video 1: MZZK Electric Pressure Washer in action, demonstrating various features and cleaning capabilities.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Cleaning Nozzles:** Periodically check nozzles for clogs. Use the included nozzle tip cleaner to clear any blockages.
- **Hose and Cord Inspection:** Inspect the high-pressure hose and power cord for any signs of wear, cuts, or damage before each use. Replace damaged components immediately.
- **Water Filter:** Clean the water inlet filter regularly to prevent debris from entering the pump.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Drain all water from the pump and hoses before storing to prevent freezing damage.

7. TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the following common troubleshooting steps:

- **No Power:** Ensure the power cord is securely plugged in and the outlet is functional. Check the on/off switch position.
- **No Water Pressure:** Verify that the water supply is fully open and the garden hose is not kinked. Check the water inlet filter for blockages. Ensure the nozzle is not clogged.
- **Leaking Connections:** Tighten all hose connections. Inspect O-rings for wear or damage and replace if necessary.

- **Motor Runs but No Water:** Ensure all air is purged from the system by squeezing the spray gun trigger without a nozzle attached until a steady stream of water emerges.

For persistent issues, please contact MZK customer support.

8. SPECIFICATIONS

Brand	MZK
Model Number	ET2501
Power Source	AC Electric
Maximum Flow Rate	3 Gallons Per Minute (GPM)
Hose Length	21 FT (252 Inches)
Power Cord Length	17 FT
Item Weight	17 Pounds
Product Dimensions	14"L x 11"W x 16.5"H
Color	Red

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included in your package or visit the official MZK website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question