

JOYIN 17771

JOYIN Animated Pop-Up Pumpkin Decoration Model 17771 User Manual

Model: 17771 | Brand: JOYIN

- Contents
- Setup
- Introduction
- Safety Information
- Package
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Support

1. INTRODUCTION

Thank you for purchasing the JOYIN Animated Pop-Up Pumpkin Decoration. This life-sized, sound-activated Halloween prop features a pop-up head, LED red eyes, and terrifying sounds to enhance your outdoor or indoor Halloween display. Please read this manual carefully before setup and operation to ensure safe and proper use.

2. IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Do not use in wet or damp conditions. This product is designed for outdoor display but should be protected from heavy rain or prolonged moisture.
- Keep away from flammable materials.
- Do not allow children to play on or near the display. This is a decorative item, not a toy.
- Do not leave unattended while in operation.
- Keep batteries out of reach of children. Always insert batteries correctly and dispose of them properly.
- Store in a cool, dry place when not in use to prolong product life.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- 1 x JOYIN Animated Pop-Up Pumpkin Decoration (Main Unit)
- Assembly components (e.g., stand, support poles - specific parts may vary)
- Instruction Manual (this document)

Note: 4 AA batteries are required for operation and are not included in the package.

4. SETUP INSTRUCTIONS

Follow these steps to set up your animated pumpkin decoration:

4.1 Assembly

1. Carefully remove all components from the packaging.
2. Assemble the base and support structure according to the diagrams provided in the packaging. Ensure all connections are secure.
3. Attach the main pumpkin decoration body to the assembled stand. The decoration is designed to stand at approximately 67 inches (170 cm) and can extend to 73 inches (186 cm) when activated.
4. Position the posable arms as desired to create a spooky effect.

4.2 Battery Installation



Figure 1: Battery compartment location and installation steps.

1. Locate the battery compartment on the back of the decoration. (Refer to Figure 1)
2. Open the battery compartment cover. This may require a small screwdriver (not included).
3. Insert 4 new AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

4.3 Placement

Place the decoration on a flat, stable surface. For outdoor use, ensure it is in a location protected from direct heavy rain and strong winds. Use additional stakes (not included) if necessary to secure the base, especially in windy conditions.



Figure 2: Example of outdoor placement for the animated pumpkin decoration.

5. OPERATION

The JOYIN Animated Pop-Up Pumpkin Decoration is sound-activated.

5.1 Activating the Decoration

BUILT IN LED LIGHTS



Pop-Up Pumpkin will be activated when your guests make a noise

Figure 3: The built-in LED lights in the pumpkin's eyes.

- Once batteries are installed, the decoration is in standby mode.
- The sound sensor has a range of approximately 1.64 feet (0.5 meters).
- When a sound is detected within this range, the pumpkin's head will pop up, its LED red eyes will light up, and it will emit terrifying sounds.



Figure 4: The pumpkin's head pops up and emits sounds when activated.

To ensure consistent activation, place the decoration in an area where sounds are likely to occur within the sensor's range, such as near a walkway or entrance.

6. MAINTENANCE

- **Cleaning:** Wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use, remove the batteries to prevent leakage. Store the decoration in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace all 4 AA batteries when the animation or sound effects become weak or inconsistent.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Decoration does not activate.	Batteries are dead or incorrectly installed. Sound sensor is not detecting sound. Power switch (if present) is off.	Replace batteries with new ones, ensuring correct polarity. Ensure sounds are made within 1.64 feet (0.5 meters) of the sensor. Check for an ON/OFF switch and ensure it is in the ON position.
Head does not pop up fully or smoothly.	Low battery power. Obstruction in the mechanism.	Replace batteries. Inspect the pop-up mechanism for any foreign objects or damage.
Sound is distorted or too quiet.	Low battery power. Speaker obstruction.	Replace batteries. Ensure the speaker is not covered.

8. SPECIFICATIONS

Model Number	17771
Brand	JOYIN
Dimensions (Approx.)	67 inches (170 cm) standing, extends to 73 inches (186 cm) when activated.
Power Source	4 x AA Batteries (not included)
Light Color	Red (LED Eyes)
Frame Material	Metal
Sound Sensor Range	Approximately 1.64 feet (0.5 meters)
GTIN / UPC	840494303313

67 inch
(170 cm)



73 inch
(186 cm)



PRODUCT DIMENSIONS

Figure 5: Product dimensions in both static and activated states.

9. WARRANTY AND SUPPORT

For product support, warranty information, or to report any issues, please contact JOYIN customer service. Refer to your purchase documentation or the JOYIN official website for contact details.

Website: [Visit the JOYIN Store on Amazon](#)

Please have your model number (17771) and proof of purchase ready when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8TD816K>

More documents and user manuals: <https://manuals.plus/>