

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Real Relax](#) /

> [Real Relax 80-inch TV Stand with 36-inch Electric Fireplace User Manual \(Model RYJ-36\)](#)

Real Relax RYJ-36

Real Relax 80-inch TV Stand with 36-inch Electric Fireplace User Manual

Model: RYJ-36

Brand: Real Relax

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Secure the TV stand to the wall to prevent tip-over.** Use the provided anti-tip hardware.
- Do not overload the TV stand with heavy items. Refer to the specifications for weight limits.
- Ensure all electrical connections for the fireplace are properly installed and meet local codes.
- Do not block the air intake or exhaust vents of the electric fireplace. Maintain clear space around the unit.
- The electric fireplace features a built-in intelligent overheating automatic shut-off system. If the unit overheats, it will power off automatically. Unplug the unit and allow it to cool before restarting.
- Keep children and pets away from the electric fireplace when it is operating, especially when heat is active.

2. PRODUCT OVERVIEW

The Real Relax 80-inch TV Stand with 36-inch Electric Fireplace is designed to accommodate TVs up to 90 inches. It features a high-gloss finish, U-shaped legs, dual enclosed storage cabinets with adjustable shelves, and an integrated electric fireplace with LED lighting and heating functions.



Image 2.1: The Real Relax 80-inch TV Stand with integrated electric fireplace.

3. SETUP AND ASSEMBLY

Assembly is required. It is recommended that two adults assemble this unit. Please ensure all parts are present before beginning assembly.

3.1 Unboxing and Part Identification

The TV stand and electric fireplace are shipped in two separate boxes, which may arrive at different times. Please be patient and ensure both boxes are received before starting assembly.

Product Dimension



Note: the TV stand comes with 2 boxes may arrive at different times, please be patient!

Image 3.1: Product dimensions and shipping information. The TV stand arrives in two separate packages.

3.2 Assembly Instructions

Refer to the detailed assembly instructions included in the packaging for step-by-step guidance. Ensure all screws and fasteners are tightened securely. Do not overtighten.

1. Assemble the main frame of the TV stand according to the diagrams.
2. Install the U-shaped legs, ensuring they are stable and level.
3. Insert the adjustable shelves into the storage cabinets at your desired height.
4. Carefully place the 36-inch electric fireplace into its designated opening in the TV stand. Ensure it is centered and stable.
5. Attach the anti-tip hardware to the back of the TV stand and secure it to a wall stud using appropriate wall anchors (not always included, check packaging).

Storage Cabinet



Image 3.2: Adjustable shelves provide flexible storage options within the cabinets.

U-Shaped Legs

With the bottom left empty, the sweeper can move in and out freely, leaving no place for dust to hide



Image 3.3: The U-shaped legs design allows for easy cleaning underneath the unit.

3.3 TV Placement

The 80-inch countertop is designed to support TVs up to 90 inches. Ensure the TV's base fits securely on the stand and does not exceed the stand's weight capacity.



Image 3.4: The 80-inch TV stand is suitable for TVs up to 90 inches.

4. OPERATING THE ELECTRIC FIREPLACE

The electric fireplace can be controlled via the touch screen panel on the unit or the included remote control.

4.1 Remote Control Functions

The remote control allows for flexible and precise adjustment of the fireplace's settings.

Remote

Easily operated by remote control

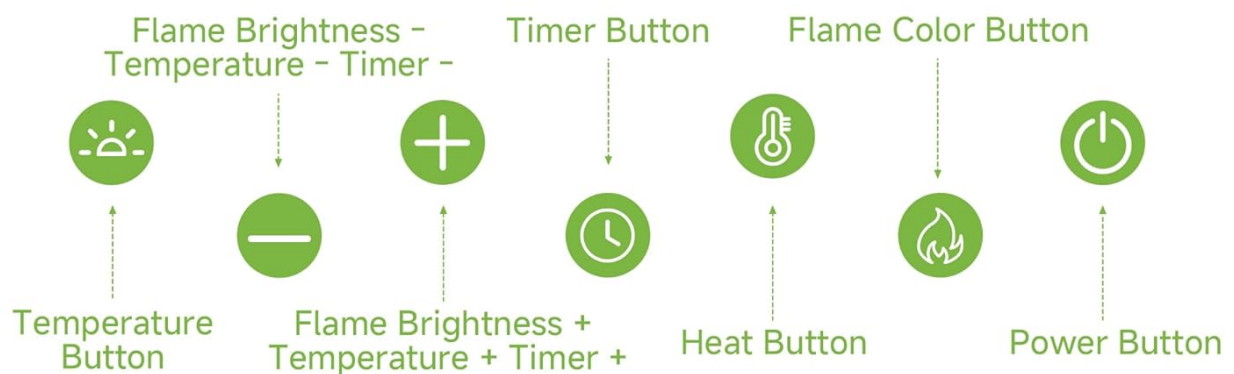



Image 4.1: Electric Fireplace Remote Control Layout.

- **Power Button:** Turns the fireplace ON/OFF.
- **Flame Color Button:** Cycles through 12 flame and LED light color combinations.
- **Timer Button:** Sets the operating timer from 1 to 9 hours.
- **Temperature Button:** Adjusts the thermostat setting from 60°F to 99°F.
- **Heat Button:** Activates or deactivates the heating function. The unit provides 1500W of heat.
- **Flame Brightness +/-:** Adjusts the flame brightness through 5 levels.

4.2 Touch Screen Control

The fireplace also features a touch screen control panel on the unit for direct adjustments of settings, mirroring the remote control functions.

36" Electric Fireplace

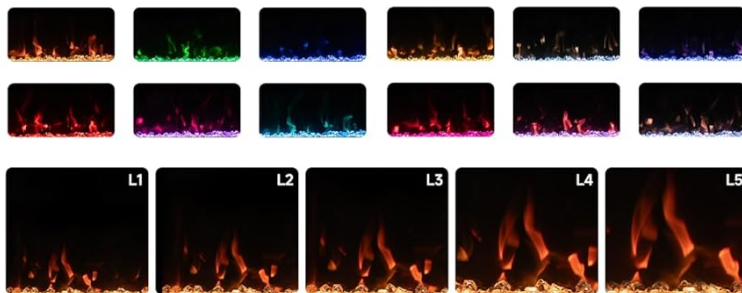

12 Colors of LED Strips
to Choose From



5 Level Brightness

Dimmer



Brighter

Image 4.2: The 36-inch electric fireplace offers 12 flame colors and 5 brightness levels.

5. MAINTENANCE

Regular maintenance ensures the longevity and appearance of your TV stand and electric fireplace.

5.1 Cleaning the High-Gloss Surface

The TV stand features a high-gloss mirror finish that is easy to clean and maintain.

- Use a soft, damp cloth to wipe down the surfaces.
- Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- For stubborn marks, use a mild, non-abrasive cleaner specifically designed for high-gloss furniture.

High Gloss Surface

easy to clean and maintain



Image 5.1: The high-gloss surface is designed for easy cleaning and maintenance.

5.2 Electric Fireplace Maintenance

- Ensure the fireplace is unplugged before any cleaning or maintenance.
- Wipe the exterior surfaces with a soft, damp cloth.
- Periodically check the air intake and exhaust vents for dust or obstructions and clean as necessary.

6. TROUBLESHOOTING

If you encounter issues with your Real Relax TV Stand or Electric Fireplace, refer to the following common solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power switch off, remote battery low, overheating.	Check power cord connection. Ensure wall outlet is functional. Check main power switch on fireplace. Replace remote batteries. If unit overheated, unplug and allow to cool for 15-20 minutes before restarting.
No heat output.	Heat function not activated, temperature setting too low.	Press the 'Heat' button on the remote or control panel. Increase the temperature setting.
Flame effect not working.	Flame effect turned off.	Press the 'Flame Color' or 'Flame Brightness' button to activate.
Remote control not responding.	Low battery, obstruction, remote out of range.	Replace remote batteries. Ensure no obstructions between remote and fireplace sensor. Operate within recommended range.
TV stand feels unstable.	Loose assembly, not secured to wall.	Re-check all assembly connections and tighten. Ensure anti-tip hardware is properly installed and secured to a wall stud.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	RYJ-36
Product Dimensions (L x W x H)	80 x 17 x 24 inches
Item Weight	87 pounds
Material	Particle Board + MDF + Tempered Glass
Color	Black
Electric Fireplace Size	36 inches
Heat Output	1500W
Temperature Control Range	60°F - 99°F
Timer Settings	1-9 hours
Flame & LED Colors	12 combinations
Flame Brightness Levels	5 levels

Feature	Detail
Included Components	TV Stand, Electric Fireplace, Remote Control, Assembly Instruction

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your product or contact Real Relax customer service directly. Keep your purchase receipt for warranty claims.

For assistance with assembly, operation, or troubleshooting beyond this manual, please visit the [Real Relax Store on Amazon](#) or contact their support team.

