

Garwarm TT-JD1602-4B

Garwarm Modern Ceiling Light Track Lighting (Model TT-JD1602-4B) Instruction Manual

Dimmable LED Kitchen Ceiling Light Fixture with Remote Control

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the installation, operation, and maintenance of your Garwarm Modern Ceiling Light Track Lighting. This versatile fixture features a sleek black metal frame with four eyeball-shaped LED lamps, offering adjustable brightness and color temperature via remote control or app. It can be installed as a ceiling light, track lighting, or a wall sconce, making it suitable for various indoor spaces such as kitchens, living rooms, bedrooms, and hallways.

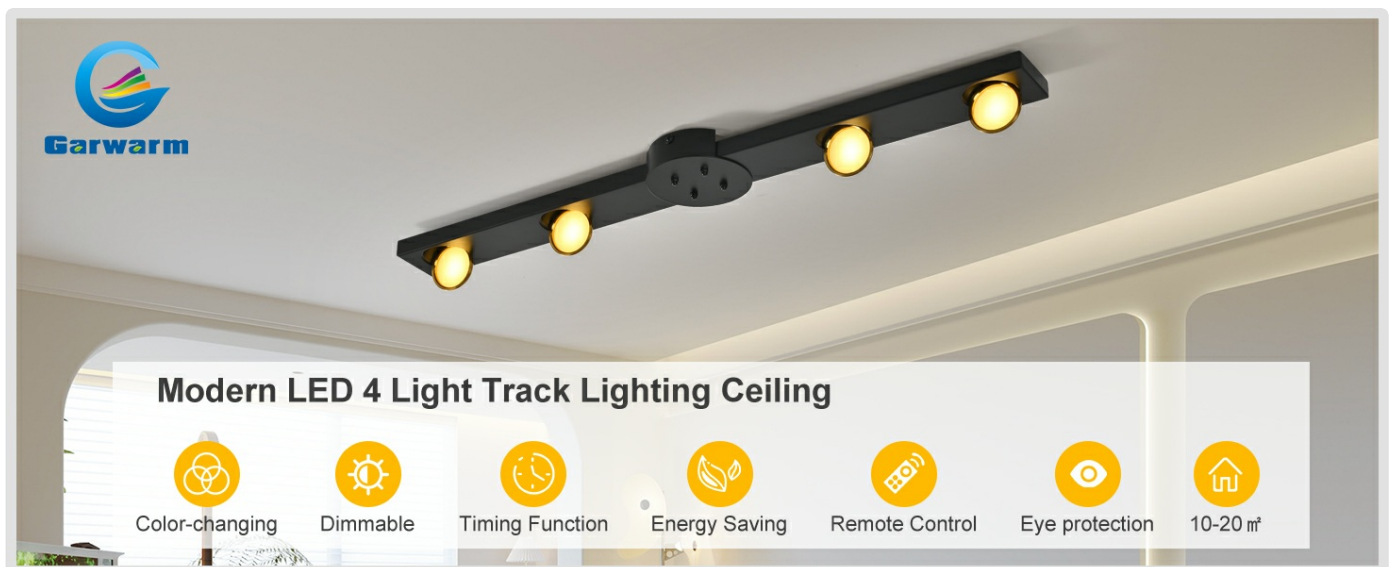


Image 1.1: The Garwarm Modern Ceiling Light can be used as a ceiling light or a wall sconce.

2. SAFETY INFORMATION

- Always turn off the power at the circuit breaker before beginning installation or performing any maintenance.
- Consult a qualified electrician if you are unsure about the installation process.

- Ensure all electrical connections are secure and comply with local codes and ordinances.
- This fixture is designed for indoor use only. Do not expose to moisture or outdoor elements.
- Do not attempt to modify the fixture. Any modifications may void the warranty and create a safety hazard.
- **Important Notice:** This light fixture is not compatible with traditional dimmer switches. Using a dimmer switch may cause flickering or damage to the unit. Please use a standard ON/OFF wall switch. For dimming functionality, use the included remote control.

Important Notice!

This light fixture is not compatible with dimmer switches - using one may cause flickering. Please use a standard wall switch instead. For dimming functionality, please use the included remote control. Thank you!



Image 2.1: Illustration of compatible and incompatible wall switches. Use a standard ON/OFF switch.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before installation.

- LED Light Fixture (with integrated bulbs)
- Remote Control
- Mounting Hardware (screws, wire nuts, etc.)
- Instruction Manual

4. SPECIFICATIONS

Feature	Specification
Brand	Garwarm
Model Number	TT-JD1602-4B
Color	Black
Material	Iron
Light Source	Integrated LED
Number of Light Sources	4
Wattage	24 Watts
Brightness	1600 Lumens
Color Temperature	3000K (Warm White), 4500K (Natural White), 6500K (Bright White)
Dimmable	Yes (via remote control/app, 10-100% stepless dimming)
Voltage	110V-265V
Fixture Length	32.28 inches (82 cm)
Fixture Width	4.72 inches (12 cm)
Fixture Height	1.38 inches (3.5 cm)
CRI	80Ra
Installation Type	Flush Mount (Ceiling, Track, Wall)
Recommended Room Size	10 - 20 square meters



Image 4.1: Product dimensions and key features like black metal frame and rotation capabilities.

5. SETUP AND INSTALLATION

This fixture offers three installation modes: flush mount ceiling, track lighting, or wall sconce. Follow these general steps for installation. Always ensure power is off before starting.

5.1 General Installation Steps

1. **Prepare the Area:** Turn off power at the circuit breaker. Clear the installation area.
2. **Mount the Bracket:** Secure the mounting bracket to the ceiling or wall junction box using the provided screws. Ensure it is firmly attached.
3. **Wire Connections:** Connect the fixture's wires to your household electrical wires (typically black to black, white to white, and ground to ground) using the included wire nuts. Ensure connections are tight.
4. **Attach the Fixture:** Carefully align the fixture with the mounting bracket and secure it with the provided screws.
5. **Adjust Light Heads:** The eyeball-shaped lamp bodies can be rotated 360° horizontally and 90° vertically to direct light

as needed.

6. **Restore Power:** Once the fixture is securely installed, turn the power back on at the circuit breaker.

5.2 Installation Video Guide

For a visual guide on the installation process, please refer to the official product video below. This video demonstrates the steps involved in setting up your light fixture.

Video 5.1: Official Garwarm video demonstrating the installation and features of the 31.5-inch Modern Ceiling Light Track Light.

5.3 Rotatable Track Head

Each light head can be rotated 90 degrees vertically and 360 degrees horizontally, allowing you to direct the light precisely where it's needed. This feature is ideal for spotlighting artwork, illuminating specific areas, or creating ambient lighting.

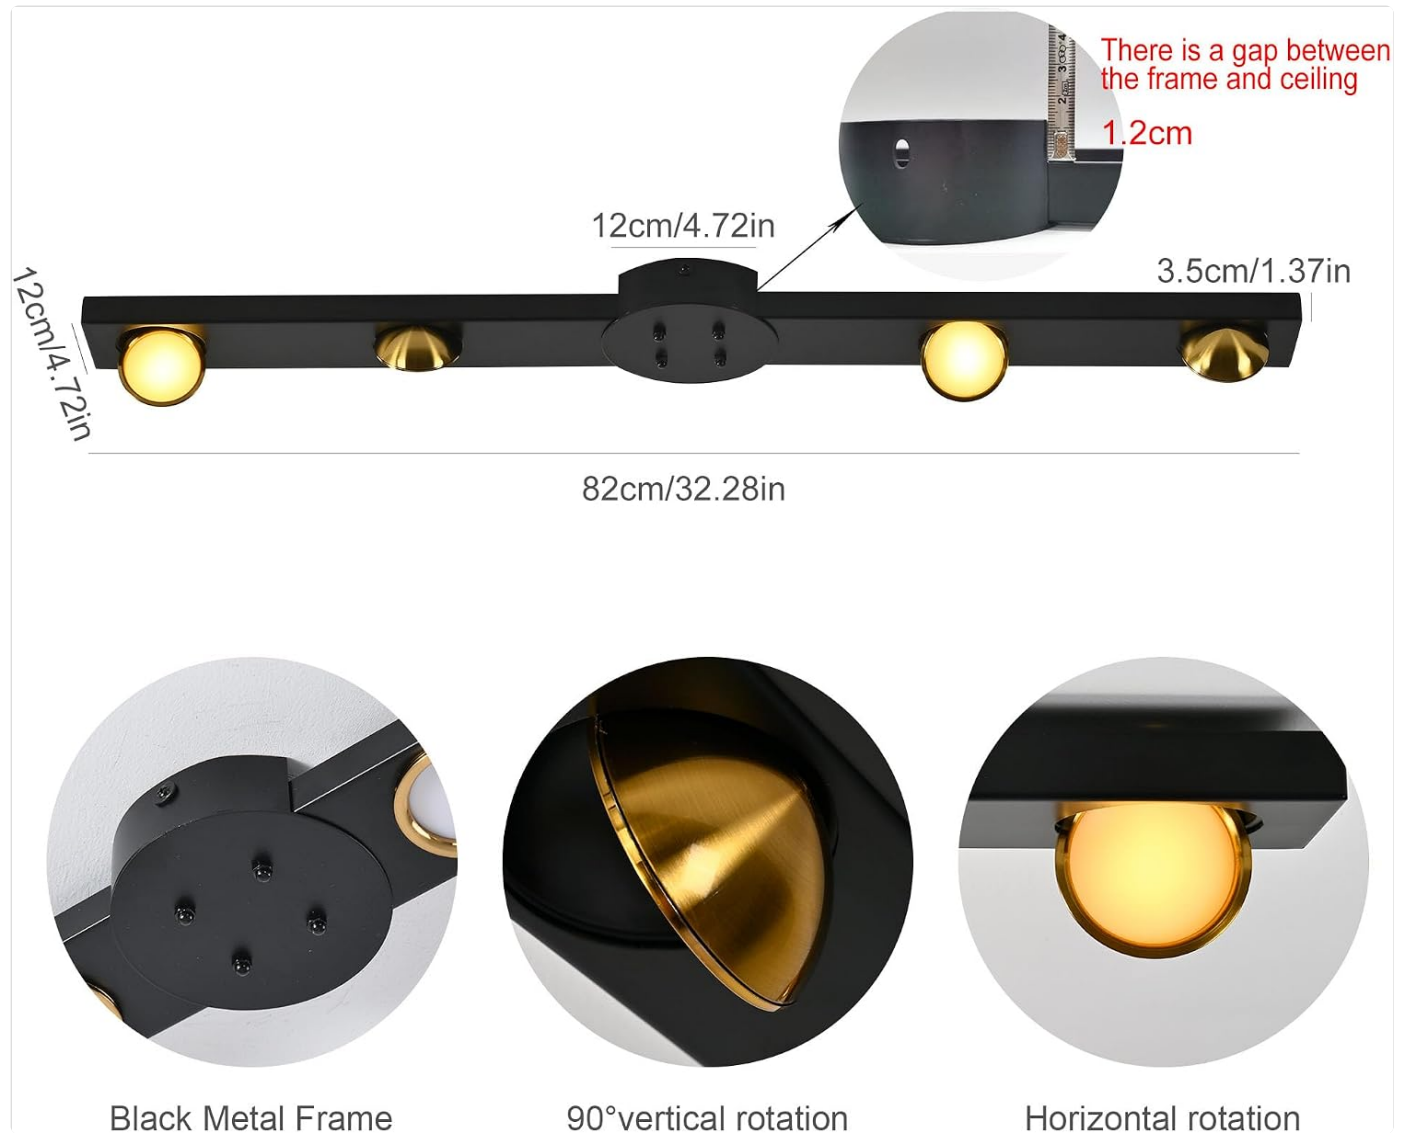


Image 5.2: The light heads offer full rotational flexibility.

6. OPERATING INSTRUCTIONS


Your Garwarm ceiling light is controlled via the included remote control or a compatible mobile application (if available). It offers dimming and color temperature adjustment.

6.1 Remote Control Functions

- **Power ON/OFF:** Press the power button to turn the light on or off.

- **Brightness Adjustment:** Use the brightness buttons (up/down arrows) to adjust the light intensity from 10% to 100% (stepless dimming).
- **Color Temperature Change:** Cycle through 3000K (Warm White), 4500K (Natural White), and 6500K (Bright White) using the dedicated color temperature buttons.
- **Timer Function:** Set a timer for the light to turn off automatically (refer to remote control specific instructions for details).

3 Color Changeable(3000K-4500K-6500K)

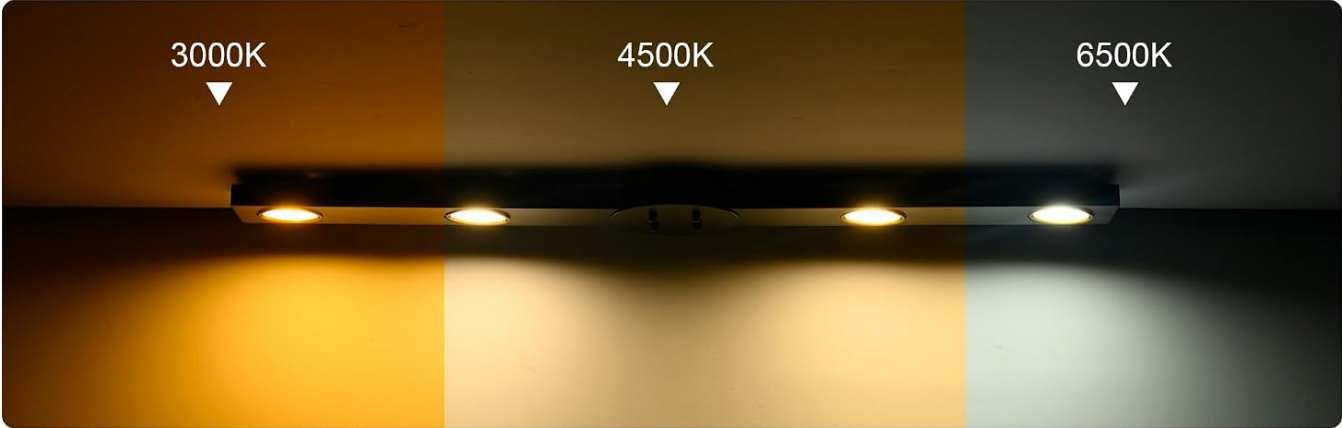



Not compatible with any dimmable switch



Only accept a regular on/off switch



Remote Control

3 Color Changeable



Warm light Natural light White light

10%-100% Dimmable



10% 100%



Image 6.1: Remote control functions for color temperature and dimming.

6.2 Memory Function

The fixture retains the last brightness and color temperature setting when turned off and on via the wall switch, provided it was last controlled by the remote.

7. MAINTENANCE

To ensure the longevity and optimal performance of your light fixture, follow these simple maintenance guidelines:

- **Cleaning:** Before cleaning, ensure the power is turned off. Use a soft, dry cloth to wipe the fixture. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** The LED chips are integrated and not user-replaceable. The fixture is designed for a long service life.
- **Regular Checks:** Periodically check all connections and mounting hardware to ensure they remain secure.

8. TROUBLESHOOTING

If you encounter any issues with your Garwarm ceiling light, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Light does not turn on	No power, loose wiring, remote control battery dead	Check circuit breaker. Ensure all wire connections are secure. Replace remote control batteries.
Light flickers or dims unexpectedly	Incompatible dimmer switch being used	Ensure a standard ON/OFF wall switch is used. Dimming is only supported via the included remote control.
Remote control not working	Dead batteries, remote out of range, interference	Replace remote batteries. Ensure remote is within effective range of the fixture. Remove any obstructions.
Fixture arms appear to droop	Structural issue or installation method	Ensure the fixture is securely mounted and all screws are tightened. If the issue persists, contact customer support.

9. WARRANTY AND SUPPORT

Your Garwarm Modern Ceiling Light Track Lighting comes with a**2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

If you experience any quality issues, require assistance with installation, or have questions about your product, please do not hesitate to contact Garwarm customer support. We are committed to providing a satisfactory solution.

For further information or support, please visit the official Garwarm Store on Amazon:[Garwarm Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question