

Poedagar 866

Poedagar Men's Quartz Chronograph Wristwatch

Model 866 Instruction Manual

1. INTRODUCTION

Thank you for choosing the Poedagar Men's Quartz Chronograph Wristwatch Model 866. This manual provides essential information for the proper setup, operation, and maintenance of your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.

This watch features a durable stainless steel construction, a precise quartz movement, chronograph functionality, luminous display, and water resistance suitable for daily use.





Image 1.1: Front view of the Poedagar Model 866 Chronograph Watch.

2. SAFETY INFORMATION

- Avoid exposing the watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or sudden temperature changes.
- Do not operate the crown or pushers while the watch is submerged in water to maintain water resistance.
- Keep the watch away from strong magnetic fields, as this can affect the accuracy of the quartz movement.
- Clean the watch regularly with a soft, dry cloth. For water-resistant models, a slightly damp cloth can be used, followed by drying.

- Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

3. SETUP

3.1 Unboxing and Initial Inspection

Upon opening the package, verify that all components are present:

- Poedagar Model 866 Wristwatch
- Instruction Manual (this document)
- Stainless steel band adjustment tool



Image 3.1: Watch, box, and strap adjustment tool.

3.2 Time and Date Setting

The watch features a crown and two pushers on the right side of the case. Refer to Image 3.2 for button identification.

1. **Setting the Time:** Pull the crown out to position 2. Rotate the crown to set the hour and minute hands. Push the crown back to position 0 to start the watch.
2. **Setting the Date:** Pull the crown out to position 1. Rotate the crown clockwise or counter-clockwise (depending on the movement) to adjust the date. Push the crown back to position 0. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.



Image 3.2: Multi-function sub-dials and side button functions.

3.3 Strap Adjustment

The stainless steel strap can be adjusted using the included tool. This process involves removing links to achieve a comfortable fit. If you are unsure, it is recommended to seek assistance from a professional jeweler or watch repair service.

4. OPERATING INSTRUCTIONS

4.1 Basic Timekeeping

Once the time and date are set, the watch will continuously display the current time. The main hands indicate hours and minutes, while a smaller sub-dial may indicate seconds or a 24-hour format, depending on the specific model configuration.

4.2 Chronograph Function

The chronograph allows for precise timing of events. Refer to Image 3.2 for button identification.

- **Start/Stop:** Press the top pusher (A) to start the chronograph. Press it again to stop.
- **Reset:** While the chronograph is stopped, press the bottom pusher (B) to reset all chronograph hands to their zero positions.

4.3 Luminous Display

The watch hands and hour markers are coated with a luminous material. After exposure to light, these elements will glow in the dark, allowing for readability in low-light conditions. The intensity and duration of the glow depend on the exposure time and intensity of light.



Image 4.1: Luminous display in low light.

4.4 Water Resistance

This watch is rated for 30 meters (3 ATM) of water resistance. This means it is suitable for daily use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain the appearance and hygiene of your watch. Use a soft, lint-free cloth to wipe the case and strap. For stainless steel straps, a soft brush can be used to remove dirt from crevices. Ensure the watch is dry after any cleaning involving moisture.

5.2 Battery Replacement

The watch is powered by a quartz battery (CR2032, 2 required). When the watch stops or the chronograph functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a professional watchmaker to ensure the watch's water resistance is maintained after opening the case back.

5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

6. TROUBLESHOOTING

- **Watch not running:** Check if the crown is pushed fully into position 0. If it is, the battery may need replacement.
- **Chronograph hands not resetting to zero:** This may indicate a need for calibration or service. Try pressing the reset button firmly. If the issue persists, professional service may be required.
- **Date not changing:** Ensure the time is set correctly, especially the AM/PM cycle. Avoid setting the date during the automatic change period (9 PM - 3 AM).

7. SPECIFICATIONS

Feature	Specification
Model Number	866
Movement Type	Quartz
Case Material	Stainless Steel
Band Material	Stainless Steel
Dial Window Material	Hardlex Glass
Water Resistance	30M (3 ATM)
Clasp Type	Push Button Hidden Clasp
Batteries	2 x CR2032 (included)
Manufacturer	DAXIAOYU
Item Weight	7.05 ounces
Package Dimensions	5.91 x 3.15 x 1.18 inches

Hardlex Dial Window Material

*High hardness, good wear resistance,
strong light transmittance, strong arc feeling*

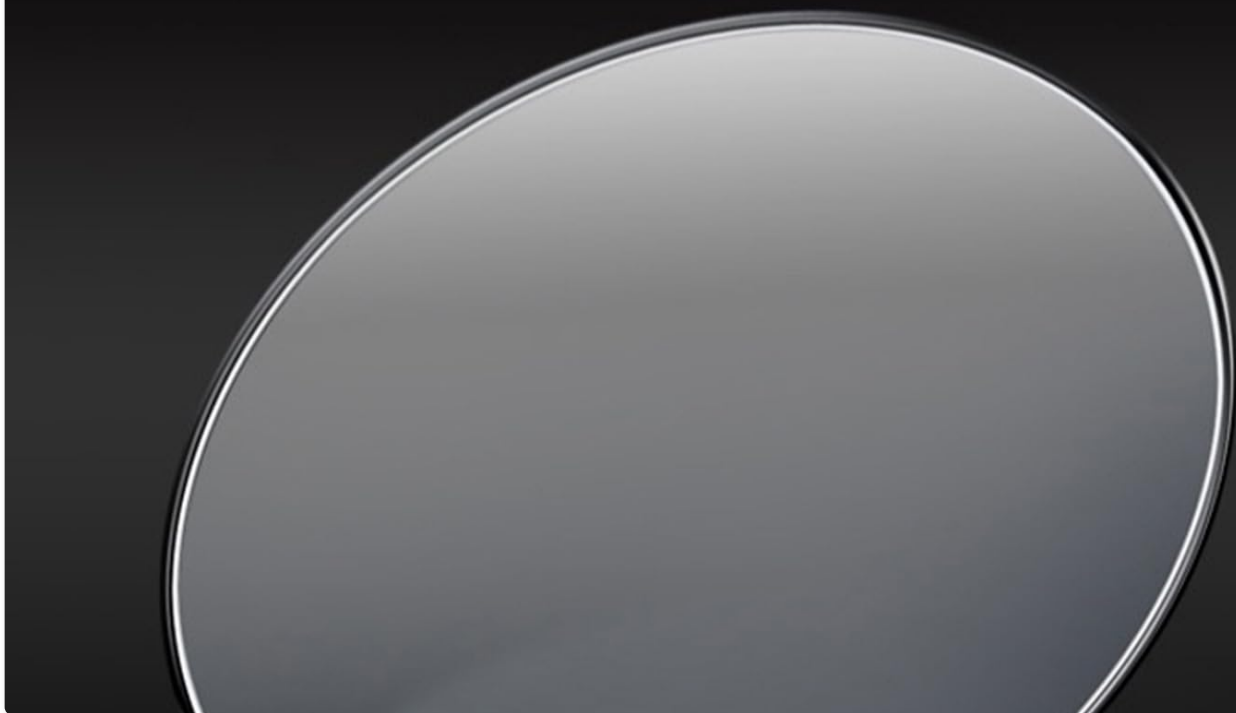


Image 7.1: Hardlex Dial Window Material.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

© 2025 Poedagar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question