

[Manuals.plus](#) /

› [Leeshyah](#) /

› Leeshyah Wooden Play Kitchen Set for Kids (Model B0F8V9HR9R) - Instruction Manual

Leeshyah B0F8V9HR9R

Leeshyah Wooden Play Kitchen Set for Kids

Model: B0F8V9HR9R

1. SAFETY INFORMATION

This product is designed for children aged 3 years and up. Adult supervision is recommended during play to ensure safe use and prevent potential hazards.

- Keep small parts away from children under 3 years to avoid choking hazards.
- Ensure all screws and fasteners are securely tightened during assembly and periodically check for looseness.
- Do not allow children to climb on the kitchen set, as this may cause tipping and injury.
- Regularly inspect the product for any damage or wear that could compromise safety. Discontinue use if significant damage is found.

2. PRODUCT OVERVIEW

The Leeshyah Wooden Play Kitchen Set is an interactive pretend playset designed to encourage imaginative role-play and develop sensory and motor skills in children. This set features a realistic faucet, oven, ice maker, and a gas stove that produces cooking sounds.



Figure 2.1: Front view of the Leeshyah Wooden Play Kitchen Set, showcasing its black and white design with gold accents.

Key Features:

- **Interactive Faucet:** Features a realistic design for pretend washing.
- **Oven:** Includes a functional door and interior shelves for play baking.
- **Ice Maker:** Dispenses pretend ice cubes for realistic beverage play.
- **Gas Stove:** Equipped with burners that produce cooking sounds and lights for an immersive experience.
- **Coffee Maker:** Integrated into the design for pretend coffee brewing.
- **Storage:** Multiple cabinets and drawers provide ample space for accessories.
- **Accessories:** Comes with 12 kitchen toy accessories, including pots, pans, and utensils.

3. SETUP AND ASSEMBLY

Assembly of the Leeshyah Wooden Play Kitchen Set is required. Please follow the detailed assembly instructions provided in the separate assembly guide included with your product packaging. Ensure all components are present and undamaged before beginning assembly.

Tools typically required for assembly include a screwdriver. It is recommended to have two adults for efficient and safe assembly.



Figure 3.1: The play kitchen set with key dimensions highlighted, illustrating its size and various compartments.

After assembly, verify that all parts are securely fastened and the structure is stable before allowing children to play.

4. OPERATING INSTRUCTIONS

The Leeshyah Wooden Play Kitchen Set offers various interactive elements for an engaging play experience. Below are instructions for using its main features:

4.1. Gas Stove

The gas stove features realistic burners with lights and sounds. Turn the knobs to activate the cooking sounds and illuminate the burners, simulating a real cooking experience.

INTERACTIVE FUN

Lights, Sounds, and Movements Bring Playtime to Life!

GAS STOVE



Touch to Cook! LED lights up and realistic cooking sounds enhance the experience

SALT



KNOB



Figure 4.1: A child turning the stove knobs and using a pretend salt shaker, demonstrating the interactive features of the play kitchen.

4.2. Ice Maker

The ice maker dispenses pretend ice cubes. Place a cup under the dispenser and press the lever to retrieve the ice cubes, enhancing realistic beverage play.

4.3. Oven and Microwave

Both the oven and microwave feature doors that open and close, allowing children to place play food inside for baking or heating. The microwave may include a pretend keypad for added realism.

4.4. Faucet and Sink

The sink area includes a faucet with movable handles for pretend washing of dishes or play food. The sink basin can hold small play items.

4.5. Storage

Utilize the various cabinets, shelves, and drawers to store the included accessories and other play food items, promoting organization skills.

4.6. Official Product Video

Your browser does not support the video tag.

Video 4.2: An official product video demonstrating the interactive features and overall play experience of the Leeshyah Wooden Play Kitchen Set.

5. MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your Leeshyah Wooden Play Kitchen Set, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish or paint.
- **Inspection:** Periodically check all screws, hinges, and connections to ensure they are tight. Tighten any loose fasteners to maintain structural integrity.
- **Storage:** Store the play kitchen in a dry environment away from direct sunlight or extreme temperature changes to prevent warping or fading of the wood.
- **Battery Replacement:** If the electronic components (e.g., stove sounds) stop working, replace the batteries as indicated in the assembly guide.

6. TROUBLESHOOTING

If you encounter any issues with your play kitchen set, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Stove sounds/lights not working	Dead batteries or loose connection.	Replace batteries (refer to assembly guide for type and location). Check battery compartment for secure connection.
Doors or drawers do not close properly	Loose hinges or misaligned parts.	Check and tighten hinge screws. Ensure no obstructions are preventing closure.
Knobs are loose or detached	Screws holding knobs are loose or stripped.	Tighten screws. If stripped, consider using wood glue or a slightly larger screw (with caution) to secure.
General instability	Loose fasteners or uneven surface.	Check and tighten all assembly screws. Ensure the kitchen is placed on a flat, level surface.

7. SPECIFICATIONS

- **Product Dimensions:** 11.57 x 36.3 x 35.67 inches
- **Item Weight:** 47.9 pounds
- **Manufacturer Recommended Age:** 3 years and up
- **Material:** High-quality wood with a smooth finish
- **Model Number:** B0F8V9HR9R

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Leeshyah customer service. Refer to your purchase documentation or the manufacturer's website for contact details.

© 2025 Leeshyah. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F8V9HR9R>

More documents and user manuals: <https://manuals.plus/>