



[Manuals.plus](#) /

› [ECSiNG](#) /

› ECSiNG Washing Machine Key Set (70155601 / RL001) User Manual

ECSiNG HB560-m

ECSiNG Washing Machine Key Set (70155601 / RL001)

User Manual for Models 70155601 and RL001

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your ECSiNG Washing Machine Keys. These keys are designed as replacements for specific commercial laundry equipment, compatible with Huebsch, Speed Queen, and UniMac machines, replacing part numbers 70155601 and RL001. Please read this manual carefully before use to ensure correct operation and longevity of the product.

PRODUCT OVERVIEW

The ECSiNG Washing Machine Key Set includes two durable metal keys, engineered for reliable performance in commercial washing machines. Each key is precisely cut to match the specifications of OEM part numbers 70155601 and RL001.

OEM:70155601,RL001



Image: Two ECSiNG washing machine keys shown alongside a commercial washing machine, illustrating the keyhole location. These keys are designed for accessing specific compartments or functions on compatible laundry equipment.

SETUP AND COMPATIBILITY

Before using the keys, verify that your washing machine requires part numbers 70155601 or RL001. These keys are specifically designed for compatibility with Huebsch, Speed Queen, and UniMac commercial laundry machines.

- 1. Identify the Lock:** Locate the lock mechanism on your washing machine that requires a key. This is typically found on the control panel or access door.
- 2. Verify Key Type:** Compare the shape and cut of the ECSiNG key with your existing key or the required key type for your machine. The keys are marked 'RL001' for easy identification.



Image: A detailed view of a washing machine's keyhole, circled in red, next to an ECSiNG key marked 'RL001'. This image helps in identifying the correct keyhole and key type for your machine.

OPERATING INSTRUCTIONS

To operate the lock mechanism using the ECSiNG key:

1. **Insert the Key:** Gently insert the key into the designated keyhole. Do not force the key if it does not slide in smoothly.
2. **Turn the Key:** Once inserted, turn the key clockwise or counter-clockwise as required by the lock mechanism to engage or disengage it. The direction may vary depending on the specific function (e.g., opening a door, resetting a control).
3. **Remove the Key:** After performing the desired action, turn the key back to its original position (if applicable) and carefully remove it from the lock.

MAINTENANCE

Proper maintenance ensures the longevity and functionality of your keys:

- **Keep Clean:** Periodically wipe the keys with a dry, soft cloth to remove any dirt or debris. Avoid using abrasive cleaners or solvents.
- **Store Properly:** Store the keys in a dry place, away from extreme temperatures and corrosive substances.
- **Avoid Damage:** Do not bend, scratch, or modify the keys, as this can impair their function.



Image: A close-up photograph of one ECSiNG washing machine key, showcasing its metallic finish and precise cut. Regular cleaning helps maintain its appearance and function.

TROUBLESHOOTING

If you encounter issues while using your ECSiNG keys, consider the following:

- **Key Does Not Insert:** Ensure you are using the correct key for the specific lock. Check for any obstructions in the keyhole. Do not force the key.
- **Key Does Not Turn:** Verify that the key is fully inserted. The lock mechanism might be jammed or require lubrication. If the key is bent or damaged, it may not turn.
- **Lock Remains Engaged/Disengaged:** The internal mechanism of the washing machine lock might be faulty. In such cases, professional service may be required.

- **Compatibility Issues:** Double-check that your washing machine model and required part number (70155601 or RL001) match the specifications of these keys.

SPECIFICATIONS

Feature	Detail
Product Name	Washing Machine Keys
Brand	ECSiNG
Model Number	HB560-m
Replaces Part Numbers	70155601, RL001
Compatibility	Huebsch, Speed Queen, UniMac Washing Machines
Material	Metal
Package Includes	2x Washing Machine Keys
Item Weight	0.704 ounces (approx. 20g)
Package Dimensions	3.15 x 2.36 x 0.39 inches

WARRANTY INFORMATION

ECSiNG products are manufactured to high-quality standards. While specific warranty details are not provided in this manual, please retain your proof of purchase. For any concerns regarding product defects or performance, refer to the retailer's return policy or contact ECSiNG customer support.

SUPPORT

For further assistance, technical support, or inquiries regarding your ECSiNG Washing Machine Keys, please refer to the contact information provided by your retailer or visit the official ECSiNG website. When contacting support, please have your product model number (HB560-m) and purchase details ready.