

ACHTFACH SC-05

ACHTFACH 7-in-1 Steam Mop (Model SC-05)

Instruction Manual

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- **Electrical Safety:** Always ensure the power cord is fully unwound before use. Do not operate the appliance with a damaged cord or plug. Keep the power cord away from heated surfaces.
- **Hot Steam Hazard:** The steam produced is extremely hot. Never direct steam at people, pets, electrical appliances, or power outlets. Allow the appliance to cool completely before handling or storing.
- **Water Tank:** Only use clean tap water or distilled water in the tank. Do not add cleaning solutions, perfumes, or other chemicals, as this can damage the appliance and void the warranty.
- **Surface Compatibility:** This steam mop is designed for use on sealed hard floors (hardwood, tile, marble, laminate). Do not use on unsealed wood floors or surfaces that are sensitive to heat and moisture. Test on an inconspicuous area first.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Do not leave the appliance unattended while it is powered on or producing steam.
- **Storage:** Store the appliance in a cool, dry place when not in use.

2. PRODUCT OVERVIEW

The ACHTFACH 7-in-1 Steam Mop (Model SC-05) is a versatile cleaning appliance designed for various household tasks. It features a 1200W rapid-heating system, dual steam modes, and a detachable water tank for efficient cleaning.

Key Features:

- **Powerful High-Temperature Steam:** 1200W system generates steam in 15 seconds, providing

up to 30 minutes of continuous cleaning.

- **Dual Steam Modes:** Two adjustable steam modes for light or heavy-duty cleaning.
- **Effortless Maneuverability:** 180° swivel head and 135° vertical pivot for easy access under furniture and around corners.
- **Large Detachable Water Tank:** 400ML capacity, easy to refill, and designed to prevent leaks.
- **Versatile 7-in-1 Cleaning:** Includes 5 specialized attachments for various surfaces like windows, desktops, bathroom tiles, kitchen stovetops, and basic ironing.
- **Adjustable Height:** 3-section extended tubes allow adjustment to an ideal height for comfortable use.
- **Reusable Microfiber Pads:** Machine-washable pads, with an extra set included.
- **Safety:** Built-in auto power-off protection.

3. WHAT'S IN THE BOX

Carefully unpack all components and ensure you have received the following items:



Image: All components included in the box.

1. Steam Mop Cleaner Main Unit
2. Mop Head (x2)

3. Coral Mop Cloth
4. Microfiber Cloth
5. Angled Spray Nozzle
6. Small Nylon Brush
7. Long Spray Nozzle
8. Window Scraper Board
9. Extension Tube (x3)
10. Wiper Tool
11. User Manual (this document)

4. ASSEMBLY AND SETUP

Follow these steps to assemble your steam mop before first use.

4.1 Attaching the Handle and Extension Tubes

1. Insert the desired number of extension tubes into the main unit until they click into place.
2. Attach the handle to the top extension tube, ensuring it is securely fastened.



Image: Assembly of extension tubes and handle, demonstrating adjustable height and swivel head.

4.2 Attaching the Mop Pad

1. Place a clean microfiber mop pad onto the bottom of the steam mop head. The pad will adhere using the integrated hook-and-loop fasteners.



Image: Attaching and washing the reusable mop pads.

4.3 Filling the Water Tank

1. Locate the detachable 400ML water tank on the main unit.
2. Remove the tank and fill it with clean tap water or distilled water. Do not overfill.
3. Securely reattach the water tank to the main unit.

Your browser does not support the video tag.

Video: Demonstrates the assembly of the steam mop, including attaching the handle, securing the mop pad, and filling the water tank.

5. OPERATING INSTRUCTIONS

Once assembled and filled, your ACHTFACH Steam Mop is ready for use.

5.1 Powering On and Selecting Steam Mode

1. Plug the 23FT power cord into a suitable electrical outlet.
2. Press the power button to turn on the appliance. The indicator light will illuminate.
3. Allow approximately 15 seconds for the mop to heat up and generate steam.
4. Select your desired steam mode (Min for light cleaning/cloths, Max for heavy-duty areas) using the mode selection button.



Image: Control panel for selecting steam modes and visual of steam output.

5.2 Cleaning Surfaces

Move the steam mop slowly and steadily across the surface to be cleaned. The 180° swivel head and 135° vertical pivot allow for easy navigation around furniture and into tight spaces.



Image: Steam mop being used on a hard floor, suitable for hardwood, tiles, marble, and laminate.

5.3 Using Attachments

The ACHTFACH Steam Mop comes with various attachments for specialized cleaning tasks. To use an attachment, detach the main mop head and connect the desired accessory to the steam outlet.

Multi-Purpose Steam Cleaning Available



Image: Multi-purpose steam cleaning with various attachments.

Examples of use:

- **Angled Spray Nozzle/Long Spray Nozzle:** For grout lines, corners, and hard-to-reach areas.
- **Small Nylon Brush:** For scrubbing stubborn grime on stovetops or bathroom fixtures.
- **Window Scraper Board/Wiper Tool:** For streak-free window and mirror cleaning.
- **Coral Mop Cloth/Microfiber Cloth:** For basic ironing or delicate surfaces.

Say Goodbye to Grease and Grime

Easy clean different stains. No residue left behind. No harm



Image: Before and after cleaning results on various surfaces.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steam mop.

6.1 Cleaning Mop Pads

The microfiber mop pads are machine-washable. After each use, remove the pad and wash it according to its care instructions. Do not use bleach or fabric softeners, as these can reduce the pad's effectiveness.

6.2 Emptying and Cleaning the Water Tank

After each use, unplug the appliance and allow it to cool. Remove the water tank and empty any remaining water. Rinse the tank with clean water and allow it to air dry before reattaching or storing.

6.3 Descaling (If Necessary)

If you notice a decrease in steam output or mineral buildup, descaling may be necessary. Consult the manufacturer's website or customer support for specific descaling instructions. Using distilled water can help prevent mineral buildup.

7. TROUBLESHOOTING

If you encounter any issues with your steam mop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty Appliance not heated Mineral buildup	Refill water tank Wait 15 seconds for heating Perform descaling procedure
Water leaking from unit	Water tank not properly secured Overfilled water tank	Ensure tank is clicked into place Do not overfill the tank
Mop not turning on	Not plugged in Power outlet issue	Check power cord connection Test outlet with another appliance
Mop pad not staying on	Hook-and-loop fasteners worn out Pad not correctly aligned	Replace mop pad Ensure pad is centered and pressed firmly

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	ACHTFACH
Model Name	SC-05
Wattage	1200 watts
Heat Time	15 Seconds
Capacity	400 Milliliters
Power Source	Electric
Item Weight	6.3 Pounds (approx. 2.86 kg)
Product Dimensions	14.96 x 9.69 x 5.98 inches
Power Cord Length	23 Feet
Special Features	7-in-1 Rotated Heads, 2 Adjustable Modes, Fast Heat, 2 Dirt Grip Pads, 3 Extension Tubes, Large Detachable Tank, Auto Power-Off Protection
Surface Recommendation	Floor (Hardwood, Tile, Marble, Laminate)
UPC	850068417780

9. WARRANTY AND SUPPORT

ACHTFACH provides an extra year of maintenance service and online support for your steam mop. If you encounter any problems or have questions regarding your product, please contact our customer service team for assistance.

For support, please refer to the contact information provided with your purchase or visit the official ACHTFACH website.