

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LUXOAK](#) /

› [LUXOAK CFT106 97-inch Farmhouse TV Stand with 33-inch Electric Fireplace Instruction Manual](#)

## LUXOAK CFT106

# LUXOAK 97-inch Farmhouse TV Stand with 33-inch Electric Fireplace

Model: CFT106

## INTRODUCTION

---

Thank you for choosing the LUXOAK 97-inch Farmhouse TV Stand with a 33-inch Electric Fireplace. This media entertainment center is designed to accommodate TVs up to 100 inches and features ample storage with adjustable shelves. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand and electric fireplace.

## Weight Capacity

- Tabletop: 300lbs
- Adjustable Shelf: 50lbs

## Dimensions:

TV stand: 97"×14"×31.9"

Fireplace: 33.3"×19"



**Come with TWO packages** (May not arrive at the same time)

Image: The LUXOAK 97-inch Farmhouse TV Stand with a 33-inch Electric Fireplace, showcasing its design and size.

## SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in fire, electric shock, serious injury, or property damage.

- Do not leave the electric fireplace unattended while in use.
- Ensure proper ventilation around the fireplace unit.
- Keep the fireplace and its remote control out of reach of children and pets.
- Always follow the assembly instructions carefully to avoid injury.
- Do not use the fireplace if it becomes damaged or malfunctions.
- Never place flammable materials near the fireplace. Maintain adequate clearance from curtains, bedding, furniture, and other combustibles.
- Only use the fireplace with a properly grounded electrical outlet.

## PACKAGE CONTENTS

Your LUXOAK TV Stand and Electric Fireplace are shipped in two separate packages, which may arrive at different times. Please ensure all packages have been received before beginning assembly. Carefully

unpack all components and verify against the parts list provided in the detailed assembly instructions.

- TV Stand components (engineered wood panels, hardware)
- Electric Fireplace unit
- Remote control for electric fireplace
- Assembly Instruction Manual
- Required hardware for assembly



Image: Visual representation of the product arriving in two separate packages and a reminder that assembly is required for both the TV stand and fireplace.

## ASSEMBLY INSTRUCTIONS

Assembly of both the TV cabinet and the electric fireplace is required. Detailed instructions with numbered parts are included in your package. Please follow these instructions carefully, step-by-step, to ensure correct and safe assembly.

1. **Preparation:** Clear a spacious area for assembly. It is recommended to have at least two people for assembly due to the size and weight of the components.
2. **Identify Parts:** Lay out all numbered parts and hardware. Compare them with the parts list in the included manual.
3. **Follow Manual:** Adhere strictly to the sequence and diagrams provided in the dedicated assembly manual.
4. **Secure Connections:** Ensure all screws, cam locks, and other fasteners are tightened securely. Do not overtighten.
5. **Fireplace Installation:** Integrate the electric fireplace unit into the designated central compartment of the TV stand as per the instructions.

For any difficulties during assembly, refer to the troubleshooting section or contact customer support.

## SETUP

Once assembled, position your TV stand in its desired location, ensuring it is on a stable, level surface. The stand is designed for floor mounting.

- **Placement:** Choose a location with adequate space for the 97-inch width of the stand and sufficient clearance for the electric fireplace.
- **Cable Management:** Utilize the integrated cable management features to organize and conceal

power cords and media cables, maintaining a tidy appearance and preventing tripping hazards.

- **TV Placement:** The stand supports TVs up to 100 inches. Ensure the TV is centered and stable on the tabletop or mounted securely above the stand.



## Magnetic Door Catch

## Cable Management



## Stable & Sturdy Base

Image: Detailed view of the TV stand's features, including magnetic door catches for secure closure, a cable management opening behind the fireplace, and the sturdy base design.

## OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The 33-inch electric fireplace offers various settings for flame effects and heating. It can be controlled via the unit's control panel or the included remote control.

### Fireplace Features:

- **Flame Colors:** 7 distinct flame color options to suit your ambiance.
- **Brightness Levels:** 5 adjustable brightness levels for the flame effect.
- **Temperature Settings:** Adjustable temperature range from 62°F to 82°F (17°C to 28°C).
- **Timer Function:** Set the fireplace to operate for a duration from 30 minutes to 6 hours.
- **Independent Operation:** Flame effects can be operated independently of the heating function, allowing for year-round use.
- **Overheat Protection:** Built-in safety feature to prevent overheating.

## Using the Remote Control:

Point the remote control directly at the fireplace unit. Buttons on the remote correspond to power, flame color, brightness, temperature, and timer settings. Refer to the fireplace's specific manual for detailed remote control functions.

# 33 inch Electric Fireplace



3D Log Embers



62°F-82°F



7 Flame Colors



Timer 30mins-6H

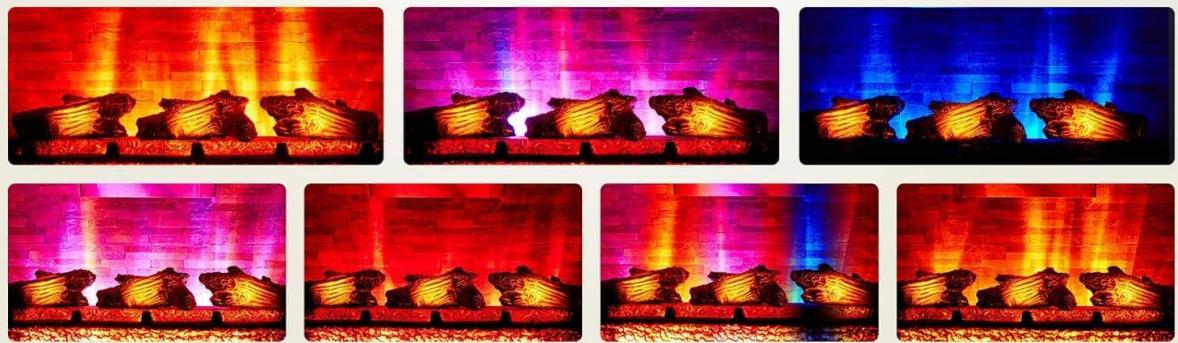


Image: The 33-inch electric fireplace displaying its 3D log embers, temperature range, 7 flame colors, and timer function, along with its remote control.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TV stand and electric fireplace.

### TV Stand Care:

- Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading.
- Adjustable Shelves:** The two adjustable shelves can be repositioned to customize storage space. Ensure they are securely seated before placing items on them.

## Electric Fireplace Care:

- **Cleaning:** Ensure the fireplace is turned off and unplugged before cleaning. Wipe the exterior with a soft, dry cloth. Do not spray liquids directly onto the unit.
- **Ventilation:** Periodically check that the air intake and outlet vents are clear of dust and obstructions.
- **Bulb Replacement:** If the flame effect dims, refer to the fireplace manual for instructions on replacing the internal light bulbs, if applicable.

## TROUBLESHOOTING

If you encounter issues with your LUXOAK TV stand or electric fireplace, refer to the following common solutions:

Problem	Possible Cause	Solution
Fireplace not turning on	No power, power switch off, remote battery low	Check power cord, ensure wall outlet is functional, turn on main power switch on unit, replace remote batteries.
No heat output	Heat function off, temperature set too low, overheat protection activated	Activate heat function, increase temperature setting, allow unit to cool down if overheat protection engaged.
Remote control not working	Batteries depleted, obstruction, remote not aimed correctly	Replace batteries, remove obstructions, ensure remote is aimed at the fireplace sensor.
Unstable TV stand	Uneven floor, loose assembly hardware	Adjust floor levelers if present, re-tighten all assembly hardware.

If the issue persists after attempting these solutions, please contact LUXOAK customer support.

## SPECIFICATIONS

Key specifications for the LUXOAK Farmhouse TV Stand with Electric Fireplace:

- **Brand:** LUXOAK
- **Model Name:** Farmhouse Fireplace TV Stand (CFT106)
- **Color:** Light Grey
- **Material:** Engineered Wood
- **TV Stand Dimensions (D x W x H):** 14" x 97" x 31.9"
- **Fireplace Dimensions (W x H):** 33.3" x 19"
- **Item Weight:** 121 Pounds
- **Tabletop Weight Capacity:** 300 Pounds
- **Adjustable Shelf Weight Capacity:** 50 Pounds
- **Number of Shelves:** 2 (adjustable)
- **Number of Compartments:** 4
- **Fireplace Heating Area:** Up to 400 sq. ft.
- **Assembly Required:** Yes



Image: A diagram illustrating the overall dimensions of the TV stand and fireplace, along with the weight capacities for the tabletop (300 lbs) and adjustable shelves (50 lbs).

## WARRANTY AND SUPPORT

---

LUXOAK stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or visit the official LUXOAK website. If you require assistance with assembly, parts, or troubleshooting that is not covered in this manual, please contact LUXOAK customer support through the retailer where the product was purchased or via the contact information provided in your product packaging.

**Customer Service:** For support inquiries, please refer to the contact details provided in your product packaging or the retailer's website.