

[Manuals.plus](#) /

› [Poedagar](#) /

› Poedagar Model 930 Men's Quartz Watch Instruction Manual

Poedagar 930

Poedagar Model 930 Men's Quartz Watch Instruction Manual

Model: 930

INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your Poedagar Model 930 Men's Quartz Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Image: Front view of the Poedagar Model 930 Gold Quartz Watch, showcasing its classic design with a gold-tone case and bracelet, and a matching gold dial with date and day display.

PRODUCT FEATURES

- **Quartz Movement:** Ensures precise and accurate timekeeping.
- **Date and Day Display:** Conveniently shows the current date and day of the week.
- **Luminous Hands and Markers:** High-definition luminous material absorbs light and glows in dark environments for improved readability.
- **30-Meter Water Resistance:** Suitable for daily use, such as hand washing and light rain. Not recommended for showering, bathing, or swimming.
- **Durable Construction:** Features a full stainless steel case and band for comfortable wear and longevity.
- **Hardlex Glass:** High hardness glass effectively prevents wear and maintains clarity.
- **Push Button Hidden Clasp:** Provides a secure and streamlined fit.



Image: A collage highlighting key features of the Poedagar watch, including its 3ATM water resistance, strong luminous display, high hardness Hardlex material, and stainless steel strap.

1. Setting Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to the first click position to set the date and day, or to the second click position to set the time.
2. **Adjust the date/day:** In the first click position, rotate the crown clockwise or counter-clockwise to adjust the date and day. Avoid setting the date/day between 9 PM and 3 AM to prevent damage to the movement.
3. **Adjust the time:** In the second click position, rotate the crown to set the hour and minute hands. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or if you are setting the date.
4. **Push in the crown:** Once set, push the crown back into its normal operating position to start the watch.



Image: A close-up view of the watch dial, showing the crown on the right side, used for setting the time and date.

2. Adjusting the Bracelet

Your watch comes with a link removal tool. Follow these steps to adjust the stainless steel bracelet for a comfortable fit:

1. Identify the arrows on the inside of the bracelet links. These indicate the direction to push the pins out.
2. Place the bracelet in the link removal tool, aligning the pin with the tool's pusher.
3. Carefully push the pin out in the direction of the arrow. You may need to use a small hammer if the tool's pusher is not sufficient.
4. Remove the desired number of links.
5. Reassemble the bracelet by inserting the pins in the opposite direction of the arrows.

Note: If you are unsure about adjusting the bracelet, it is recommended to seek assistance from a professional watch repair service.

OPERATING INSTRUCTIONS

Luminous Function

The watch hands and markers are coated with a natural light-absorbing luminous powder. Exposure to natural or artificial light will charge this material, allowing it to emit light in dark conditions for a period of time. The intensity and duration of the glow depend on the amount and duration of light exposure.

Strong luminous

Natural light powder absorbs light quickly and emits light at night

.....



Image: A close-up of the watch face in a dark environment, clearly showing the luminous hands and hour markers glowing brightly.

Water Resistance (30 Meters / 3 ATM)

Your Poedagar watch is designed with 30-meter water resistance. This means it is suitable for:

- Accidental splashes
- Rain
- Hand washing

Important:

- Do not press any buttons or pull the crown while the watch is wet or submerged.
- Not suitable for showering, bathing, swimming, diving, or any water sports.

- Exposure to hot water or steam can compromise the watch's water resistance.



Image: The watch face and bracelet with water droplets, visually representing its water-resistant capabilities for daily splashes.

MAINTENANCE

- **Cleaning:** Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dust and dirt. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying.
- **Avoid Chemicals:** Do not expose the watch to solvents, detergents, perfumes, or cosmetic sprays, as these can damage the case, bracelet, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, which can affect the movement and water resistance.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones) to prevent interference with the quartz movement.
- **Battery Replacement:** The watch uses 2 LR44 batteries (included). When the watch stops or the time becomes inaccurate, it is time to replace the batteries. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place, away from direct sunlight.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Time is inaccurate:** This could indicate a low battery or exposure to a strong magnetic field. Replace batteries or move away from magnetic sources.
- **Date/Day not changing:** Ensure the time is set correctly, especially the AM/PM cycle. If the issue persists, the movement may require inspection.
- **Condensation under glass:** This indicates a breach in water resistance. Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

Brand	Poedagar
-------	----------

Model Number	930
Movement	Quartz
Water Resistance	30 Meters (3 ATM)
Case Material	Stainless Steel
Band Material	Stainless Steel
Dial Window Material	Hardlex Glass
Clasp Type	Push Button Hidden Clasp
Batteries	2 x LR44 (included)
Approximate Package Dimensions	5.91 x 3.15 x 1.18 inches
Approximate Item Weight	7.05 ounces

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.