

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AMZCHEF](#) /

› [AMZCHEF MMF-827 Electric Milk Frother and Steamer User Manual](#)

AMZCHEF MMF-827

AMZCHEF MMF-827 Electric Milk Frother and Steamer User Manual

Model: MMF-827

INTRODUCTION

The AMZCHEF MMF-827 Electric Milk Frother and Steamer is a versatile 4-in-1 appliance designed to create various milk preparations for your beverages. It features a durable IPX6 waterproof design for easy cleaning and offers multiple frothing and heating options with simple one-button control.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse the power base in water or other liquids.
- Ensure the frother is placed on a stable, flat surface during operation.
- Keep out of reach of children.
- Always unplug the appliance when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.

PACKAGE CONTENTS

- AMZCHEF MMF-827 Milk Frother Unit
- Power Base with Cable
- Frothing Whisk (pre-installed)
- Stirring Whisk (for heating milk without frothing)
- Transparent Lid

SETUP

1. **Place the Whisk:** Ensure the desired whisk (frothing or stirring) is securely placed on the magnetic pin at the bottom of the frother's interior. The frothing whisk is typically used for creating foam, while the stirring whisk is for heating milk without significant foam.
2. **Connect to Power Base:** Place the frother unit onto its power base. Ensure it sits firmly.

3. **Fill with Milk:** Pour milk into the frother. Observe the internal markings for minimum (MIN) and maximum (MAX) fill levels. For frothing, do not exceed the lower MAX line (3.88 oz/115ml). For heating milk without frothing, do not exceed the upper MAX line (8.11 oz/240ml).
4. **Secure the Lid:** Place the transparent lid firmly on top of the frother unit.



Internal markings indicate minimum and maximum fill levels for different functions.

OPERATING INSTRUCTIONS

The AMZCHEF MMF-827 offers four distinct modes for preparing milk, indicated by LED lights on the unit. Press the power button to cycle through the modes.

1. **Hot Dense Foam:** Ideal for cappuccinos. Uses the frothing whisk.
2. **Hot Light Foam:** Suitable for lattes. Uses the frothing whisk.
3. **Heated Milk:** For hot chocolate or warm beverages without foam. Use the stirring whisk.
4. **Cold Foam:** Perfect for iced coffees. Uses the frothing whisk.



The frother supports four distinct milk preparation styles.

Quick Operation

The frother can complete milk frothing in approximately 80 seconds and milk heating in up to 220 seconds, depending on the selected mode and milk volume.



ELECTRIC HOT AND COLD MILK FROTHER

From busy mornings to cozy evenings

Use the appropriate paddle for frothing or stirring to achieve desired results.

Demonstration Video

This video demonstrates the quick 4-in-1 functionality of the AMZCHEF milk frother, showing how it creates foam and heats milk efficiently.

MAINTENANCE AND CLEANING

The AMZCHEF MMF-827 features an IPX6 waterproof design, allowing for easy rinsing. Proper cleaning ensures longevity and optimal performance.

- **Rinsing:** After each use, rinse the interior of the frother under running water.
- **Hand Wash Only:** The frother unit is designed for hand washing. Do not place it in a dishwasher.
- **Avoid Water on Base:** While the frother unit is waterproof, ensure water does not enter the bottom electrical connection area when cleaning.
- **Remove Whisk:** Detach the whisk for thorough cleaning.



AMZCHEF

AMZCHEF | Barista Maker Milk Frother

IPX6
Waterproof Frothing
All-in-One Simplicity

The IPX6 waterproof design allows for easy and safe rinsing under a tap.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Frother does not turn on	Not properly connected to power base or outlet.	Ensure the frother is correctly seated on the power base and the power base is securely plugged into a working outlet.
Milk not frothing or heating properly	Incorrect milk level; wrong whisk used; milk type not suitable for frothing.	Check milk levels against MIN/MAX lines. Ensure the frothing whisk is used for foam. Use fresh, cold milk (dairy or non-dairy suitable for frothing).
Excessive noise during operation	Whisk not properly installed or foreign object inside.	Remove the whisk and re-install it securely. Check for any obstructions inside the frother.

SPECIFICATIONS

- **Brand:** AMZCHEF
- **Model Name:** MMF-827
- **Material:** Plastic (exterior), Stainless Steel (interior)
- **Color:** Black
- **Item Weight:** 2.05 pounds (0.93 Kilograms)
- **Package Dimensions:** 8.9 x 6.02 x 4.88 inches
- **Special Feature:** IPX6 Waterproof, Compact Design, 4-in-1 Functionality
- **UPC:** 850074107101

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided in your product packaging or visit the official AMZCHEF website. Keep your purchase receipt for warranty claims.