

[Manuals.plus](#) /

› [GreenPan](#) /

› GreenPan x Bobby Flay 1.67QT Nonstick Saucepan with Glass Lid User Manual

GreenPan CC009901-001

GreenPan x Bobby Flay 1.67QT Nonstick Saucepan with Glass Lid

Model: CC009901-001

Brand: GreenPan

PRODUCT OVERVIEW

The GreenPan x Bobby Flay 1.67QT Nonstick Saucepan is a premium cookware item designed for versatile and healthy cooking. This saucepan features GreenPan's signature diamond-infused ceramic nonstick coating, ensuring exceptional food release and durability without PFAS, PFOA, lead, or cadmium. Crafted from quick-heating aluminum, it allows for precise temperature control. The design includes a stay-cool silicone handle for comfortable use, chip-free edges for enhanced longevity, and a tempered glass lid for monitoring your cooking. It is suitable for all stovetops, including induction, and is oven safe up to 392°F (200°C). Cleanup is effortless as it is dishwasher safe.



Image: The GreenPan x Bobby Flay 1.67QT Nonstick Saucepan with its glass lid, showcasing its cream color and sleek design.

Key Features:

- **Diamond-Infused Ceramic Nonstick:** Provides superior food release and durability, free from PFAS, PFOA, lead, and cadmium.
- **Quick-Heating Aluminum Body:** Ensures fast and even heat distribution for optimal cooking results.
- **Stay-Cool Silicone Handle:** Ergonomically designed for a comfortable and secure grip, remaining cool during stovetop use.
- **Chip-Free Rim:** Reinforced edges prevent chipping and enhance the pan's lifespan.
- **Tempered Glass Lid:** Allows for easy monitoring of food without lifting the lid, helping to retain heat and moisture.
- **Induction Compatible:** Suitable for use on all stovetops, including induction, gas, and electric.
- **Oven Safe:** Can be used in the oven up to 392°F (200°C).
- **Dishwasher Safe:** Designed for convenient and easy cleanup.

Note: Official product videos are not available for embedding in this manual due to missing source URLs in the provided data.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the saucepan and lid from its packaging. Retain all packaging materials for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wash the saucepan and glass lid thoroughly with warm, soapy water. Rinse well and dry completely with a soft cloth.
3. **Seasoning (Optional but Recommended):** Although GreenPan nonstick is ready to use, a light seasoning can enhance performance. Apply a small amount of cooking oil (e.g., vegetable, canola, or grapeseed oil) to the nonstick surface with a paper towel. Heat the pan over low heat for 30 seconds, then remove from heat and wipe off any excess oil.

OPERATING INSTRUCTIONS

Cooking with Your Saucepan:

- **Heat Settings:** Due to the excellent heat conductivity of the saucepan, medium to low heat settings are generally sufficient for most cooking tasks. High heat should only be used for searing or boiling water. Overheating can damage the nonstick coating over time.
- **Oil/Butter Use:** While the nonstick surface allows for cooking with minimal oil, a small amount of butter or oil is recommended for flavor and to enhance browning. Avoid using aerosol cooking sprays as they can leave a residue that may affect the nonstick performance.
- **Utensils:** Use heat-resistant silicone, wooden, or plastic utensils to protect the nonstick surface. Metal utensils are not recommended as they can scratch the coating.
- **Induction Compatibility:** This saucepan is designed to work efficiently on all stovetops, including induction. Ensure the pan is centered on the induction hob for optimal performance.
- **Oven Use:** The saucepan is oven safe up to 392°F (200°C). The glass lid is also oven safe within this temperature range. Always use oven mitts when handling the hot pan or lid from the oven.



DIAMOND-INFUSED CERAMIC NONSTICK

WORRY-FREE COOKING

Non-toxic: Free of PFAS, PFOA, lead & cadmium

Image: Chef Bobby Flay demonstrating cooking with a GreenPan saucepan, highlighting the nonstick surface.



TOUGH CONSTRUCTION

QUICK-HEATING BODY

Deliver fast & even heating for optimal results

Image: A close-up view of the saucepan's interior, showing the quick-heating body and nonstick coating.



VERSATILE COOKING

INDUCTION READY

Performs like a pro on all stovetops, including induction

Image: A detailed view of the saucepan's stay-cool chef handle with its comfortable silicone grip.



EXTRA TOUGH & LONG LASTING

CHIP-FREE RIM

Trimmed edges help prevent damage to the coating

Image: The tempered glass lid of the saucepan, designed for easy viewing of contents while cooking.



STAY-COOL DESIGN

CHEF HANDLE WITH SILICONE GRIP

Long, comfortable shape handle for maximum control

Image: A close-up of the saucepan's rim, illustrating its chip-free design for enhanced durability.

MAINTENANCE AND CARE

Cleaning:

- **Dishwasher Safe:** The saucepan and lid are dishwasher safe for convenient cleaning. However, hand washing is recommended to prolong the life and appearance of the nonstick coating.
- **Hand Washing:** For best results, allow the pan to cool completely before washing. Use warm, soapy water and a soft sponge or cloth. Avoid abrasive cleaners, steel wool, or scouring pads, as these can damage the nonstick surface.
- **Stubborn Food Residue:** If food residue is difficult to remove, fill the pan with warm water and a small amount of dish soap, then let it soak for 15-20 minutes before gently cleaning.



EASY TO CLEAN

DISHWASHER SAFE

Wipe each pan clean or toss in the dishwasher

Image: The GreenPan saucepan being placed into a dishwasher, illustrating its dishwasher-safe feature.



Image: A person hand washing the GreenPan saucepan under running water, demonstrating easy cleanup.

Storage:

When storing, place a soft cloth or pan protector between the saucepan and other cookware to prevent scratches to the nonstick surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food sticking to the pan.	Excessive heat, insufficient oil, or residue buildup from cooking sprays.	Use medium to low heat. Apply a small amount of cooking oil or butter. Avoid aerosol cooking sprays. Ensure pan is clean before use.

Problem	Possible Cause	Solution
Handle gets hot during stovetop use.	Heat source is too high or flames are extending up the sides of the pan.	Ensure the heat source is not wider than the base of the pan. Adjust heat to medium or low. While the silicone grip is designed to stay cool, extreme heat can still affect it. Always use caution and consider oven mitts if necessary.
Discoloration on the nonstick surface.	Overheating or residue buildup.	Always cook on medium to low heat. Clean the pan thoroughly after each use to prevent buildup. A mixture of baking soda and water can help remove stubborn discoloration.

SPECIFICATIONS

Attribute	Value
Material	Ceramic, Stainless Steel, Tempered Glass
Color	Cream
Brand	GreenPan
Size	1.67QT Saucepan with Lid
Handle Material	Ceramic (Note: Product description and features indicate a silicone grip for comfort and stay-cool properties.)
Dishwasher Safe	Yes
Material Type Free	Stainless Steel (Refers to the absence of certain materials, not the primary material)
Number of Pieces	1
Included Components	1.67QT Saucepan with Glass Lid
Oven Safe	Yes (Up to 392°F / 200°C)
Product Dimensions	5.98 x 7.48 x 14.7 inches
Item Weight	2.38 pounds
Model Number	CC009901-001

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your purchase or visit the official GreenPan website. You can also contact GreenPan customer service directly for assistance with product inquiries, troubleshooting, or warranty claims.

Official GreenPan Store: [GreenPan Store on Amazon](#)



© 2025 GreenPan. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.