

[Manuals.plus](#) /

› [SAMVIX](#) /

› SAMVIX IBass Touch Kosher Bluetooth 8GB MP3 Player User Manual

SAMVIX IBass Touch

SAMVIX IBass Touch Kosher Bluetooth 8GB MP3 Player

USER MANUAL

Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your SAMVIX IBass Touch Kosher Bluetooth 8GB MP3 Player. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

Package Contents

Verify that all items are present in the package:

- SAMVIX IBass Touch MP3 Player
- USB Charging Cable
- User Manual (this document)
- (Optional: Earphones, Protective Case - check your specific package)



Image: The retail packaging for the SAMVIX IBass Touch MP3 Player, showing the device and key features on the box.

Device Overview

Familiarize yourself with the physical components of your IBass Touch MP3 Player.



Image: Front view of the SAMVIX IBass Touch MP3 Player, showcasing its full touch screen interface during music playback. The device has a sleek, metallic body with a speaker grille at the bottom.

Key Features:

- **Full Touch Screen:** Intuitive navigation and control.

- **8GB Internal Memory:** Storage for audio files.
- **Memory Card Expansion Slot:** For additional storage capacity.
- **Built-in Bluetooth:** Wireless audio connectivity.
- **Built-in Speaker:** For direct audio playback.
- **Executive Tape Recorder:** Voice recording functionality.
- **Clock, Date, Calendar:** Integrated organizational tools.
- **Books and Prayers Access:** Preloaded spiritual content.

Setup

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the USB charging cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the side) until the screen illuminates.
- **To Power Off:** Press and hold the Power button until a power-off option appears on the screen, then confirm.

3. Initial Setup

Upon first power-on, you may be prompted to select a language, set the date, and time. Follow the on-screen instructions to complete these settings.

4. Installing a Memory Card (Optional)

The device supports memory card expansion. Locate the memory card slot (typically on the side) and gently insert a compatible microSD card until it clicks into place. Ensure the card is inserted in the correct orientation.

5. Transferring Files

Connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk. You can then drag and drop audio files (MP3, WAV, etc.), e-books, or other supported files into the appropriate folders on the device's internal memory or the inserted memory card. The device supports a "Smart Copy Paste System" for efficient file management.

Operating Instructions

1. Touch Screen Navigation

The IBass Touch features a full touch screen. Swipe left/right or up/down to navigate through menus and options. Tap icons to select functions or open applications. Use the back button (if present) or swipe gestures to return to the previous screen.

2. Music Playback

- From the main menu, tap the "Music" icon.
- Browse your music library by "Albums" or other categories.
- Tap a song to begin playback.
- Use the on-screen controls for play/pause, skip track, and volume adjustment.

3. Bluetooth Connectivity

To connect to Bluetooth headphones or speakers:

1. Go to "Settings" and select "Bluetooth".
2. Turn Bluetooth ON.
3. Ensure your Bluetooth audio device is in pairing mode.
4. The MP3 player will scan for available devices. Select your device from the list to pair.
5. Once paired, audio will be routed to the connected Bluetooth device.

4. Using the Built-in Speaker

The device has a built-in speaker for direct audio output. If no headphones or Bluetooth devices are connected, audio will play through the internal speaker.

5. Voice Recorder

Access the "Recorder" application from the main menu. Tap the record button to start recording and the stop button to end. Recordings are saved internally and can be managed within the application.

6. Books and Prayers

Navigate to the "Books" or "Prayers" section from the main menu to access preloaded spiritual content. This may include text-based books or audio recordings.

7. Clock, Date, and Calendar

The device includes a clock, date display, and calendar function. These can be accessed from the main menu or settings to view and manage time-related information.

Maintenance

1. Cleaning the Device

Use a soft, dry, lint-free cloth to clean the screen and body of the MP3 player. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the device's finish or internal components.

2. Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the device to extreme temperatures (hot or cold), as this can reduce battery life.
- If storing the device for an extended period, charge it to about 50% before storage.

3. Software Updates

Periodically check the manufacturer's website for software updates. Updates can improve performance, add new features, or fix bugs. Follow the provided instructions carefully when performing an update.

4. Storage Best Practices

Store the device in a cool, dry place away from direct sunlight and moisture. Protect the screen from scratches by using a screen protector or carrying case.

Troubleshooting

Problem	Possible Solution
Device does not power on.	Ensure the device is fully charged. Connect it to a power source and try again. If unresponsive, perform a hard reset (refer to manufacturer's specific instructions for reset button location, if any).

Problem	Possible Solution
Cannot connect via Bluetooth.	Ensure Bluetooth is enabled on both the MP3 player and the target device. Make sure the target device is in pairing mode and within range. Try restarting both devices.
Files not transferring to the device.	Check the USB cable connection. Ensure the device is recognized by your computer. Verify that the files are in a supported format and that there is sufficient storage space on the device or memory card.
Touch screen is unresponsive.	Restart the device. If the issue persists, ensure the screen is clean and free of debris.
Poor audio quality from speaker.	Ensure the speaker grille is not obstructed. Check the volume level.

Specifications

- **Model:** IBass Touch
- **Internal Memory:** 8GB
- **Expandable Memory:** Yes, via memory card slot (supports up to 128GB)
- **Display:** Full Touch Screen, Color Screen
- **Connectivity:** Bluetooth (Bluetooth 5.1)
- **Audio Output:** Built-in Speaker, Headphone Jack
- **Additional Features:** Executive Tape Recorder, Clock, Date, Calendar, Books and Prayers Access, Smart Copy Paste System
- **Product Dimensions:** 8 x 6.6 x 4.8 inches
- **Item Weight:** 15 ounces
- **Manufacturer:** Samvix

Warranty and Support

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official SAMVIX website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question