



[Manuals.plus](#) /

› [MOLLIFII](#) /

› MOLLIFII In-Wall Digital Timer 32787-A User Manual

MOLLIFII 32787-A

MOLLIFII In-Wall Digital Timer 32787-A User Manual

Model: 32787-A | For 3-Way Applications with Screw Terminals

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your MOLLIFII In-Wall Digital Timer, Model 32787-A. This device is designed for 3-way electrical applications and features screw terminals for secure wiring connections. Please read this manual thoroughly before installation and use to ensure proper function and safety.

2. SAFETY INFORMATION

WARNING: Risk of electric shock. Improper installation can lead to serious injury or death. Always turn off power at the circuit breaker or fuse box before installing or servicing this device. Installation should be performed by a qualified electrician or a person with a thorough understanding of electrical wiring.

- Ensure all wiring connections are secure and comply with local and national electrical codes.
- Do not exceed the maximum electrical ratings of the timer.
- This timer is for indoor use only.
- Keep children away from electrical devices.

3. PACKAGE CONTENTS

Verify that all items are present before beginning installation:

- MOLLIFII In-Wall Digital Timer (Model 32787-A)
- Mounting Screws
- Wire Connectors
- Instruction Manual (this document)

4. INSTALLATION

4.1 Tools Required

- Screwdriver (Phillips and Flathead)
- Wire Strippers
- Voltage Tester

4.2 Wiring Instructions (3-Way Application)

1. **Turn Off Power:** Locate the circuit breaker controlling the light fixture or outlet you are working on and turn it OFF. Verify power is off using a voltage tester.
2. **Remove Existing Switch:** Carefully remove the wall plate and unscrew the existing switch from the electrical box. Disconnect the wires, noting their original connections.
3. **Identify Wires:** In a 3-way setup, you will typically find a common wire (often black, connected to a darker screw on the old switch), two traveler wires (often red or black, connected to lighter screws), and a ground wire (bare copper or green). A neutral wire (white) may also be present in the box.
4. **Connect Timer Wires:** Connect the MOLLIFII timer's wires to the house wiring using the provided wire connectors. Ensure all connections are tight and secure.
 - **Ground Wire:** Connect the timer's green or bare copper ground wire to the house ground wire.
 - **Common Wire:** Connect the timer's designated common wire (refer to timer's internal wire labels if available) to the common wire from the electrical box.
 - **Traveler Wires:** Connect the timer's two traveler wires to the two traveler wires from the electrical box. The specific traveler wire connection order usually does not matter for functionality in a 3-way setup, but consistency is recommended.
 - **Neutral Wire (if applicable):** If your timer requires a neutral connection and a neutral wire is present in your electrical box, connect the timer's neutral wire to the house neutral wire.
5. **Mount Timer:** Carefully fold the wires into the electrical box. Secure the timer to the electrical box using the mounting screws.
6. **Install Wall Plate:** Attach the decorative wall plate (not included) over the timer.
7. **Restore Power:** Turn the power back ON at the circuit breaker.
8. **Test Functionality:** Test the timer and the other 3-way switch to ensure the connected load (e.g., lights) turns on and off correctly from both locations.

5. OPERATING INSTRUCTIONS

5.1 Setting Current Time and Day

Upon initial power-up or after a power outage, the timer display may flash. Follow the on-screen prompts or refer to the timer's specific buttons (e.g., 'CLOCK', 'HOUR', 'MINUTE', 'DAY') to set the current time and day of the week. Pressing 'CLOCK' usually allows you to enter time-setting mode, then use 'HOUR' and 'MINUTE' to adjust, and 'DAY' to select the day. Confirm settings by pressing 'CLOCK' again or waiting for the display to exit setting mode automatically.

5.2 Programming Schedules

The MOLLIFII 32787-A timer allows for multiple ON/OFF programs. Typically, you will use a 'PROG' or 'PROGRAM' button to enter programming mode. Each press of this button cycles through program slots (e.g., 1 ON, 1 OFF, 2 ON, 2 OFF, etc.).

1. Press the 'PROG' button to select the desired program number (e.g., '1 ON').
2. Use the 'DAY' button to select the day(s) of the week for this program (e.g., Mon-Fri, Sat-Sun, or individual days).
3. Use the 'HOUR' and 'MINUTE' buttons to set the desired ON time.

4. Press 'PROG' again to move to the corresponding OFF time (e.g., '1 OFF').
5. Set the desired OFF time using 'DAY', 'HOUR', and 'MINUTE' buttons.
6. Repeat for additional programs.
7. Exit programming mode by pressing the 'CLOCK' button or waiting for the timer to return to normal display.

5.3 Manual Override

Most digital timers include a manual override button (often labeled 'MANUAL', 'ON/OFF', or a simple toggle). Pressing this button will temporarily switch the connected load ON or OFF, overriding the current program without erasing it. The timer will resume its programmed schedule at the next scheduled event.

6. MAINTENANCE

The MOLLIFII In-Wall Digital Timer requires minimal maintenance. Ensure the device is kept clean and free from dust. To clean, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning if accessing internal components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer display is blank.	No power to the timer; loose wiring.	Check circuit breaker. Verify all wire connections are secure.
Lights do not turn ON/OFF at programmed times.	Incorrect programming; manual override engaged; incorrect wiring.	Review programming steps. Check if manual override is active. Re-check wiring connections.
Timer loses settings after power outage.	No battery backup or battery depleted.	Some timers have internal batteries; if applicable, replace the battery. Otherwise, reset time and programs after power restoration.
Timer is unresponsive.	Internal fault; power issue.	Turn off power at the breaker for 5 minutes, then restore. If problem persists, contact customer support.

8. SPECIFICATIONS

- **Model:** 32787-A
- **Type:** In-Wall Digital Timer
- **Application:** 3-Way Wiring
- **Terminals:** Screw Terminals
- **ASIN:** B0F92KTHVB
- **Country of Origin:** China
- **Date First Available:** November 11, 2025
- *(Additional electrical specifications such as Voltage, Amperage, Wattage, and Frequency would typically be listed here. Refer to product packaging for full details.)*

9. WARRANTY INFORMATION

MOLLIFII products are manufactured to high-quality standards. This product is covered by a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the

warranty card included with your purchase or visit the official MOLLIFII website. Keep your purchase receipt as proof of purchase.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or need troubleshooting support, please contact MOLLIFII customer service. Our support team is available to help you.

- **Website:** www.mollifii.com *(Example URL, please replace with actual if available)*
- **Email:** support@mollifii.com *(Example Email, please replace with actual if available)*
- **Phone:** 1-800-XXX-XXXX *(Example Phone, please replace with actual if available)*