

[Manuals.plus](#) /

› [FENIFOX](#) /

› FENIFOX Rechargeable Wireless Keyboard and Mouse User Manual

FENIFOX Rechargeable Wireless Keyboard Mouse

FENIFOX Rechargeable Wireless Keyboard and Mouse User Manual

Model: Rechargeable Wireless Keyboard Mouse

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the product and retain them for future reference. Incorrect use may result in product damage or personal injury.

- Do not expose the product to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the product to strong impacts.
- Do not attempt to disassemble or modify the product. This will void the warranty.
- Keep the product away from water and other liquids.
- Use only the provided charging cable or a certified USB-C cable for charging.
- Dispose of batteries according to local regulations. Do not incinerate.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Wireless Keyboard
- Wireless Mouse
- 2.4GHz USB Receiver (stored in the mouse battery compartment)
- USB-C Charging Cable
- USB to Type-C Adapter
- Silicone Keyboard Cover
- User Manual (this document)

What will you get from FENIFOX

Free Keyboard Cover
USB & Type-C Receiver
USB-C Charge Cable
User Manual
Wireless Keyboard
Wireless Mouse



Image 2.1: The FENIFOX Wireless Keyboard and Mouse package contents, including the keyboard, mouse, USB & Type-C receiver, USB-C charge cable, user manual, and a silicone keyboard cover.

3. PRODUCT OVERVIEW

3.1 Keyboard Layout and Features

The keyboard features a full-size layout with a numeric keypad and dedicated multimedia keys. It supports dual operating system layouts for Windows and macOS.



Image 3.1: Detailed view of the FENIFOX Wireless Keyboard, highlighting independent media keys (F1-F12), clear indicator lights (Num Lock, Caps Lock, Power), the numeric keypad, and the dual Windows/macOS key legends.

- **Independent Media Keys:** 14 dedicated keys for quick access to media functions without needing the Fn key.
- **Dual System Layout:** Keys marked for both Windows (Win/Alt) and macOS (Opt/Cmd) for seamless switching.
- **Indicator Lights:** LEDs for Num Lock, Caps Lock, and Power/Charging status.
- **Adjustable Tilt:** Integrated feet allow for a 5° or 9° typing angle to reduce wrist fatigue.
- **Scissor-Switch Keys:** Provides a quiet, responsive, and comfortable typing experience.

3.2 Mouse Features

The wireless mouse is designed for comfort and quiet operation, featuring adjustable DPI settings and side buttons.



Image 3.2: Close-up of the FENIFOX Wireless Mouse, illustrating its silent click buttons, ergonomic contour, and the range of 5 adjustable DPI settings (800-2400).

- **Silent Click Buttons:** Left and right mouse buttons operate with minimal noise.
- **Adjustable DPI:** Cycle through 5 DPI settings (800-1200-1600-2000-2400) using the DPI button.
- **Ergonomic Design:** Contoured shape for comfortable grip during extended use.
- **Forward/Back Buttons:** Convenient side buttons for navigation.

4. SETUP INSTRUCTIONS

4.1 Charging the Devices

Both the keyboard and mouse are rechargeable via USB-C.

1. Locate the USB-C charging port on the keyboard (usually on the top edge) and the mouse (usually on the front).
2. Connect the provided USB-C charging cable to the device and to a USB power source (e.g., computer USB port, USB wall adapter).
3. The indicator light on the keyboard/mouse will show charging status (e.g., red while charging, off when fully charged).
4. Charging typically takes about 1.5 hours. A full charge provides approximately 60 days of use for the keyboard and 40 days for the mouse (usage dependent).

Long Lasting & Safety

Equipped with safe & energy-saving rechargeable batteries, designed with Type-C fast charging technology.

500 mAh



Charge time: 2 hours
Working time: 35 Days



Charge time: 2 hours
Working time: 90 Days



Image 4.1: The FENIFOX Wireless Mouse and Keyboard, illustrating their 500mAh battery capacity and charging via USB-C. The image indicates a charge time of 2 hours for both devices.

4.2 Connecting to Your Device

The keyboard and mouse connect wirelessly via a single 2.4GHz USB receiver.

1. Locate the 2.4GHz USB receiver. It is typically stored in a compartment on the underside of the mouse.
2. Insert the USB receiver into an available USB-A port on your computer.
3. If your computer only has USB-C ports, use the provided USB to Type-C adapter. Connect the USB receiver to the adapter, then plug the adapter into your computer's USB-C port.
4. Turn on the power switch for both the keyboard and the mouse. The power switch for the keyboard is usually on the top right edge, and for the mouse, it's on the underside.
5. Your computer should automatically detect and install the necessary drivers. No additional software is required.



USB Port



Type C Port



Widely compatible with USB or Type C enabled devices

Image 4.2: Demonstrates the versatility of the FENIFOX Wireless Keyboard and Mouse, showing connection options for both standard USB-A ports and USB-C ports using the included adapter, compatible with laptops and desktops.

5. OPERATING INSTRUCTIONS

5.1 Keyboard Usage

- **Typing:** Begin typing normally. The scissor-switch keys provide a quiet and comfortable experience.
- **Multimedia Keys:** Use the dedicated multimedia keys (F1-F12 row) for quick access to functions like volume control, playback, and web browser shortcuts. These keys operate independently without needing the 'Fn' key.
- **Operating System Layout:** The keyboard automatically adapts to Windows or macOS. The 'Win' key functions as the 'Command' key on macOS, and 'Alt' functions as 'Option'.
- **Indicator Lights:**
 - **Num Lock:** Indicates if the numeric keypad is active.
 - **Caps Lock:** Indicates if Caps Lock is active.

- **Power/Charging:** Indicates battery status or charging.



Image 5.1: A user operating the FENIFOX Wireless Keyboard and Mouse, demonstrating its use in a typical workspace and highlighting its compatibility with both Windows and macOS operating systems.

5.2 Mouse Usage

- **Movement:** Move the mouse on a flat surface. The optical sensor provides precise tracking.
- **Clicking:** The left and right buttons offer silent clicks.
- **Scroll Wheel:** Use the scroll wheel for vertical scrolling.
- **DPI Adjustment:** Press the DPI button (usually located behind the scroll wheel) to cycle through the 5 available DPI settings (800, 1200, 1600, 2000, 2400). Choose the sensitivity that best suits your needs.
- **Forward/Back Buttons:** Use the side buttons for quick navigation in web browsers or file explorers.

Smooth & Responsive Keys

 99% Noiseless Button

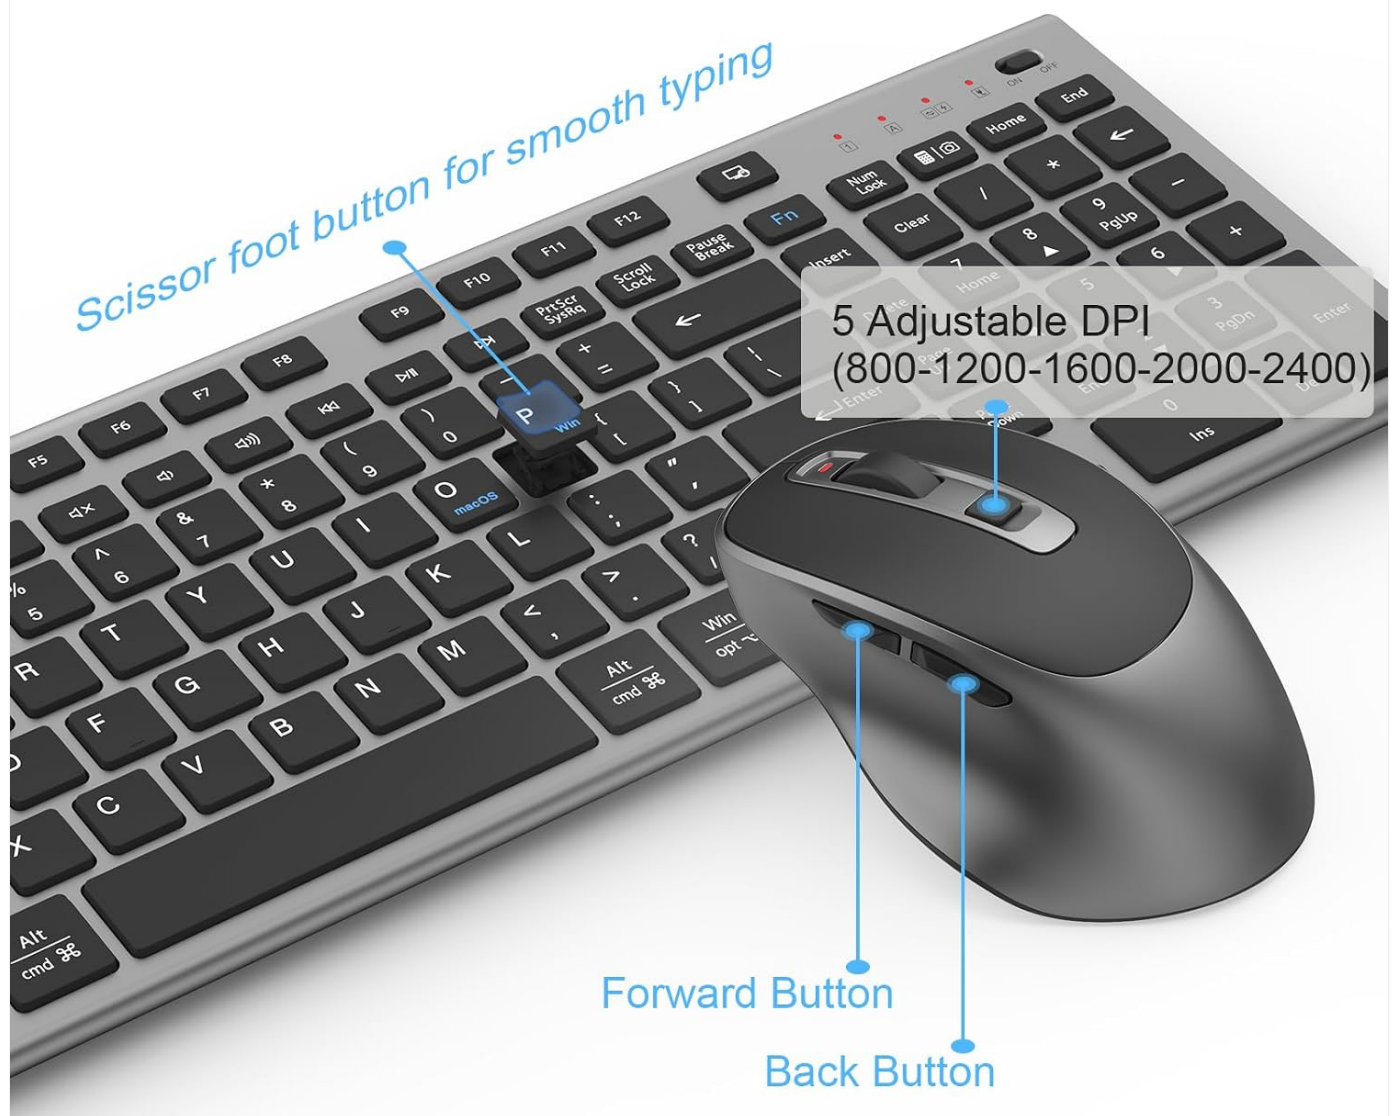


Image 5.2: A detailed view of the FENIFOX Wireless Mouse, pointing out the DPI adjustment button and the forward/back side buttons for enhanced control and customization.

5.3 Power Saving Features

- **Smart Sleep Mode:** The keyboard and mouse will enter a sleep mode after a period of inactivity to conserve battery. The Num/Caps indicator lights on the keyboard will turn off.
- **Wake-up:**
 - **Keyboard:** Press any key to wake it up.
 - **Mouse:** Move the mouse or click any button to wake it up.
- **Low Battery Reminder:** An intelligent low-battery indicator will alert you when charging is needed.

6. MAINTENANCE

- **Cleaning:**
 - Use a soft, dry cloth to clean the surfaces of the keyboard and mouse.
 - For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution.

- Do not use harsh chemicals or abrasive cleaners.
- The included silicone keyboard cover can be removed and washed with water to protect against dust and spills.
- **Storage:** When not in use for extended periods, turn off the power switches on both devices to conserve battery. Store in a cool, dry place.
- **Silicone Cover:** The soft silicone cover protects the keyboard from dust and water. Ensure it is properly placed over the keys for maximum protection.



Dustproof & Waterproof Keyboard Cover

Image 6.1: The FENIFOX Wireless Keyboard with its transparent silicone dustproof and waterproof cover partially lifted, demonstrating its protective function against dust and spills.

7. TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Keyboard/Mouse not responding	1. Ensure both devices are powered on. 2. Check battery levels and charge if necessary. 3. Ensure the 2.4GHz USB receiver is securely plugged into a working USB port. 4. Try plugging the receiver into a different USB port. 5. Restart your computer. 6. Ensure no strong interference sources (e.g., other wireless devices, metal objects) are near the receiver.
Lag or intermittent connection	1. Move the keyboard/mouse closer to the USB receiver. 2. Avoid placing the receiver near USB 3.0/3.1 ports, hubs, or large metal objects that can cause interference. 3. Ensure other wireless devices are not causing interference. 4. Check battery levels.
Mouse cursor erratic or not moving smoothly	1. Clean the optical sensor on the underside of the mouse. 2. Use the mouse on a clean, non-reflective surface or a mouse pad. 3. Adjust the DPI setting to a lower value if it's too sensitive.
Keyboard keys not working or repeating	1. Remove the silicone cover and check if any debris is under the keys. 2. Ensure the keyboard is fully charged. 3. Re-pair the keyboard by unplugging and re-plugging the USB receiver.

8. SPECIFICATIONS

Feature	Detail
Model Number	Rechargeable Wireless Keyboard Mouse
Connectivity	2.4GHz Wireless (via USB Receiver)
Keyboard Layout	Full-size, 121 keys, with Numeric Pad and Independent Multimedia Keys
Key Type	Scissor-switch (X-frame)
Mouse DPI Settings	800 / 1200 / 1600 / 2000 / 2400 (Adjustable)
Battery Type	Rechargeable Lithium Polymer (included)
Charging Port	USB-C
Charging Time	Approximately 1.5 hours
Battery Life (approx.)	Keyboard: 60 days; Mouse: 40 days (depending on usage)
Operating Range	Up to 10 meters (33 feet) in an interference-free environment
Compatibility	Windows, macOS, PC, Laptop, MacBook, iMac, Surface, Tablet, Smartphone (with appropriate adapters)

Feature	Detail
Product Dimensions (Keyboard)	15.55 x 5.71 x 0.83 inches
Item Weight	1.41 pounds (Keyboard and Mouse combined)

9. WARRANTY AND SUPPORT

FENIFOX provides customer support for its products. If you encounter any issues or have questions beyond the scope of this manual, please contact us directly.

- **Contacting Support:** If you have a problem with the product or it's outside the Amazon return period, please go to your order history on Amazon and select "Contact Seller".
- We are committed to resolving your issues efficiently and professionally.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F937FPGB>

More documents and user manuals: <https://manuals.plus/>