

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Mayer](#) /

› [Mayer 5.5L Digital Air Fryer MMAF551D User Manual](#)

## Mayer MMAF551D

# Mayer 5.5L Digital Air Fryer MMAF551D User Manual

Your comprehensive guide to operating and maintaining your Mayer Air Fryer.

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT OVERVIEW

---

The Mayer 5.5L Digital Air Fryer MMAF551D is designed for healthy cooking with minimal oil. It features a large capacity basket, a transparent viewing window, and a user-friendly digital control panel.



Figure 1: Front view of the Mayer 5.5L Digital Air Fryer MMAF551D, showcasing its sleek black design and transparent viewing window.



Figure 2: Close-up of the colorful digital control panel with touch sensor and knob, located on the top front of the air fryer.

## Key Features:

- 5.5L Large Capacity Basket with Transparent Viewing Window
- Colorful Control Panel with Touch Sensor & Knob
- Interior Cooking Light
- 10 Preset Menus
- Temperature Range: 80 – 200°C
- Timer: Up to 60 minutes
- Non-stick basket with tray
- Automatic Cut-off Switch and Overheating Protection
- Anti-slip feet

## BEFORE FIRST USE / SETUP

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or transport.

2. **Cleaning:** Before first use, clean the basket and tray with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Ensure all parts are completely dry before use.



Figure 3: The air fryer with its non-stick basket fully extended, demonstrating ease of removal for cleaning.

3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10cm of free space on the back, sides, and above the appliance.
4. **Power Connection:** Ensure the voltage of your power outlet matches the voltage specified on the appliance (220-240V~, 50/60Hz). Plug the power cord into a grounded wall outlet.

## OPERATING INSTRUCTIONS

---

### General Operation:

1. **Prepare Food:** Place ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket firmly back into the air fryer until it clicks into place.
3. **Power On:** Plug the appliance into a power outlet. The control panel will illuminate.
4. **Select Program/Settings:**

- Use the knob or touch controls to select one of the 10 preset menus, or manually set the desired temperature (80-200°C) and time (up to 60 minutes).
  - The interior cooking light can be activated to monitor food progress through the transparent window.
5. **Start Cooking:** Press the "Start/Stop" button to begin the cooking process.
  6. **Shake/Flip (Optional):** For some foods, it is recommended to shake or flip the ingredients halfway through the cooking time. Carefully pull out the basket, shake/flip, and reinsert. The air fryer will resume cooking automatically.
  7. **Completion:** The air fryer will beep when the cooking time is complete. Carefully pull out the basket and remove the cooked food.
  8. **Power Off:** Unplug the appliance from the wall outlet after use.

## Using Preset Menus:

The Mayer MMAF551D comes with 10 convenient preset menus for common dishes. Refer to the icons on the control panel for specific food types. Selecting a preset will automatically set the optimal temperature and time, which can then be adjusted manually if desired.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket and Tray:** The non-stick basket and tray can be washed with warm soapy water. For stubborn food residue, soak them in warm water for a few minutes before cleaning. Avoid using abrasive cleaning materials or metal utensils that could damage the non-stick coating.



Figure 4: The removable non-stick basket and tray, designed for easy cleaning after use.

3. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Clean Interior:** Use a soft, damp cloth to wipe the interior of the appliance. If necessary, a small amount of mild detergent can be used.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working. Basket is not fully inserted.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance. Push the basket firmly into the main unit until it clicks into place.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overcrowded. Temperature or time settings are incorrect. Food was not shaken/flipped.	Cook food in smaller batches. Adjust temperature and time according to recipe or food type. Shake or flip ingredients halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use. High fat content food.	Clean the basket and tray thoroughly after each use. Drain excess oil from food before air frying.
Appliance smells like plastic.	New appliance smell.	This is normal for first few uses. Ensure good ventilation. The smell will dissipate.

## SPECIFICATIONS

- **Model:** MMAF551D
- **Gross Capacity:** 6.2L
- **Net Capacity:** 5.5L
- **Voltage:** 220-240V~, 50/60Hz
- **Wattage:** 1800 Watts
- **Basket Size:** L250\*W235\*H133 mm
- **Product Dimension:** L305\*W285\*H320 mm
- **Net Weight:** 5.5 KGS
- **Gross Weight:** 6.2 KGS
- **Temperature Range:** 80 – 200°C
- **Timer Range:** Up to 60 minutes
- **Safety Mark:** 250241-11

## WARRANTY AND SUPPORT


This Mayer 5.5L Digital Air Fryer MMAF551D comes with a **1-Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.



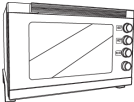 


For technical support, service, or warranty inquiries, please contact Mayer customer service. Refer to the official Mayer website or your purchase documentation for the most up-to-date contact information.



© 2025 Mayer. All rights reserved.  
Model: MMAF551D

### Related Documents - MMAF551D

	<a href="#">Mayer Digital Air Pot (3L) MMAP30D User Manual</a> User manual for the Mayer Digital Air Pot, model MMAP30D, part of the Paradise Collection. Provides instructions and specifications for the 3L air pot.
---	---

<p><b>mayer</b></p> <p>Digital Air Oven MMA01450</p>  <p>Please read this instruction manual thoroughly before operating and keep it for future reference</p>	<p><a href="#">Mayer MMA01450 Digital Air Oven User Manual</a></p> <p>Comprehensive user manual for the Mayer MMA01450 Digital Air Oven. Includes safety instructions, product specifications, parts identification, operating procedures, cooking tips, cleaning guidelines, and customer service information.</p>
	<p><a href="#">Mayer MMSO2050 Steam Oven User Manual</a></p> <p>Comprehensive user manual for the Mayer MMSO2050 Steam Oven, covering safety instructions, operating features, cleaning, maintenance, and troubleshooting for optimal use.</p>
<p><b>mayer</b></p> <p>Electric Oven The Professional Chef Series MM076</p>  <p>Please read this instruction manual thoroughly before operating and keep it for future reference</p>	<p><a href="#">Mayer MM076 Electric Oven - User Manual</a></p> <p>Instruction manual for the Mayer MM076 Electric Oven, The Professional Chef Series. Includes safety instructions, parts introduction, controls and operations, function guide, and cleaning and maintenance.</p>
<p><b>mayer</b></p> <p>Food Steamer MMFS28</p>  <p>Please read this instruction manual thoroughly before operating and keep it for future reference</p>	<p><a href="#">Mayer MMFS28 Food Steamer: Instruction Manual and User Guide</a></p> <p>Comprehensive guide for the Mayer MMFS28 Food Steamer, covering safety instructions, assembly, operation, cleaning, maintenance, and warranty information.</p>
<p><b>mayer</b></p> <p>Built-in Oven MMDO13C</p>  <p><b>IMPORTANT:</b> Please read this instruction manual thoroughly before operating and keep it for future reference</p>	<p><a href="#">Mayer MMDO13C Built-in Oven: User Manual and Safety Guide</a></p> <p>Comprehensive user manual for the Mayer MMDO13C built-in oven. Learn about safety, installation, operation, cooking modes, accessories, cleaning, troubleshooting, and energy-efficient use.</p>