

Mayer MMAF606D

Mayer 6L Double Heating Air Fryer with Mist MMAF606D User Manual

Model: MMAF606D

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for purchasing the Mayer 6L Double Heating Air Fryer with Mist. This appliance is designed to provide efficient and versatile cooking. Please read this manual thoroughly before use to ensure safe operation and optimal performance. Keep this manual for future reference.

Important Safety Instructions

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Supervise children closely when the appliance is in use.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Ensure the air fryer is placed on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Do not block the air inlet or outlet vents during operation.
- The surfaces may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.
- Always ensure the basket is properly inserted before operating.

2. PRODUCT OVERVIEW AND COMPONENTS

The Mayer MMAF606D Air Fryer features a 6.0L capacity, dual heating system, and a mist spray function for

enhanced cooking results. Familiarize yourself with the main components:



Figure 2.1: Front View of the Air Fryer

This image shows the front of the Mayer MMAF606D Air Fryer, highlighting the colorful control panel with touch sensor and knob, and the transparent viewing window on the basket.

Key Features:

- **6.0L Large Capacity:** Suitable for preparing meals for families.
- **Dual Heating System:** Top and bottom heating elements ensure even cooking.
- **Far-Infrared Heating Technology:** Promotes faster cooking and moisture retention.
- **Mist Spray Function:** Integrated 150ml water tank for achieving juicy and crispy results.
- **Non-stick Ceramic Coating:** Basket and tray feature a durable non-stick ceramic coating for easy cleaning.
- **Colorful Control Panel:** Intuitive touch sensor and knob interface for easy operation.
- **Transparent Viewing Window:** Allows monitoring of cooking progress without opening the basket.
- **Interior Cooking Light:** Illuminates the cooking chamber for clear visibility.
- **12 Preset Menus:** Convenient pre-programmed settings for various dishes.
- **Temperature Range:** Adjustable from 50°C to 200°C.
- **Timer:** Up to 60 minutes for cooking, with a 12-hour preset timer for delayed start.
- **Memory Function:** Recalls previous settings for convenience.

- **Safety Features:** Automatic cut-off switch and overheating protection.
- **Anti-slip Feet:** Ensures stability during operation.



Figure 2.2: Basket and Tray

This image displays the side of the air fryer with the cooking basket pulled out, showing the non-stick ceramic coated basket and tray.



Figure 2.3: Water Tank for Mist Function

This image shows the rear of the air fryer, highlighting the location of the 150ml water tank for the mist spray function.



Figure 2.4: Interior Heating Element and Basket Structure

This image provides a top-down view of the air fryer with the basket removed, revealing the interior heating elements and the design of the basket housing.

3. SETUP AND BEFORE FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Wipe the exterior of the appliance with a damp cloth. Wash the cooking basket and tray with warm soapy water, rinse thoroughly, and dry completely. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space around the appliance (sides and back) and above it for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **First Use Burn-off:** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C before first use to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure good ventilation during this process.

4. OPERATING INSTRUCTIONS

Control Panel Overview:

The air fryer features a colorful control panel with a touch sensor and a central knob for setting temperature and time, and selecting preset menus.

- **Power Button:** Turns the appliance on/off.

- **Preset Menu Icons:** Select from 12 pre-programmed cooking functions.
- **Temperature/Time Display:** Shows current temperature and remaining cooking time.
- **Knob:** Rotate to adjust temperature or time, press to confirm selection or switch between temperature/time settings.
- **Mist Button:** Activates the mist spray function.
- **Light Button:** Turns the interior cooking light on/off.

General Operation:

1. **Prepare Food:** Place ingredients in the cooking basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket firmly into the air fryer until it clicks into place.
3. **Power On:** Press the Power button to turn on the appliance.
4. **Select Cooking Method:**
 - **Using Preset Menus:** Rotate the knob to cycle through the 12 preset menu icons. Press the knob to select a preset. The default temperature and time for that preset will be displayed.
 - **Manual Setting:** If not using a preset, the display will show default temperature/time. Rotate the knob to adjust the temperature (50-200°C). Press the knob to switch to time adjustment, then rotate to set the cooking time (up to 60 minutes).
5. **Start Cooking:** Once temperature and time are set (either manually or via preset), press the Power button again to start cooking. The display will show "working".
6. **Mist Spray Function:** If desired, fill the 150ml water tank (located at the back) with clean water. During cooking, press the Mist button on the control panel to activate the mist spray. This helps achieve juicier results.
7. **Interior Light:** Press the Light button to illuminate the interior and check cooking progress through the viewing window.
8. **Shaking/Turning Food:** For some recipes, it may be necessary to shake or turn the food halfway through cooking. Pull out the basket, shake/turn, and reinsert. The air fryer will resume cooking automatically.
9. **End of Cooking:** The air fryer will beep when the cooking time is complete and automatically shut off. Carefully pull out the basket and remove the cooked food.
10. **Memory Function:** The appliance remembers your last manual temperature and time settings for convenience.
11. **12-Hour Preset Timer:** To delay the start of cooking, set your desired cooking program (temperature and time), then activate the preset timer function (refer to specific instructions in the full manual for detailed steps on setting the delay timer).

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Cleaning the Basket and Tray:**
 - Remove the cooking basket and tray.
 - Wash them in warm soapy water using a non-abrasive sponge. The non-stick ceramic coating is delicate; avoid metal utensils or harsh scrubbing pads.
 - For stubborn food residue, soak the basket and tray in warm soapy water for about 10-15 minutes before cleaning.
 - Rinse thoroughly and dry completely before reinserting.

3. Cleaning the Interior:

- Wipe the interior of the appliance with a damp cloth.
- For any food residue on the heating element, use a soft brush to gently remove it after the appliance has cooled.

4. **Cleaning the Exterior:** Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5. **Water Tank:** Empty and rinse the water tank after each use, especially if using the mist function. Ensure it is dry before storing.

6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Power button not pressed; Power outage.	Ensure the plug is securely in the outlet. Press the Power button. Check your household's power supply.
Food is not cooked evenly.	Basket is overfilled; Food not shaken/turned; Incorrect temperature/time.	Do not overfill the basket. Shake or turn food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Greasy food being cooked; Residue from previous use; Oil/fat dripping onto heating element.	This is normal for greasy foods. Clean the basket and interior thoroughly after each use. Ensure the tray is in place to catch drips.
Food is not crispy.	Not enough oil (for some foods); Basket overfilled; Temperature too low.	Lightly brush food with oil if desired. Do not overfill. Increase temperature or cooking time. Use the mist function for added crispiness.
Mist function not working.	Water tank empty; Tank not properly inserted.	Fill the water tank with clean water. Ensure the water tank is securely in its position.

7. TECHNICAL SPECIFICATIONS

Model: MMAF606D

Gross Capacity: 6.0 Liters

Net Capacity: 5.8 Liters

Voltage: 220-240V, 50-60Hz

Wattage: 1800 Watts

Temperature Range: 50 – 200°C

Timer: Up to 60 minutes

Preset Timer: Up to 12 hours

Water Tank Capacity: 150ml

Basket Size: L235 x W235 x H127 mm

Product Dimensions: L340 x W260 x H335 mm

Net Weight: 5.2 KGS

Gross Weight: 6 KGS

Safety Mark: 250245-11

Material: Ceramic (non-stick coating)

8. WARRANTY AND SUPPORT

This Mayer MMAF606D Air Fryer comes with a **1-Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

The warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, neglect, accidental damage, unauthorized repairs, or commercial use.

For technical support, service, or warranty inquiries, please contact Mayer customer service through their official channels. Contact information can typically be found on the Mayer website or your purchase documentation.