

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pukomc](#) /

› [Pukomc Cold Press Juicer MP-802N Instruction Manual](#)

Pukomc MP-802N

Pukomc Cold Press Juicer MP-802N Instruction Manual

Model: MP-802N | Brand: Pukomc

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pukomc Cold Press Juicer, Model MP-802N. Please read all instructions carefully before first use and retain this manual for future reference.

2. SAFETY INFORMATION

- Always ensure the juicer is properly assembled before operation.
- Do not insert fingers or other objects into the feed chute while the juicer is operating. Use the provided food pusher.
- Keep the lid open when assembling or removing the chute to prevent damage.
- Unplug the appliance from the power outlet before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the appliance if the power cord, plug, or other parts are damaged.
- Hand wash only for removable parts; the appliance is not dishwasher safe.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Pukomc Cold Press Juicer:

- Feed Chute (5.8-inch wide)
- Lid
- Auger (slow grinding mechanism)
- Filter (dual-layer filtration system)
- Juice Outlet with Anti-Drip Cap
- Pulp Outlet
- Motor Base with Control Knob (ON/OFF/REV)
- Juice Cup (1.8L capacity)
- Pulp Container
- Cleaning Brush



Figure 3.1: Overview of the Pukomc Cold Press Juicer and its accessories.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your juicer before use:

1. Step 1: Install the Pressing Cup

Place the pressing cup onto the motor base, ensuring it is securely seated.

2. Step 2: Tighten the Auger

Insert the auger into the center of the pressing cup and rotate clockwise until it is firmly in place.

3. Step 3: Insert the Filter

Place the filter assembly over the auger, aligning it correctly.

4. Step 4: Attach the Feed Chute and Lid

Attach the feed chute to the top of the filter. Ensure the lid is open when attaching the feed chute. Rotate the feed chute counterclockwise to lock it into position, aligning the locking markers. The machine will not operate if the safety lid is not securely closed.

3 STEP ASSEMBLE & FAST CLEAN UP



Step 1

Assemble the juicer cup



Step 2

Screw in the auger



Step 3

Install the feed chute



Figure 4.1: Visual guide for assembling the juicer components.



Figure 4.2: Important reminder to keep the lid open during assembly for proper locking.

Your browser does not support the video tag.

Video 4.1: Official Pukomc video demonstrating the assembly and operation of the cold press juicer, highlighting the 5.8-inch wide feed chute.

5. OPERATING INSTRUCTIONS

To operate your Pukomc Cold Press Juicer:

- 1. Prepare Ingredients:** Wash fruits and vegetables thoroughly. For best results and to maximize nutrient retention, cut larger items into chunks that fit comfortably into the 5.8-inch wide feed chute.
- 2. Start Juicing:** Ensure the juicer is properly assembled and the lid is securely locked. Place the juice cup under the juice outlet and the pulp container under the pulp outlet. Turn the control knob to "ON".
- 3. Feed Ingredients:** Slowly feed the prepared fruits and vegetables into the feed chute. Use the food pusher only if necessary to guide ingredients down. Avoid forcing ingredients.

4. **Reverse Function:** If ingredients become jammed or the juicer clogs, turn the control knob to "REV" for 3-5 seconds. This will reverse the auger's rotation to clear the blockage. Then, switch back to "ON" to resume juicing.
5. **Finish Juicing:** Once all ingredients are processed, turn the control knob to "OFF". Close the anti-drip cap on the juice outlet to prevent drips.



Figure 5.1: The wide 5.8-inch feed chute accommodates large pieces of produce, reducing prep time.

ONE BUTTON CONTROL

Enjoy the simple things



Figure 5.2: The simple one-button control for easy operation.



Figure 5.3: The reverse function helps prevent clogging by dislodging stuck pulp.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your juicer:

1. **Disassembly:** Unplug the juicer. Open the lid and rotate the feed chute clockwise to unlock it. Carefully remove the internal parts (filter, auger, pressing cup).

2. **Rinse:** Rinse all removable parts under running water immediately after use to prevent pulp from drying and sticking.
3. **Brush Cleaning:** Use the provided cleaning brush to remove any stubborn pulp residue from the filter and auger.
4. **Wash:** Wash the removable parts with warm, soapy water. Rinse thoroughly.
5. **Dry:** Allow all parts to air dry completely before reassembling or storing.
6. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water.

Note: The juicer parts are not dishwasher safe. Hand wash only.



Figure 6.1: The auger design minimizes clogging and is easy to clean with the included brush.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Juicer does not turn on.	Not properly assembled or plugged in.	Ensure all parts are correctly assembled and locked. Check power connection.
Juicer stops during operation or clogs.	Too much produce inserted at once, or hard ingredients.	Use the "REV" function for 3-5 seconds to clear blockage. Cut ingredients into smaller pieces.
Excessive pulp in juice.	Filter may be clogged or damaged.	Clean the filter thoroughly. If damaged, contact customer support.
Low juice yield.	Ingredients not fresh or processed too quickly.	Use fresh ingredients. Feed slowly and allow the juicer to extract fully.

8. SPECIFICATIONS

Feature	Detail
Brand	Pukomc
Model Name	MP-802N
Color	Grey
Product Dimensions	15.51"D x 7.64"W x 13.42"H
Capacity	1.8 Liters
Maximum Power	300 Watts
Power Source	Electric
Special Feature	Easy to Clean
Finish Type	Non Stick
Product Care Instructions	Hand Wash Only
Is Dishwasher Safe	No
Item Weight	7.78 pounds

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Pukomc customer service directly. Keep your purchase receipt as proof of purchase.

For additional support, visit the official Pukomc store: [Pukomc Store](#)



