

Dinosoo Wireless Controller

Dinosoo Wireless Controller Instruction Manual

For Xbox Series X|S, Xbox One & PC

INTRODUCTION

Thank you for purchasing the Dinosoo Wireless Controller. This manual provides detailed instructions for setting up, operating, and maintaining your controller. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

SETUP AND INITIAL CONNECTION

Important: Firmware Upgrade Requirement

Due to the initial factory version, the controller requires a firmware upgrade using a Windows PC before it can connect to Xbox consoles. Failure to perform this upgrade may result in the controller being blocked from connecting to Xbox.

Upgrade Process:

1. Download the upgrade program from the following URL: we.tl/t-UdkREIOJtS.
2. Connect your controller to a Windows PC using a USB cable.
3. Run the downloaded upgrade program and follow the on-screen instructions. The upgrade process typically takes 2-3 minutes.
4. After the upgrade, disconnect the controller from the PC.

If you encounter any issues during the upgrade process, please contact customer support.

Due to the low factory version, it needs to be upgraded in order to connect to the Xbox or it will be blocked from connecting by the Xbox!!!!

Luckily the upgrade process only takes 2-3 minutes.

Upgrade program download URL: we.tl/t-UdkRElOJtS
See video tutorial for details case-sensitive

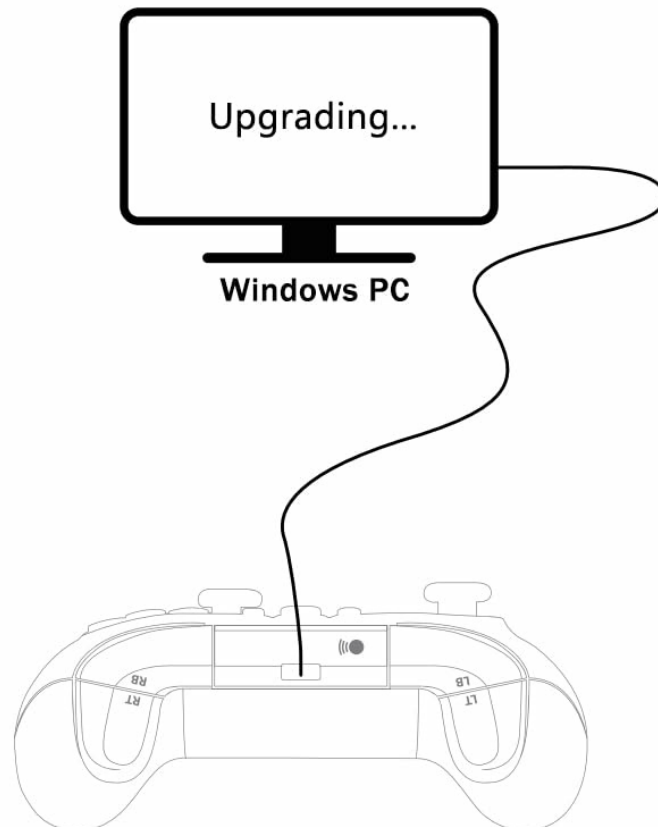


Image: Controller connected to a Windows PC for the firmware upgrade process.

Connecting to Devices

The Dinosoo Wireless Controller supports Bluetooth, Wi-Fi, and wired connectivity for various platforms.

Connecting to Xbox Consoles (Xbox One, Xbox Series S/X)

After completing the firmware upgrade:

1. Ensure your Xbox console is powered on.
2. Press and hold the Home button on the controller until the indicator light flashes, indicating pairing mode.
3. Press the pairing button on your Xbox console.
4. The controller's indicator light will become solid when successfully connected.

Connecting to PC (Windows 11/10/8/7)

The controller can connect to a PC via Bluetooth or a wired USB connection.

- **Bluetooth Connection:**

- a. Ensure your PC has Bluetooth enabled.
- b. Press and hold the Home button on the controller until the indicator light flashes.
- c. On your PC, go to Bluetooth settings and select to add a new device.
- d. Select the Dinosoo controller from the list of available devices to pair.

- **Wired Connection:** Simply connect the controller to your PC using a USB cable. The PC should automatically detect and install the necessary drivers.

Connecting to Android/iOS Devices

The controller supports Bluetooth connectivity for Android and iOS devices.

1. Enable Bluetooth on your mobile device.
2. Press and hold the Home button on the controller until the indicator light flashes.
3. On your device, search for Bluetooth devices and select the Dinosoo controller to pair.

Your browser does not support the video tag.

Video: A visual guide demonstrating the controller upgrade process on a PC. This video shows how to download and run the upgrade program to ensure compatibility with Xbox consoles.

OPERATING THE CONTROLLER

Controller Layout



Image: Front and rear view of the Dinosoo Wireless Controller with labels for all buttons and ports, including Left Joystick, Home, View, Menu, A/B/X/Y buttons, Right Joystick, Cross Key, Volume Control Keys, Headphone Jack, RB, LB, RT, LT, Type-C Charging Port, PL, SET, and PR.

Key Features and Functions

- **Dual Vibration:** The controller features embedded vibration motors in the side grips and pulse triggers to provide tactile feedback, enhancing immersion during gameplay.
- **Six-Axis Gyroscope:** Supports motion sensing functions for compatible games.
- **TURBO Function:** The "TURBO" button allows you to toggle between different combo settings for rapid input. This can be adjusted to enhance performance in competitive gaming.
- **Programmable Buttons (PL/PR):** The PL (left paddle) and PR (right paddle) buttons on the back of the controller are mappable. You can program these buttons to perform specific actions or sequences, making your operations more efficient. To clear mapping settings, press the "Set" button for 3 seconds, then press "PL" or "PR".
- **3.5mm Headphone Jack:** Plug in compatible headphones to communicate with other players online and enhance your audio experience.

- **High Sensitivity Joysticks:** Designed to minimize button delay and joystick drift, providing precise control.

Battery Information

- **Battery Capacity:** Built-in 1000 mAh battery.
- **Charging Time:** Approximately 2.5 hours.
- **Gaming Time:** Approximately 12-15 hours on a full charge.
- Charge the controller using the Type-C charging port.

32Ft
Wireless Distance

High-speed connection without any delays or interruptions, providing you with a better gaming experience.

Battery capacity
1000mah

Charging time
2.5H

Gaming time
12-15H

Image: Visual representation of the controller's 32ft wireless distance, 1000mAh battery capacity, 2.5-hour charging time, and 12-15 hours of gaming time.

MAINTENANCE

Proper care and maintenance will extend the life of your Dinosoo Wireless Controller.

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.

- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge the controller when the battery is low. If storing for an extended period, charge the battery to about 50% every few months.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

TROUBLESHOOTING

If you experience issues with your Dinosoo Wireless Controller, please refer to the following common solutions:

Problem	Possible Solution
Controller does not connect to Xbox.	• Ensure the firmware upgrade has been completed on a Windows PC as described in the Setup section. • Verify the controller is in pairing mode (flashing Home button light). • Press the pairing button on your Xbox console. • Some users have reported persistent compatibility issues with Xbox consoles even after upgrading. If problems persist, contact Dinosoo customer support.
Controller does not connect to PC/Android/iOS via Bluetooth.	• Ensure Bluetooth is enabled on your device. • Make sure the controller is in pairing mode. • Remove any previous pairings of the controller from your device's Bluetooth settings and try pairing again. • Try connecting via a wired USB connection to rule out Bluetooth issues.
Buttons or joysticks are unresponsive or drifting.	• Ensure the controller is fully charged. • Restart the controller and the connected device. • If using a wireless connection, ensure you are within the 30-foot range and there is no significant interference. • Perform a factory reset if available (refer to manufacturer's website for specific instructions if not in this manual).
Battery drains quickly or does not charge.	• Ensure the charging cable is securely connected to both the controller and a power source. • Try a different USB-C cable and power adapter. • Avoid extreme temperatures during charging and use.

If these solutions do not resolve your issue, please contact Dinosoo customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Dinosoo
Model	Wireless Controller
Compatible Devices	PC, Xbox, Xbox One, Xbox Series S, Xbox Series X, Android, iOS

Feature	Detail
Controller Type	Wireless
Connectivity Technology	Bluetooth, Wi-Fi, Wired (USB-C)
Wireless Range	Over 30 feet
Battery Capacity	1000 mAh
Charging Port	Type-C
Charging Time	Approx. 2.5 hours
Gaming Time	Approx. 12-15 hours
Additional Features	Dual Vibration, Six-Axis Gyroscope, TURBO Function, Programmable Buttons (PL/PR), 3.5mm Headphone Jack
Button Quantity	21

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For details regarding warranty coverage, technical support, or to report any issues not covered in the troubleshooting section, please contact Dinosoo customer support directly. You can typically find contact information on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question