

- Manuals.plus /
- › SANODESK /
- › SANODESK Electric Standing Desk (Model 156E) User Manual

SANODESK 156E

SANODESK Electric Standing Desk (Model 156E) User Manual

MODEL: 156E

1. Introduction and Overview

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your SANODESK Electric Standing Desk, Model 156E. This desk is designed to offer a versatile and ergonomic workspace for various activities, including office work, studying, and gaming, allowing seamless transitions between sitting and standing positions.



Figure 1: The SANODESK Electric Standing Desk in a white finish, with a user standing comfortably while operating a multi-monitor setup. The desk is shown at an elevated height, highlighting its standing functionality.

2. Important Safety Information

Always ensure the desk is properly anchored to the floor to prevent tipping. Do not place heavy objects on the desk that exceed the weight limit of 198 lbs to maintain stability and prevent injuries.

- Keep children and pets away from the desk during operation.
- Ensure no obstacles are in the path of the desk's movement (up or down).
- Do not sit or stand on the desk.
- Avoid spilling liquids on the control panel or electrical components.

3. Product Features

- **Spacious Desktop:** A generous 71" x 32" work surface provides ample space for multiple monitors, laptops, and other office equipment.
- **LED Memory Control Panel:** Features a 6-button controller with an LED display, allowing easy height

adjustment and storage of up to four preset heights for quick recall.

- **Electric Lifting System:** Smoothly adjusts height from 28.9 inches to 46.5 inches, powered by a quiet motor. The industrial-grade steel frame ensures stability and supports up to 154 lbs.
- **Sleek and Timeless Design:** The frame is coated with waterproof and rustproof paint, offering easy cleaning and a modern aesthetic suitable for various decor styles.
- **High-Quality Desktop Material:** Thick, waterproof, and eco-friendly wood desktop for durability and a premium feel.

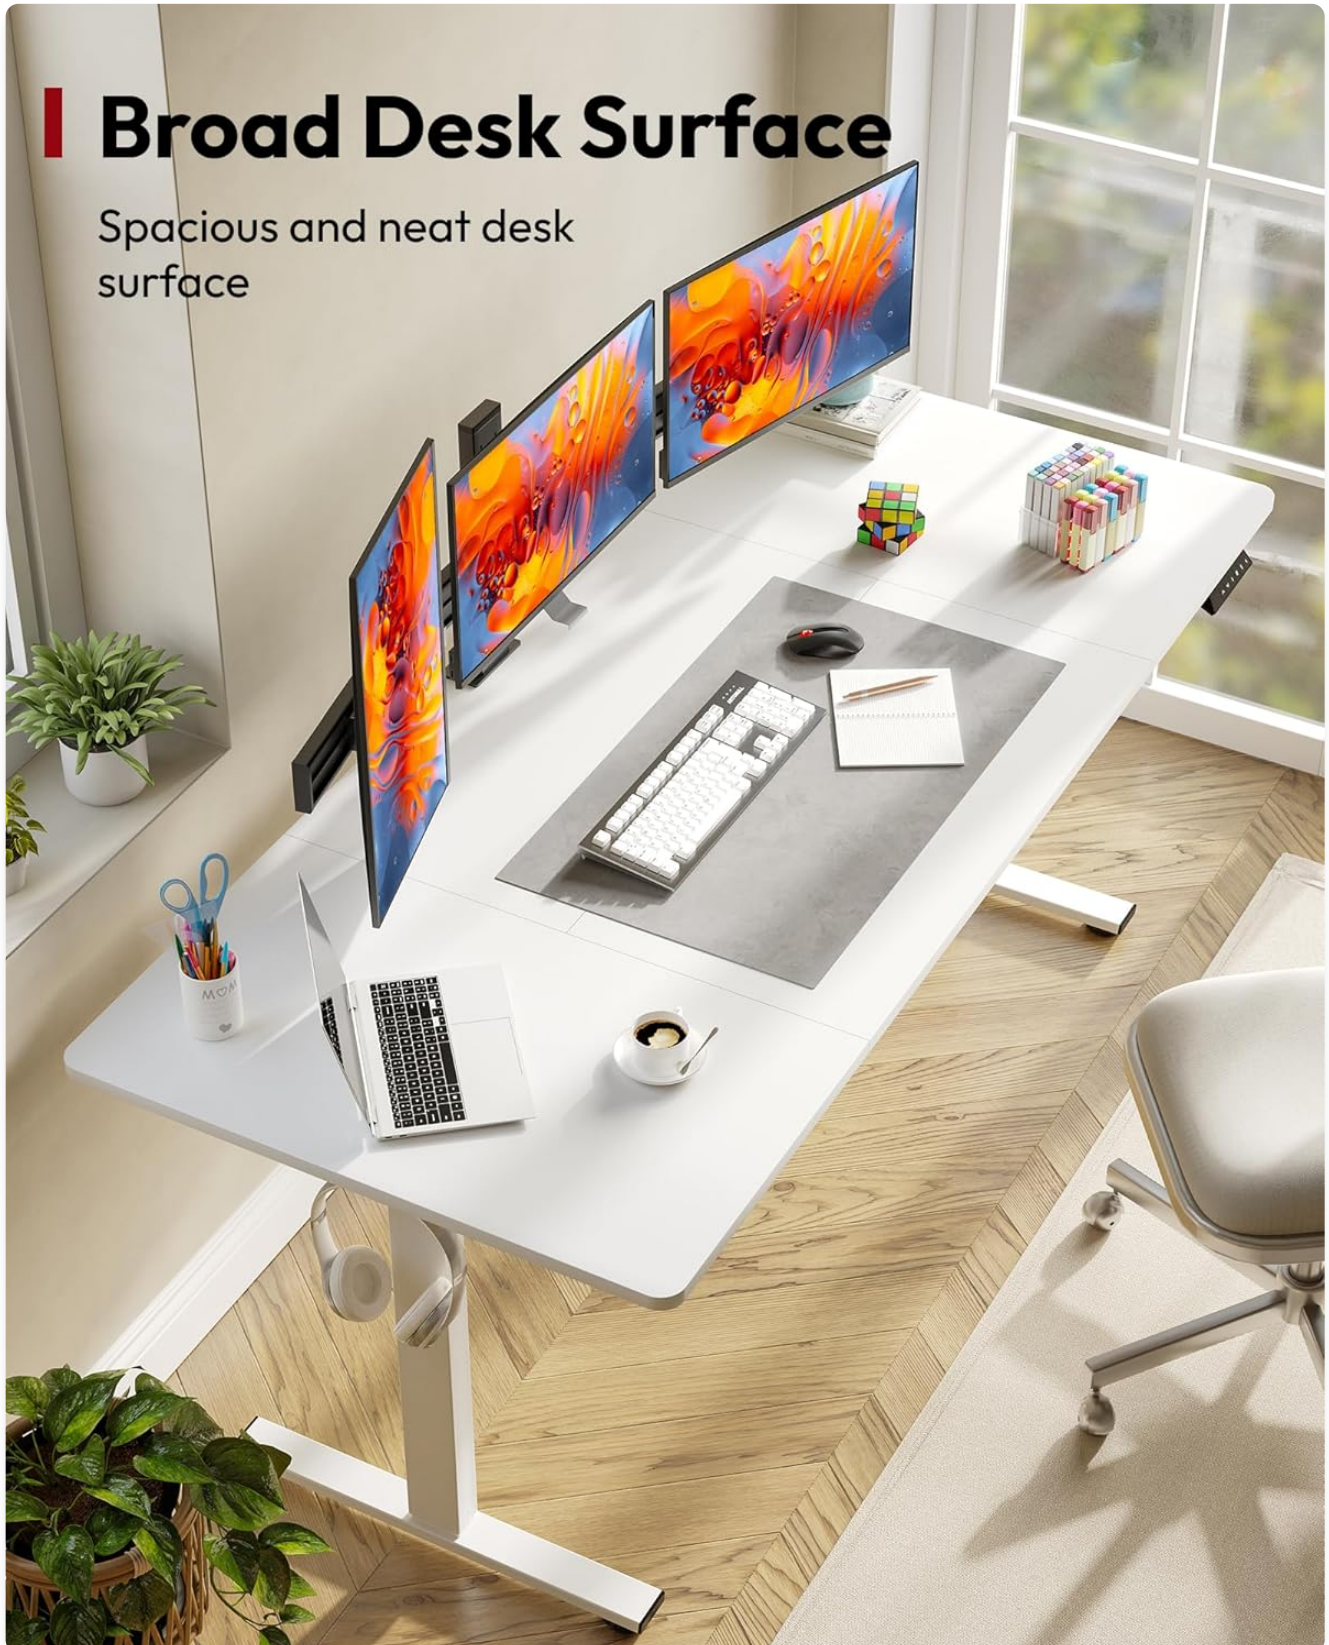


Figure 2: An overhead perspective highlighting the broad and uncluttered surface of the desk, capable of accommodating multiple

monitors, a keyboard, mouse, and other office essentials, promoting an organized workspace.



Figure 3: This close-up image emphasizes the desk's high-quality wood desktop, noting its thickness, waterproof properties, and eco-friendly composition, ensuring durability and a pleasant aesthetic.

Glide Smoothly, Whisper Quietly

Effortless & whisper-quiet
height adjustment



Figure 4: This visual representation highlights the desk's quiet operation, indicating a noise level below 50dB, ensuring minimal disturbance during height adjustments.

4. Setup and Assembly

The SANODESK Electric Standing Desk is designed for straightforward assembly. Please note that the desk will be delivered in two separate packages, which may arrive at different times. Ensure all components are present before beginning assembly.

1. Unpack all components and verify against the included parts list.

2. Follow the detailed instructions provided in the assembly manual included in your package.
3. Ensure all screws and fasteners are securely tightened for stability.
4. Connect the power cable to the control box and a suitable power outlet.

For optimal stability, ensure the desk is placed on a level surface.

5. Operating Instructions

Your SANODESK Electric Standing Desk features an intuitive 6-button LED memory control panel for easy height adjustment.

Product Details



Figure 5: A detailed view of the desk's control panel, featuring an LED display for height indication, up/down adjustment buttons, and four memory preset buttons. A convenient headphone hook is also visible on the desk's side.

Adjust the Height Arbitrarily

28.9"-46.5"/154LBS



Figure 6: This image showcases the adjustable height range of the SANODESK Electric Standing Desk, from a minimum of 28.9 inches to a maximum of 46.5 inches, accommodating various user preferences for sitting and standing.

5.1. Manual Height Adjustment

- Use the **Up** (▲) and **Down** (▼) arrow buttons to manually raise or lower the desk to your desired height. The LED display will show the current height.

5.2. Setting Memory Presets

The control panel allows you to save up to four preferred height settings.

1. Adjust the desk to your desired height using the Up/Down arrows.
2. Press the **Memory (M)** button. The LED display will flash 'S-'.
3. Immediately press one of the numbered preset buttons **(1, 2, 3, or 4)** to save the current height to that position. The display will show the number you selected, confirming the setting is saved.

5.3. Recalling Memory Presets

- Simply press the corresponding numbered preset button **(1, 2, 3, or 4)** to automatically move the desk to the saved height.

6. Maintenance

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cable Management:** Regularly check and organize cables to prevent tangles and damage, ensuring smooth operation of the desk.
- **Inspection:** Periodically inspect all screws and connections to ensure they remain tight.

7. Troubleshooting

Problem	Possible Cause	Solution
Desk does not move or stops mid-movement.	Power connection issue, overload, or motor error.	Check power cable connection. Reduce weight on the desk (max 154 lbs). Perform a reset by unplugging the desk for 10 seconds, then plugging it back in.
One leg adjusts, but the other does not.	Synchronization issue between motors.	Lower the desk to its lowest position and hold the down button for 5-10 seconds to re-synchronize the legs. If the issue persists, contact customer service.
LED display shows an error code.	Specific system error.	Refer to the detailed error code list in the full product manual (if available) or contact customer service with the specific code.

8. Specifications

Product Size

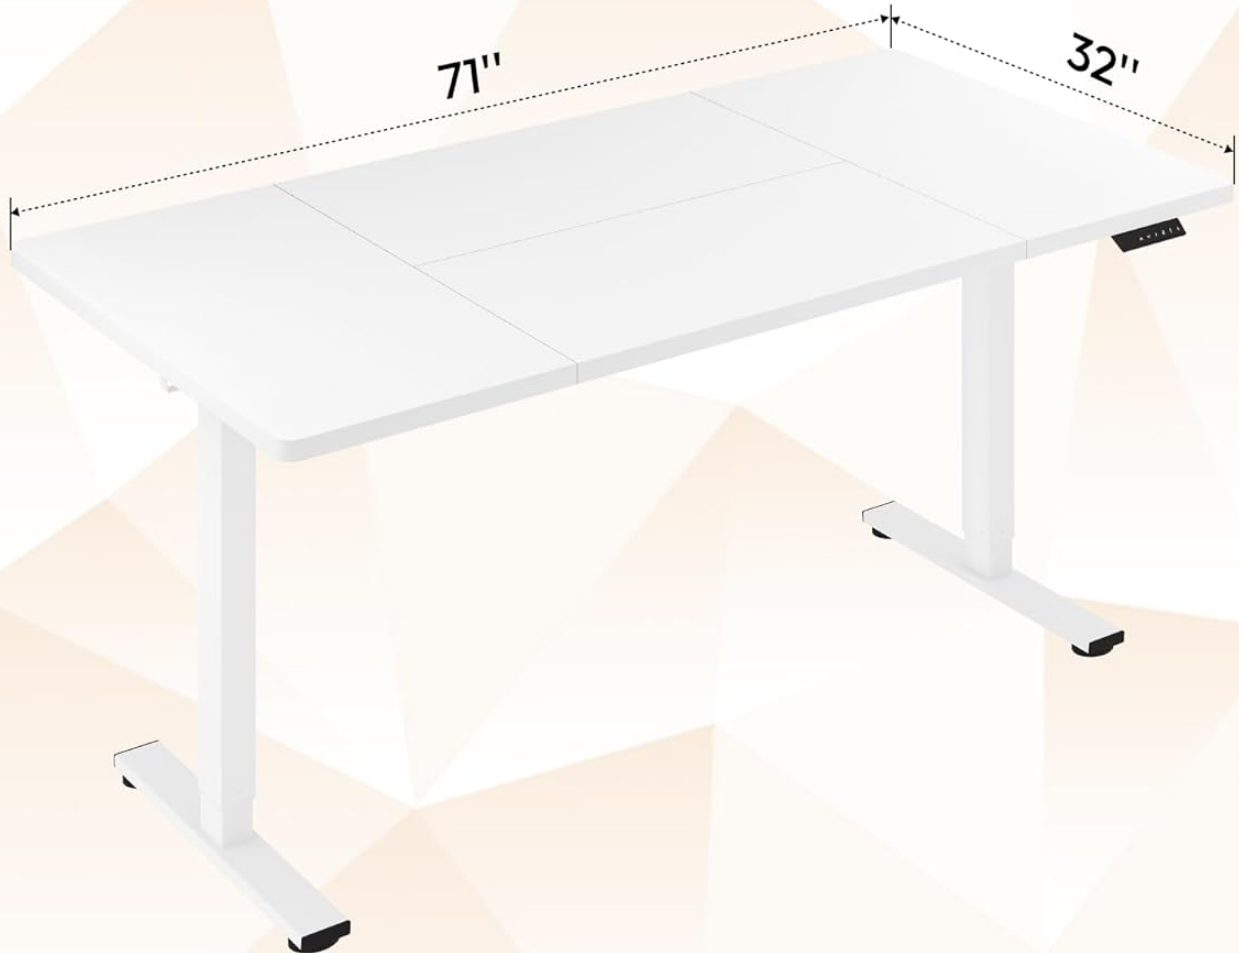


Figure 7: This diagram illustrates the overall dimensions of the SANODESK Electric Standing Desk, measuring 71 inches in length and 32 inches in width, providing a spacious work surface.

Feature	Detail
Brand	SANODESK
Model Name	156E
Product Dimensions	71"D x 32"W x 28.3"H

Feature	Detail
Color	White Frame+white Top
Style	Modern
Base Material	Alloy Steel
Top Material Type	Wood
Finish Type	Wood
Recommended Uses	Office, Working, Gaming
Minimum Height	28.3 Inches
Maximum Height	46.5 Inches
Maximum Weight Recommendation	154 Pounds
Required Assembly	Yes
Included Components	Desk, Keyboard Tray, Monitor Arm (Note: Components may vary by package)

9. Warranty and Support

Your satisfaction is a priority for SANODESK. The product comes with a Limited Warranty. For specific details regarding the warranty period and coverage, please refer to the documentation included with your purchase. If you encounter any problems when you receive the product or during its use, we provide a 30-day return or exchange service. Please contact customer service through your order page for assistance. We are committed to offering support and resolving any issues you may experience.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9427TJC>

More documents and user manuals: <https://manuals.plus/>